

Supplement to Yanmar Kit Installation Instructions

SAFETY

This product is designed and intended only for use with a YANMAR engine. All safety and warning information contained in the Yanmar Operation Manual and Service Manual is adopted and incorporated to apply to the components, accessories, and parts that are utilized with Yanmar engines. Follow all instructions and precautions before installing this product, before operating, during operation, and during periodic maintenance procedures for your safety, the safety of others, and to protect the performance of your engine.




129A88-91310

1

YANMAR CO., LTD. YANMAR AMERICA CORP.

| Item | Part No. | Description | Quantity | Remarks |
|------|----------|-------------|----------|---------|
| | | | | |

Panel ASSY

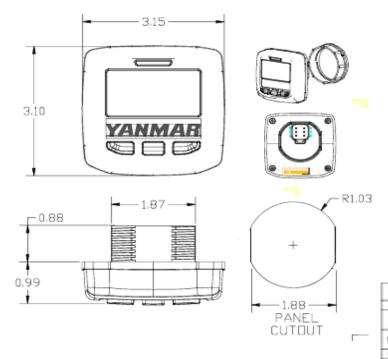

TIER 4F MODELS

3TNV88C-DSA 3TNV88C-DYEM 4TNV88C-DYEM 4TNV88C-DYEM 4TNV86CT-GGE 4TNV98C-GGE 4TNV98C-NSA 4TNV98C-NYEM 4TNV98CT-GGE

| DISPLAY PINDUT | | | | |
|----------------|-----|-----------------|--|--|
| NAME | GNB | DESC | | |
| GND | 1 | DC RETURN | | |
| POWER | 2 | DC SUPPLY | | |
| CAN_H | 3 | DATA | | |
| CAN_L | - 4 | DATA | | |
| nc | 5 | USEB | | |
| SPEED | 6 | ANALDG INPUT | | |

Remarks: