

YANMAR CO., LTD. YANMAR AMERICA CORP.

ItemLev.OPart No.DescriptionQuantityRemarks1 -119749-91600Water Level Sensor1



MODELS
ALL TNV MODELS

Remarks:



Installation Instructions

Note: The water level sensor is designed for use with the engine-side wire harness kits offered by Yanmar America. The following harnesses include the connection for the sensor: KP1, KP2, KP3, KPH1, KPH2 and KPH4.

- 1. Remove the plug from the top-right portion of the radiator.
- 2. Install the Water Level Sensor into the threaded opening using teflon tape or other sealing compound.
- 3. Connect the Water Level Sensor to the appropriate connection on the engine-side wiring harness and secure any excess length of wiring. A wiring diagram is provide with all engine-side wire harness kits that locates the Water Level Sensor connection point.
- 4. After connecting all terminals to appropriate locations, check the following:
 - a) Make sure the wire harness does not touch the exhaust manifold or muffler.
 - b) Make sure the wire harness does not contact any sharp edges.
 - c) Mke sure to secure the wire harness with wire ties.
 - d) Cover all unused harness terminals after the assembly has been completed.