



OPERATION MANUAL

MARINE ENGINE

4LV

4LV150 4LV150Z

4LV170 4LV170Z

4LV195 4LV195Z

4LV230 4LV230Z

4LV250 4LV250Z

 English

YANMAR

California
Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects, and other reproductive harm.

Disclaimers:

All information, illustrations and specifications in this manual are based on the latest information available at the time of publishing. The illustrations used in this manual are intended as representative reference views only. Moreover, because of our continuous product improvement policy, we may modify information, illustrations and/or specifications to explain and/or exemplify a product, service or maintenance improvement. We reserve the right to make any change at any time without notice. Yanmar and **YANMAR** are registered trademarks of YANMAR MARINE INTERNATIONAL B.V. in Japan, the United States and/or other countries.

All Rights Reserved:

No part of this publication may be reproduced or used in any form by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of YANMAR MARINE INTERNATIONAL B.V.

In case of exporting this product and providing the related technical material to non-residents in Japan or residents overseas, it is required to comply with the export and trade control laws and regulations of Japan and other relevant countries. Please be sure to follow the necessary procedure.

OPERATION MANUAL	MODEL	4LV150, 4LV170, 4LV195, 4LV230, 4LV250, 4LV150Z, 4LV170Z, 4LV195Z, 4LV230Z, 4LV250Z
	CODE	0A4LV-EN001A

TABLE OF CONTENTS

	Page
INTRODUCTION	1
RECORD OF OWNERSHIP	2
SAFETY	3
SAFETY PRECAUTIONS	4
General Information	4
Before You Operate	4
During Operation and Maintenance	4
LOCATION OF SAFETY DECALS	7
PRODUCT OVERVIEW	9
YANMAR 4LV COMMON RAIL SERIES FEATURES AND APPLICATIONS	9
New Engine Break-In	10
COMPONENT IDENTIFICATION	11
Right Side (Viewed from Flywheel)	11
Left Side (Viewed from Flywheel)	11
NAMEPLATES	12
FUNCTION OF MAJOR COMPONENTS	13
ELECTRONIC CONTROL SYSTEM	14
MAIN ELECTRONIC CONTROL COMPONENTS AND FEATURES	15
CONTROL EQUIPMENT	16
Instrument Panel	16
Accessory power output	28
Single-Lever Remote Control Handle	29
VESSEL CONTROL SYSTEM (VC10)	30
Display	31
VESSEL CONTROL SYSTEM (VC20)	39
Display	41
VESSEL CONTROL SYSTEM (VC30)	50
Display	52

TABLE OF CONTENTS

BEFORE YOU OPERATE	63
INTRODUCTION	63
SAFETY PRECAUTIONS	63
DIESEL FUEL	64
Diesel Fuel Specifications	64
Filling the Fuel Tank	67
Bleeding the Fuel System	68
ENGINE OIL	69
Engine Oil Specifications	69
Engine Oil Viscosity	70
Checking the Engine Oil	70
Adding Engine Oil	71
MARINE GEAR OIL	71
Marine Gear Oil Specifications	71
Checking Marine Gear Oil	72
Adding Marine Gear Oil	72
STERN DRIVE OIL	73
Stern Drive Oil Specifications	73
Checking and Adding Stern Drive Oil	73
Checking and Adding Power Steering Oil (4LVZ Models)	73
ENGINE COOLANT	74
Engine Coolant Specifications	74
Coolant (Closed Cooling System)	74
Checking and Adding Coolant	75
ENGINE OPERATION	79
INTRODUCTION	79
SAFETY PRECAUTIONS	79
OPERATION	
(B25, C35-TYPE INSTRUMENT PANEL)	81
Starting the Engine	81
If the Engine Fails to Start	82
Starting at Low Temperatures	82
After the Engine has Started	83
REMOTE CONTROL HANDLE OPERATION	83
Acceleration and Deceleration	83
Shifting the Engine	83
Switching to Trolling (KMH50A, KMH50V)	84
CAUTIONS DURING OPERATION	85

SHUTTING DOWN THE ENGINE	87
Normal Shutdown	87
Engine Auxiliary Stop Switch	88
Auxiliary Stop Switch	
(Option: It is recommended that this switch is installed in an easily accessible location.)	89
CHECKING THE ENGINE AFTER OPERATION ...	89
OPERATION	
(VC10: VESSEL CONTROL SYSTEM)	90
Starting the Engine	90
Station Protect	92
Sys on by ID, Start by ID	92
Owner ID Change	92
If the Engine Fails to Start	93
Starting at Low Temperatures	93
After the Engine has Started	94
CONTROL HEAD OPERATION	94
Control Head for Marine Gear	94
Control Head for Stern Drive	95
Station Selection (Only for Multiple Stations) ...	96
Indicator Dimming Feature	97
Synchronization	98
Tilt Elevation (Stern Drive Specification)	98
TROLLING OPTION	
(FOR KMH MARINE GEAR SPECIFICATION)	99
Trolling Overview and Function	99
Trolling Adjustment for C-Type Trolling	100
Trolling Adjustment for E-Type Trolling	100
WARM UP MODE (SHIFT DISCONNECT)	101
THROTTLE AND SHIFT CONTROL.....	101
Neutral	101
Forward	101
Reverse	101
Forward (Reverse) to Reverse (Forward).....	102
ENGINE SPEED LIMIT MODE	102
CAUTIONS DURING OPERATION	103
SHUT-DOWN THE ENGINE (STOPPING).....	104
Normal Stopping.....	104
Emergency Stop	106
CONTROL THE BACKUP PANEL.....	107
CONTROL THE BACKUP PANEL (NEW TYPE)...	108
CHECKING THE ENGINE AFTER OPERATION ..	109

TABLE OF CONTENTS

OPERATION	
(VC20: VESSEL CONTROL SYSTEM).....	109
Starting the Engine.....	109
Station Protect.....	111
Sys on by ID, Start by ID.....	111
Owner ID Change	111
YANMAR E-key.....	112
If the Engine Fails to Start.....	116
Starting at Low Temperatures	116
After the Engine has Started	117
CONTROL HEAD OPERATION.....	117
Control Head for Marine Gear	117
Control Head for Stern Drive	118
Station Selection (Only for Multiple Stations)...	119
Indicator Dimming Feature.....	120
Synchronization.....	121
Tilt Elevation (Stern Drive Specification).....	121
TROLLING OPTION	
(FOR KMH MARINE GEAR SPECIFICATION).....	122
Trolling Overview and Function.....	122
Trolling Adjustment for C-Type Trolling.....	123
Trolling Adjustment for E-Type Trolling.....	123
WARM UP MODE (SHIFT DISCONNECT).....	124
THROTTLE AND SHIFT CONTROL	124
Neutral.....	124
Forward	124
Reverse.....	124
Forward (Reverse) to Reverse (Forward)	125
ENGINE SPEED LIMIT MODE.....	125
CAUTIONS DURING OPERATION.....	126
SHUT-DOWN THE ENGINE (STOPPING)	127
Normal Stopping	127
Emergency Stop.....	129
CONTROL THE BACKUP PANEL	130
CONTROL THE BACKUP PANEL (NEW TYPE) ...	131
CHECKING THE ENGINE AFTER OPERATION...	132

OPERATION	
(VC30: VESSEL CONTROL SYSTEM)	132
Starting the Engine	132
Station Protect	134
YANMAR E-key	134
If the Engine Fails to Start	138
Starting at Low Temperatures	138
After the Engine has Started	139
CONTROL HEAD OPERATION	139
Control Head for Marine Gear	139
Control Head for Stern Drive	140
Station Selection (Only for Multiple Stations) ..	141
Indicator Dimming Feature	142
Synchronization	143
Tilt Elevation (Stern Drive Specification)	143
TROLLING OPTION	
(FOR KMH MARINE GEAR SPECIFICATION)	144
Trolling Overview and Function	144
Trolling Adjustment for C-Type Trolling	145
Trolling Adjustment for E-Type Trolling	145
WARM UP MODE (SHIFT DISCONNECT)	146
THROTTLE AND SHIFT CONTROL.....	146
Neutral	146
Forward	146
Reverse	146
Forward (Reverse) to Reverse (Forward).....	147
ENGINE SPEED LIMIT MODE	147
CAUTIONS DURING OPERATION	148
SHUT-DOWN THE ENGINE (STOPPING).....	149
Normal Stopping.....	149
Emergency Stop	151
CONTROL THE BACKUP PANEL (NEW TYPE)...	152
CHECKING THE ENGINE AFTER OPERATION ..	153

TABLE OF CONTENTS

PERIODIC MAINTENANCE	155
INTRODUCTION	155
SAFETY PRECAUTIONS.....	155
PRECAUTIONS.....	157
The Importance of Periodic Maintenance	157
Performing Periodic Maintenance	157
The Importance of Daily Checks	157
Keep a Log of Engine Hours and Daily Checks.....	157
YANMAR Replacement Parts	157
Tools Required.....	157
Consult Your Authorized YANMAR Marine Dealer or Distributor for Help	157
Tightening Fasteners	158
EPA MAINTENANCE REQUIREMENTS	159
EPA Requirements for USA and Other Applicable Countries	159
Environmental Condition for operation and maintenance.....	159
Inspection and Maintenance	160
Installation of Exhaust Sampling Port	160
PERIODIC MAINTENANCE SCHEDULE	161
PERIODIC MAINTENANCE PROCEDURES.....	163
Daily Checks	163
After Initial 50 Hours of Operation.....	164
Every 50 Hours of Operation.....	169
Every 250 Hours of Operation.....	171
500 Hours of Operation.....	180
750 Hours of Operation.....	180
2000 Hours of Operation.....	181
TROUBLESHOOTING.....	183
SAFETY PRECAUTIONS.....	183
TROUBLESHOOTING AFTER STARTING	183
TROUBLESHOOTING INFORMATION	184
TROUBLESHOOTING CHART	185
FAILSAFE DIAGNOSIS FUNCTIONAL SPECIFICATION CHART.....	190
VESSEL CONTROL SYSTEM DIAGNOSIS TROUBLE CODE LIST.....	195

LONG-TERM STORAGE 199

 PREPARE ENGINE FOR LONG-TERM
 STORAGE..... 199

 DRAIN SEAWATER COOLING SYSTEM 200

 RETURNING THE ENGINE TO SERVICE 201

SPECIFICATIONS 203

 PRINCIPAL ENGINE SPECIFICATIONS 203

 4LV(Z) Engines..... 204

 4LV Marine Gear 205

 4LVZ Stern Drive 206

SYSTEM DIAGRAMS 207

 PIPING DIAGRAMS 207

EPA WARRANTY USA ONLY 217

 YANMAR POWER TECHNOLOGY CO., LTD.
 LIMITED EMISSION CONTROL SYSTEM
 WARRANTY - USA ONLY 217

 Your Warranty Rights and Obligations: 218

 Warranty Period:..... 218

 Warranty Coverage: 219

 Exclusions: 219

 Owner's Responsibility: 219

 Customer Assistance:..... 219

 Maintenance Log 220

This Page Intentionally Left Blank

INTRODUCTION

Welcome to the world of YANMAR Marine! YANMAR Marine offers engines, drive systems and accessories for all types of boats, from runabouts to sailboats, and from cruisers to mega yachts. In marine leisure boating, the worldwide reputation of YANMAR Marine is second to none. We design our engines to respect nature. This means quieter engines, with minimal vibrations, cleaner than ever. All of our engines meet applicable regulations, including emissions, at the time of manufacture.

To help you enjoy your YANMAR 4LV series engine for many years to come, please follow these recommendations:

- Read and understand this *Operation Manual* before you operate the machine to ensure that you follow safe operating practices and maintenance procedures.
- Keep this *Operation Manual* in a convenient place for easy access.
- If this *Operation Manual* is lost or damaged, order a new one from your authorized YANMAR Marine dealer or distributor.
- Make sure this manual is transferred to subsequent owners. This manual should be considered a permanent part of the engine and remain with it.
- Constant efforts are made to improve the quality and performance of YANMAR products, so some details included in this *Operation Manual* may differ slightly from your engine. If you have any questions about these differences, please consult your authorized YANMAR Marine dealer or distributor.
- The specifications and components (instrument panel, fuel tank, etc.) described in this manual may differ from ones installed on your vessel. Please refer to the manual provided by the manufacturer of these components.
- Refer to the YANMAR Limited Warranty Handbook for a complete warranty description.

INTRODUCTION

RECORD OF OWNERSHIP

Take a few moments to record the information you need when you contact YANMAR for service, parts or documentation.

Engine Model: _____

Engine Serial No.: _____

Date Purchased: _____

Dealer: _____

Dealer Phone: _____

To Register Your YANMAR Engine

1. Visit <https://www.yanmar.com/marine/service/register-your-engine/> or our website: <https://www.yanmar.com/marine>
2. Login to the YANMAR Marine Support Portal and register your engine.

To Get Multi Language Operation Manual

1. Scan the following two dimensional code.



2. Select your engine series.
3. Select your engine.
4. Select the language you want, and get the Operation Manual.

SAFETY

YANMAR considers safety of great importance and recommends that anyone that comes into close contact with its products, such as those who install, operate, maintain or service YANMAR products, exercise care, common sense and comply with the safety information in this manual and on the machine's safety decals. Keep the labels from becoming dirty or torn and replace them if they are lost or damaged. Also, if you need to replace a part that has a label attached to it, make sure you order the new part and label at the same time.



This safety alert symbol appears with most safety statements. It means attention, become alert, your safety is involved! Please read and abide by the message that follows the safety alert symbol.

DANGER

Indicates a hazardous situation which, if not avoided, *will* result in death or serious injury.

WARNING

Indicates a hazardous situation which, if not avoided, *could* result in death or serious injury.

CAUTION

Indicates a hazardous situation which, if not avoided, *could* result in minor or moderate injury.

NOTICE

Indicates a situation which can cause damage to the machine, personal property and/or the environment, or cause the equipment to operate improperly.

SAFETY PRECAUTIONS

General Information

There is no substitute for common sense and careful practices. Improper practices or carelessness can cause burns, cuts, mutilation, asphyxiation, other bodily injury or death. This information contains general safety precautions and guidelines that must be followed to reduce risk to personal safety. Special safety precautions are listed in specific procedures. Read and understand all of the safety precautions before operation or performing repairs or maintenance.

Before You Operate

The safety messages that follow have **DANGER** level hazards.

DANGER



Never permit anyone to install or operate the engine without proper training.

- **Read and understand this *Operation Manual* before you operate or service the engine to ensure that you follow safe operating practices and maintenance procedures.**
- **Safety signs and labels are additional reminders for safe operating and maintenance techniques.**
- **Consult authorized YANMAR Marine dealer or distributor for additional training.**

During Operation and Maintenance

The safety messages that follow have **WARNING** level hazards.

WARNING

Explosion Hazard!



While the engine is running or the battery is charging, hydrogen gas is being produced and can be easily ignited. Keep the area around the battery well-ventilated and keep sparks, open flames and any other form of ignition out of the area.

Fire and Explosion Hazard!

Diesel fuel is flammable and explosive under certain conditions.

Never use a shop rag to catch the fuel.

Wipe up all spills immediately.

Never refuel with the engine running.

Fire Hazard!



Undersized wiring systems can cause an electrical fire. Never use improper capacity of fuses.

Store any containers containing fuel or other flammable products in a well-ventilated area, away from any combustibles or source of ignition.

Store any equipment in a designated area away from moving parts.

Never use the engine compartment for storage.

⚠ WARNING**Sever Hazard!**

Rotating parts can cause severe injury or death. Never wear jewelry, unbuttoned cuffs, ties or loose-fitting clothing and

always tie long hair back when working near moving/rotating parts such as the flywheel or PTO shaft. Keep hands, feet and tools away from all moving parts.

Alcohol and Drug Hazard!

Never operate the engine while under the influence of alcohol or drugs, or when feeling ill.

Exposure Hazard!

Always wear personal protective equipment including appropriate clothing, gloves, work shoes, and eye and hearing

protection as required by the task at hand.

Sudden Movement Hazard!

Never operate the engine while wearing a headset to listen to music or radio because it will be difficult to hear the warning signals.

Burn Hazard!

Some of the engine surfaces become very hot during operation and shortly after shutdown.

Keep hands and other body parts away from hot engine surfaces.

⚠ WARNING**Exhaust Hazard!**

Never block windows, vents or other means of ventilation if the engine is operating in an enclosed area. All internal

combustion engines create carbon monoxide gas during operation and special precautions are required to avoid carbon monoxide poisoning.

The safety messages that follow have CAUTION level hazards.

⚠ CAUTION**Poor Lighting Hazard!**

Ensure that the work area is adequately illuminated. Always install wire cages on portable safety lamps.

Tool Hazard!

Always use tools appropriate for the task at hand and use the correct size tool for loosening or tightening machine parts.

Flying Object Hazard!

Always wear eye protection when servicing the engine or when using compressed air or high-pressure water. Dust, flying debris, compressed air, pressurized water or steam may injure your eyes.

Coolant Hazard!

Wear eye protection and rubber gloves when you handle engine coolant. If contact with the eyes or skin should occur, flush eyes and wash immediately with clean water.

SAFETY

The safety messages that follow have NOTICE level hazards.

NOTICE

It is important to perform daily checks as listed in the *Operation Manual*.

Periodic maintenance prevents unexpected downtime, reduces the number of accidents due to poor engine performance and helps extend the life of the engine.

Consult authorized YANMAR Marine dealer or distributor if you need to operate the engine at high altitudes. At high altitudes the engine will lose power, run rough and produce exhaust gases that exceed the design specifications.



Always be environmentally responsible.

Follow the guidelines of the EPA or other governmental agencies for the proper disposal of hazardous materials such as engine oil, diesel fuel and engine coolant. Consult the local authorities or reclamation facility.

Never dispose of hazardous materials by dumping them into a sewer, on the ground, or into ground water or waterways.

If a YANMAR Marine Engine is installed at an angle that exceeds the specifications stated in the YANMAR Marine *Installation Manuals*, engine oil may enter the combustion chamber causing excessive engine speed, white exhaust smoke and serious engine damage. This applies to engines that run continuously or those that run for short periods of time.

NOTICE

If you have an installation with two or three engines and only one engine is operating, the water pickup (thru-hull) of the non-running engine(s) should be closed. This will prevent water from being forced past the seawater pump and eventually finding its way into the engine. The result of water entering the engine could cause seizure or other serious problems.

If you have an installation with two or three engines, and only one engine is operating, please note that if the propeller shaft thru-hull (stuffing box) is lubricated by engine water pressure and the engines are interconnected, care must be taken that water from the running engine does not enter the exhaust of the non-running engine(s). This water could cause seizure of the non-running engine(s). Consult authorized YANMAR Marine dealer or distributor for a complete explanation of this condition.

If you have an installation with two or three engines, and only one engine is operating, it is important to limit the amount of throttle applied to the running engine. If you observe black smoke or movement of the throttle does not increase engine speed, you are overloading the engine that is running. Immediately throttle back to approximately 2/3 throttle or to a setting where the engine performs normally. Failure to do so may cause the running engine to overheat or cause excess carbon buildup which may shorten the engine's life.

Never turn off the battery switch (if equipped) or short the battery cables during operation. Damage to the electrical system will result.

LOCATION OF SAFETY DECALS

Figure 1 and Figure 2 show the location of safety decals on YANMAR 4LV series marine engines.

4LV Engines

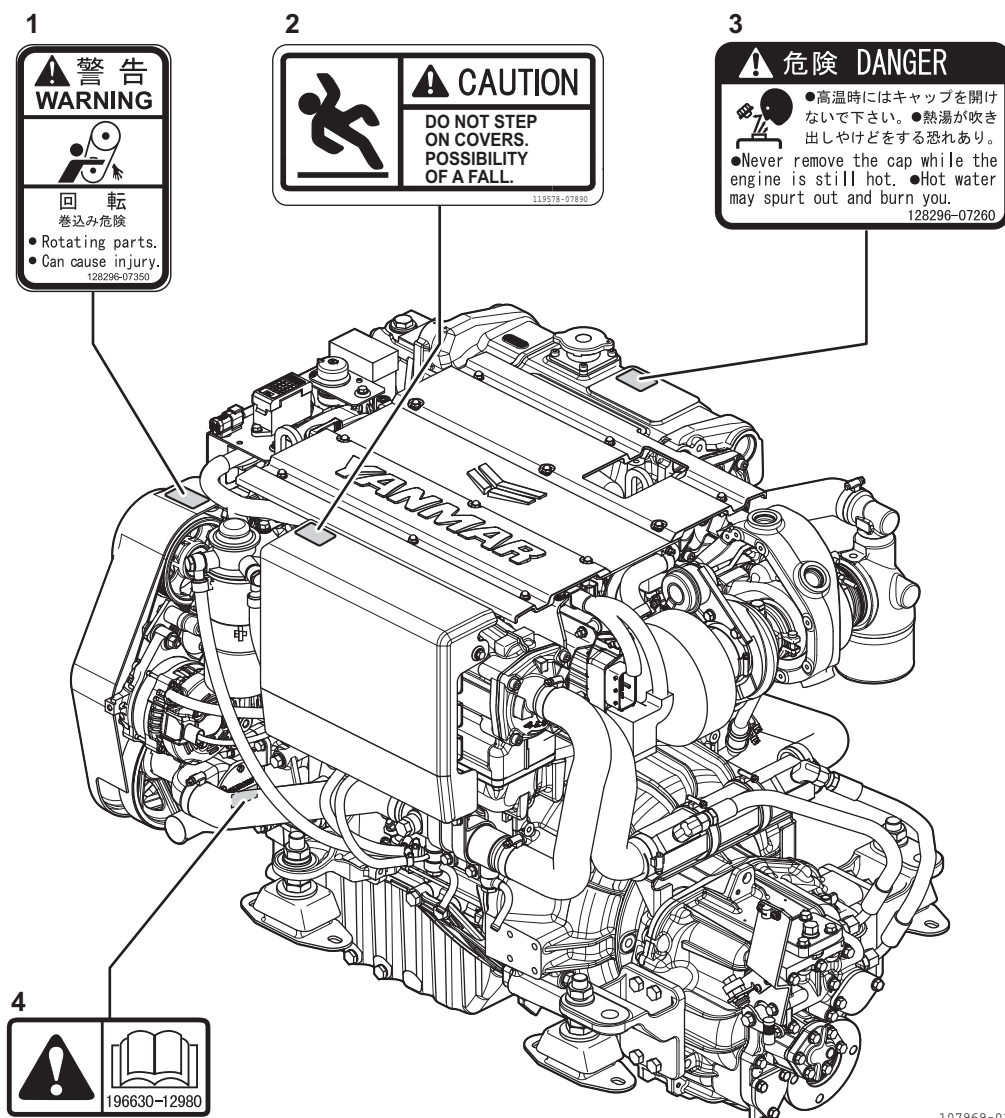


Figure 1

- 1 – Part Number: 128296-07350
- 2 – Part Number: 119578-07890
- 3 – Part Number: 128991-07270
- 4 – Part Number: 196630-12980

4LV Engines

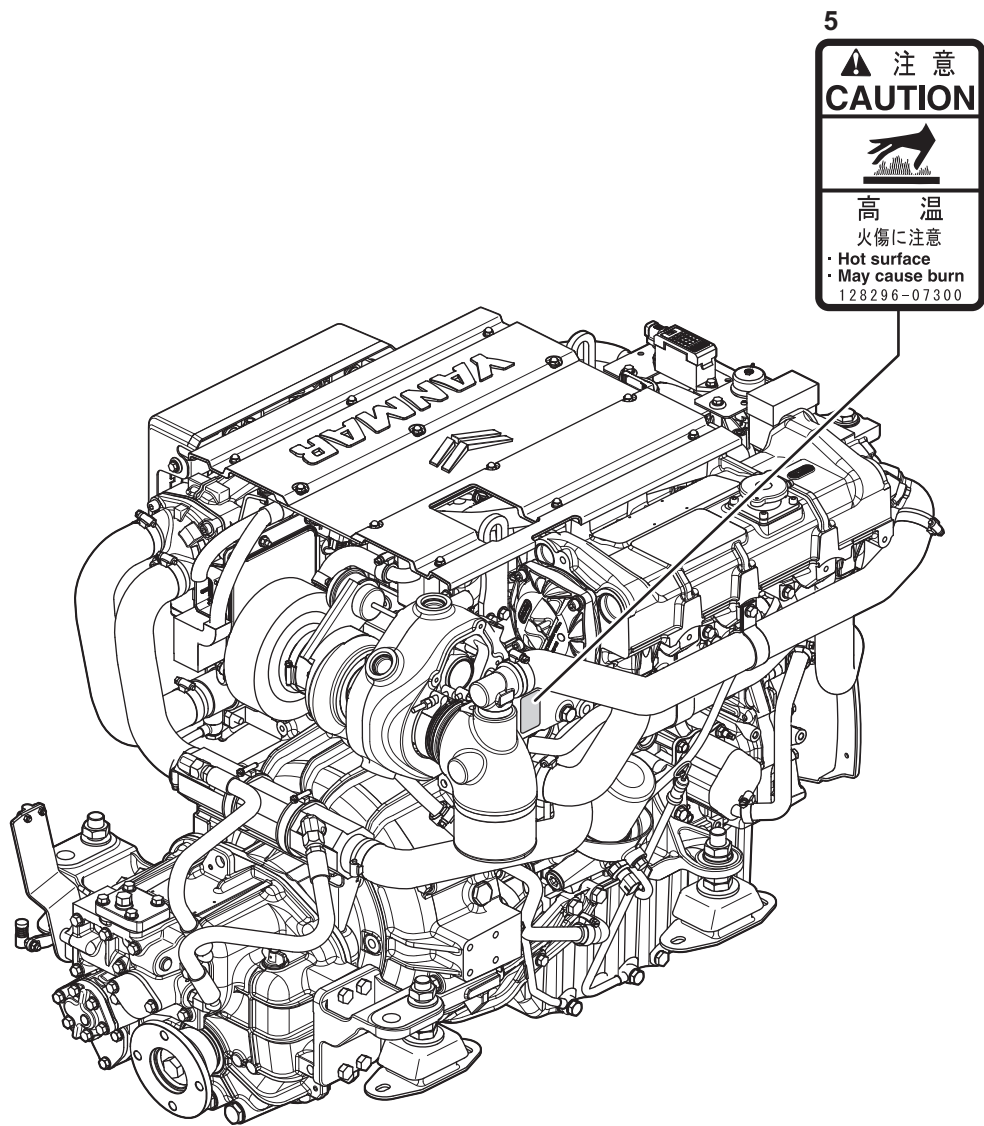


Figure 2

5 – Part Number: 128296-07300

107970-02X00

PRODUCT OVERVIEW

YANMAR 4LV COMMON RAIL SERIES FEATURES AND APPLICATIONS

The 4LV common rail series are four-stroke diesel engines equipped with direct injection common rail system and with liquid coolant systems.

The 4LV is 4-cylinder and turbocharged with an air cooler.

The engines are equipped with a marine gear or stern drive. (Option)

These engines are designed for recreational craft use.

Failure to do so can lead to reduced vessel performance, lead to increased smoke levels and cause permanent damage to your engine.

The engine must be installed correctly with coolant lines, exhaust gas lines and electrical wiring. Any auxiliary equipment attached to the engine should be easy to use and accessible for service. To handle the drive equipment, propulsion systems (including the propeller) and other inboard equipment, always observe the instructions and cautions given in the operation manuals supplied by the shipyard and equipment manufacturers.

The 4LV common rail series engines are designed to be operated at maximum throttle*¹ for less than 5% of total engine time (30 minutes out of every 10 hours) and cruising speed*².

The laws of some countries may require hull and engine inspections, depending on the use, size and cruising area of the boat. The installation, fitting and surveying of this engine all require specialized knowledge and engineering skills. See YANMAR's local subsidiary in your region or your authorized YANMAR Marine dealer or distributor.

*¹ *maximum throttle: fuel stop power engine speed*

*² *cruising speed: fuel stop power engine speed -200 min⁻¹ or less*

PRODUCT OVERVIEW

New Engine Break-In

As with all reciprocating engines, the way your engine is operated during its first 50 hours of operation plays a very significant role in determining how long it will last and how well the engine will perform over its lifetime.

A new YANMAR diesel engine must be operated at suitable speeds and power settings during the break-in period to make the sliding parts, such as piston rings, break-in properly and to stabilize engine combustion.

During the break-in period, the engine coolant temperature gauge should be monitored; temperature should be between 71° and 80 °C (160° and 176 °F).

During the first 10 hours of operation, the engine should be run at maximum engine speed minus 400 to 500 min⁻¹ (approximately 60 to 70% of load) most of the time. This will ensure the sliding parts break in properly. During this period, avoid operating at maximum engine speed and load to avoid damaging or scoring sliding parts.

NOTICE

Do not operate at WOT (wide open throttle) for more than a minute at a time during the first 10 hours of operation.

Do not operate the engine at low idle or at low speed and light load for more than 30 minutes at a time. Since unburned fuel and engine oil will adhere to the piston rings when operating at low speeds for long periods, this will interfere with proper movement of the rings and the engine oil consumption may increase. Low idle speed does not allow break-in of sliding parts.

If operating engine at low speed and light load, you must race the engine to clean the carbon from the cylinders and fuel injection valve.

Perform this procedure in open waters:

- With the clutch in NEUTRAL, accelerate from the low-speed position to the high-speed position briefly.
- Repeat this process five times.

Once past the initial 10 hours until 50 hours, the engine should be used over its full operating range, with special emphasis on running at relatively high power settings. This is not the time for an extended cruise at idle or low speed.

The boat should be run at maximum speed minus 400 min⁻¹ most of the time (approximately 70% load), with a 10 minute run at maximum minus 200 min⁻¹ (approximately 80% load) every 30 minutes and a 4 to 5 minute period of operation at WOT (wide open throttle) once each 30 minutes. During this period, be sure not to operate your engine at low speed and light load for more than 30 minutes. If operating engine at low speed and light load by necessity, just after the low idle operation, be sure to race the engine.

To complete engine break-in, perform *After Initial 50 Hours of Operation* maintenance procedures. See *After Initial 50 Hours of Operation* on page 164.

COMPONENT IDENTIFICATION

Figure 1 and **Figure 2** illustrate a typical version of a 4LV engine. Your engine may have different equipment from that illustrated.

Right Side (Viewed from Flywheel)

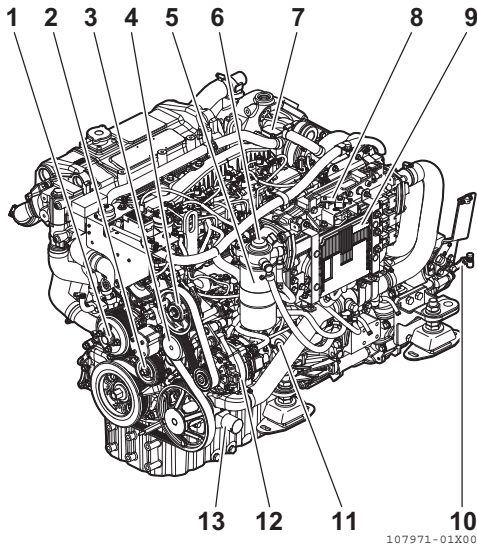


Figure 1

- 1 – Coolant pump
- 2 – Belt tensioner
- 3 – Idler
- 4 – Power steering oil pump
(or Idler)
- 5 – Fuel filter
- 6 – Fuel priming pump
- 7 – Mist separator
- 8 – Throttle sensor
- 9 – ECU
- 10 – Shift lever
- 11 – Starter motor
- 12 – Alternator
- 13 – Seawater pump

Left Side (Viewed from Flywheel)

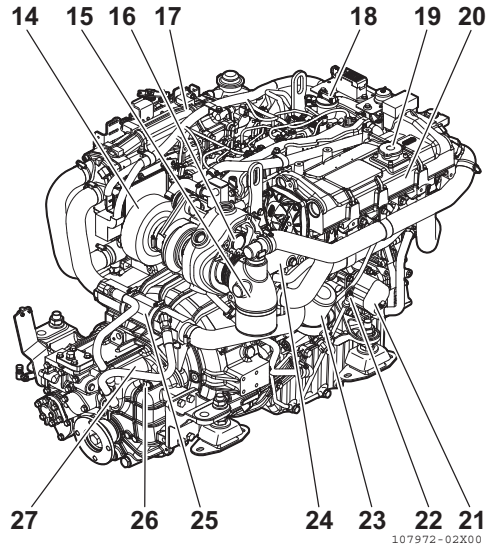


Figure 2

- 14 – Intake silencer
- 15 – Exhaust / water mixing elbow
- 16 – Turbocharger
- 17 – Air cooler
- 18 – Engine oil filler cap
- 19 – Coolant filler cap
- 20 – Coolant tank / Heat exchanger
- 21 – Engine oil cooler
- 22 – Engine oil dipstick
- 23 – Engine oil filter
- 24 – Exhaust manifold
- 25 – Marine gear oil cooler
- 26 – Marine gear oil dipstick
- 27 – Marine gear (KMH50A)

NAMEPLATES

The nameplates of YANMAR 4LV common rail series engines are shown in **Figure 3**. Check the engine’s model, output, min⁻¹ and serial number on the nameplate. Please replace if damaged or lost.

The engine nameplate is attached to the top surface of the engine coolant tank (heat exchanger).

Model

Gear Model

Continuous power kW

_____ / _____ min⁻¹

Speed of prop.shaft

_____ min⁻¹ _____

Fuel stop power kW

_____ / _____ min⁻¹

ENG.No.

MFG.DATE

_____ / _____

YANMAR

129670-07202

Figure 3

The marine gear nameplate (**Figure 4**) is attached to the marine gear. Check the marine gears model, gear ratio, oil used and serial number.

MODEL

MFG. NO.

GEAR RATIO

OIL

YANMAR

KANZAKI KOKYUKOKI MFG CO., LTD.

MADE IN JAPAN

177524-02903

Figure 4

FUNCTION OF MAJOR COMPONENTS

Name of Component	Function
Fuel Filter	The fuel filter removes contaminants and sediments from the diesel fuel. Periodic replacement of the fuel filter is necessary. See <i>PERIODIC MAINTENANCE SCHEDULE</i> on page 161 for the replacement frequency.
Fuel pre-filter (Water separator)	The water separator removes contaminants, sediment and water from diesel fuel going to the fuel filter. This is a required component of the fuel system and is standard equipment with every engine. The water separator is installed between the fuel tank and the fuel filter. Periodically drain the water from the water separator using the drain cock at the bottom of the separator and replace the filter element.
Fuel Priming Pump	This is a manual fuel pump. Pushing the knob on the top of the fuel filter feeds the fuel. This pump is also used to bleed air from the fuel system.
Engine Oil Filler Port	Filler port for engine oil.
Engine Oil Filter	Filters fine metal fragments and carbon from the engine oil. Filtered engine oil is distributed to the engine's moving parts. The filter is a cartridge type and the element should be replaced periodically. See <i>Changing the Engine Oil and Replacing the Engine Oil Filter Element</i> on page 174.
Marine Gear Filler Port (Marine Gear is option)	Filler port for marine gear lube oil. Located on top of the marine gear case.
Cooling System	There are two cooling systems: closed cooling with coolant and seawater. The engine is cooled by the closed cooling circuit. The closed circuit is cooled by seawater using a heat exchanger. The seawater also cools the marine gear oil and intake air (depending on model) through the cooler(s) in an open circuit.
Coolant pump	The centrifugal water pump circulates coolant inside the engine. The circulating pump is driven by a V-ribbed belt.
Seawater Pump	Pumps seawater from outside vessel to the engine. The seawater pump is gear-driven and has a replaceable rubber impeller. Do not operate it without seawater, as this will damage the impeller.
Reservoir	The pressure valve in the filler cap releases vapor and hot water overflow to the reservoir. When the engine stops and the coolant cools, the pressure in coolant tank drops. The filler cap vacuum valve then opens to send water back from the reservoir. This minimizes coolant consumption. The closed cooling system coolant level can easily be checked and refilled in this tank.
Oil Cooler - Engine	A heat exchanger that cools high temperature engine oil using coolant.
Oil Cooler - Marine Gear (Marine Gear is option)	This heat exchanger cools the marine gear (KMH50A or KMH50V) oil using seawater.
Turbocharger	The turbocharger pressurizes the air coming into the engine. It is driven by a turbine that is energized by exhaust gases.
Air cooler	This heat exchanger cools the pressurized charging air from the turbocharger with seawater to increase the charging air quantity.
Intake Silencer (Air Cleaner)	The intake silencer guards against dirt in the air and reduces the noise of air intake.
Zinc Anode	The metal area of the seawater cooling system is prone to galvanic corrosion. The zinc anode is installed in the various coolers to prevent this. When the zinc anode becomes worn, components in the fresh water cooler, oil cooler, etc. will corrode. Periodic replacement of the zinc anode is necessary
Nameplates	Nameplates are provided on the engine and the marine gear and have the model, serial number and other data.
Starter	Starter motor for the engine. Powered by the battery.
Alternator	Driven by belt and generates electricity and charges the battery.
Engine Oil Dipstick	Gauge stick for checking the engine oil level.

ELECTRONIC CONTROL SYSTEM

WARNING

- The 4LV common rail series engines use a high pressure common rail system.
 - The fuel is injected at extremely high pressure.
 - Never disassemble the fuel system parts.
 - Failure to comply may result in death or serious injury.
 - If a malfunction occurs, consult your nearest YANMAR dealer or distributor.
-
- Never use the ECU for other purposes than intended or in other ways than specified by YANMAR. Doing so could result in the violation of emission control regulations and will void the product warranty.
 - Be sure to use the ECU in conjunction with the engines whose models or serial numbers are specified by YANMAR. Other ECU/engine combinations than specified will void the engine warranty.
 - Replacing the fuel injector involves rewriting the fuel injection data in the ECU. Be sure to consult your local YANMAR dealer before replacing the fuel injector. Failure to rewrite the fuel injection data before replacing the fuel injector will void the engine warranty.
 - Improper use or misuse of the ECU may result in death or serious injury due to an abrupt and unexpected increase in engine speed.

WARNING

- Replacing the ECU involves migrating the fuel injection data to the existing ECU to the new unit. Be sure to consult your local YANMAR dealer before replacing the ECU. Failure to migrate the fuel injection data before replacing the ECU will void the engine warranty.

NOTICE

- Do not plug or unplug the ECU for a period of at least 6 seconds after power to the unit has been turned on or off.
- Do not touch connector pins of the ECU with bare hands. Doing so may result in corrosion of the connector pins and/or damage to the internal circuits of the ECU due to static electricity.
- Do not force a measuring probe into the female coupler. Doing so may cause contact failure of the connector pins, resulting in malfunction of the ECU.
- Take care to prevent water from entering the couplers when plugging or unplugging the connector. Water inside the couplers may cause corrosion, resulting in malfunction of the ECU.
- Avoid plugging/unplugging the connector more than approx. 10 times. Frequent plugging/unplugging of the connector may cause contact failure of the connector pins, resulting in malfunction of the ECU.
- Do not use the ECU that has ever suffered drop impact.
- Always check the battery for proper charge. Otherwise the electronically controlled engines may fail to start.

MAIN ELECTRONIC CONTROL COMPONENTS AND FEATURES

Component/feature	Description
Controller	By controlling the fuel injection timing, volume, pressure and number in accordance with the target speed indication entered from the accelerator sensor, the controller adjusts the engine speed and power.
Fuel pump (supply pump)	The fuel pump supplies fuel to the common rail.
Common rail	The common rail stores the compressed high-pressure fuel from the supply pump and distributes fuel to the injector in each cylinder.
Fuel injector	The Fuel Injectors the high-pressure fuel from the rail to the engine combustion room after receiving a signal from the ECU in the most appropriate injection timing, injection volume, injection ratio, number of injection and spray condition.
Accelerator sensor	Unlike mechanical governors, the common rail fuel injection system has no governor lever. The accelerator sensor serves as the governor lever to provide the speed command signal (voltage signal) to the ECU for engine speed control.
Engine diagnosis tool	Allows the operator to troubleshoot the cause of a problem based on detailed information regarding the problem occurring in the ECU. This tool can also be used for data maintenance tasks including programming and mapping. <i>See TROUBLESHOOTING on page 183.</i>

CONTROL EQUIPMENT

The equipment in the control room makes remote control operation possible. It consists of the instrument panel, which is connected to the engine by a wire harness, and the remote control handle, which is connected by control cables to the engine control lever and marine gear.

Instrument Panel

Equipment and Functions

The instrument panel is located in the cockpit. The following instruments enable you to start or stop the engine and to monitor its condition during operation.

B25-Type

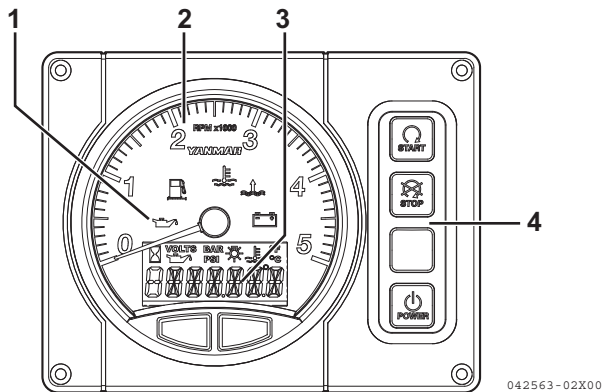


Figure 5

C35-Type

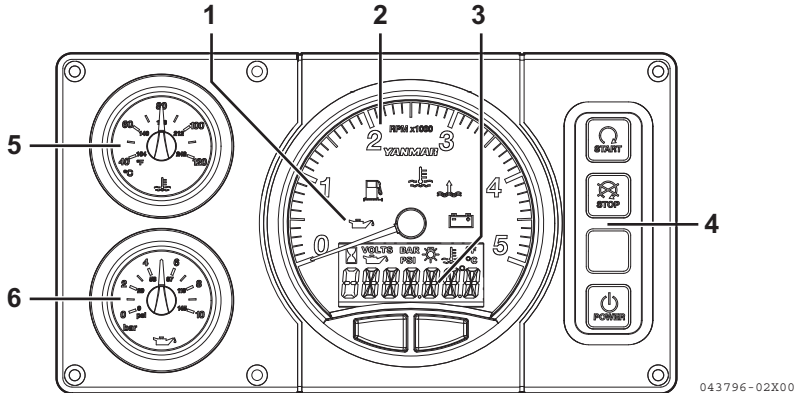


Figure 6

- 1 – Alarm lamp

2 – Tachometer

3 – LCD
- 4 – Switches (push-buttons)

5 – Coolant temperature gauge

6 – Engine oil pressure gauge

Meters

Instrument	Function
Tachometer	Shows engine rotation speed.
Hour meter	Shows number of operating hours. Can be used as a guide for periodic maintenance checks. The hour meter is located at the bottom of the tachometer.
Coolant Temperature Gauge	Shows the coolant temperature.
Engine Oil Pressure Gauge	Shows the engine oil pressure. (If oil pressure sensor equipped)
Panel Lights	When the power switch is pushed, the gauges will illuminate for easier viewing.

Note: The LCD on the instrument panel show hour meter, coolant temperature, display brightness, oil pressure and battery voltage. See LCD control (hour meter, coolant temperature, display brightness, oil pressure, battery voltage, alarms) on page 20. Other indicators in the LCD can be added by display setting. See Selection of the display setting on page 24.

Coolant temperature and oil pressure display (option)

- B25, C35-Type panels have a digital LCD screen inside the tachometer.
- C35-Type panels have an electric gauge with a needle.

PRODUCT OVERVIEW

Instrument Panel

The formats for the instrument panel are shown below.

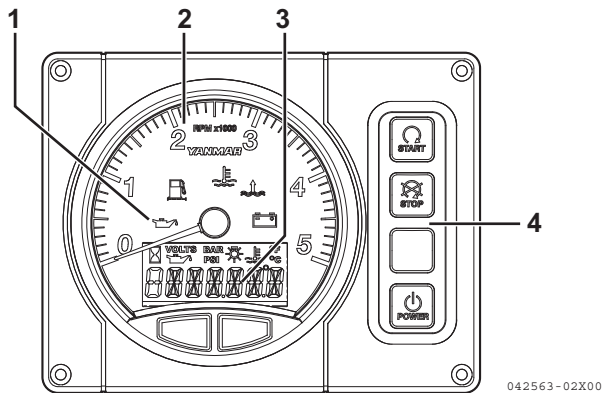


Figure 7

- 1 – Alarm lamp

2 – Tachometer
- 3 – LCD

4 – Switches (push-buttons)

Control panel switches

All switches are push-buttons.



Start switch
Pushing this switch operates the starter and starts the engine.



Power switch
Pushing this switch turns on or off the power.



Stop switch
Pushing this switch stops the engine.

Indicators and Alarms (Optional)

When a sensor detects a problem during operation, the indicator on the instrument panel will light and an alarm will sound. Indicators are located on the instrument panel and the alarms are located on the back of the panel. Under normal operating conditions, the indicators are off.



Battery Low Charge Indicator

When the alternator output is too low, the indicator will light. When charging begins, the indicator will turn off.



Coolant High Temperature Indicator and Alarm

When coolant temperature reaches the maximum allowable temperature (95 °C [203 °F] or higher), the indicator will light and the alarm will sound. Continuing operation at temperatures exceeding the maximum limit will result in damage and seizure. Check the load and troubleshoot the cooling system.



Engine Oil Low Pressure Indicator and Alarm

When the engine oil pressure falls below normal, the oil pressure sensor will send a signal to the indicator, causing it to light and the alarm to sound. Stop operation to avoid damage to the engine. Check the oil level and troubleshoot the lubrication system.



Water in Sail Drive Seal Indicator and Alarm

When water is detected between the seals of the sail drive, the indicator will light and the alarm will sound.



Water in Fuel Filter Indicator and Alarm

When the water level in the fuel filter/water separator becomes too high, the indicator will light and the alarm will sound. Drain the water from the fuel filter/water separator. *See Draining Fuel Filter/Water Separator on page 169.*

PRODUCT OVERVIEW

LCD control

(hour meter, coolant temperature, display brightness, oil pressure, battery voltage, alarms)

You can switch (scroll) between displays by pressing the buttons on the bottom as the default setting.

- **Switching screens by pressing the right button (Pressing the left button switches the screens in the opposite direction.)**

Press the power switch.

- After 4 seconds, the LCD shows the hour meter.

Pressing the right button on the bottom of the LCD shows the temperature display. Select between Metric units (°C) and Imperial units (°F) at the "System Units screen" on page 22.

Pressing the right button again shows the LCD brightness settings.

To set the brightness of the backlight:


- 1 Press the left button continuously and the digits of the LCD start flashing.
- 2 In this condition, press the left button to increase the brightness.
- 3 Press the right button to decrease the brightness. (The brightness changes in 6 steps of 20%.)

To set the desired brightness, do not touch the buttons for 3 seconds.

Note: Continuously pressing means holding the button for approx. 2 seconds.

Next, press the right button to show the pressure display. Select between Metric units (BAR) and Imperial units (PSI) at the "System Units screen" on page 22.

Press again to show the battery voltage.

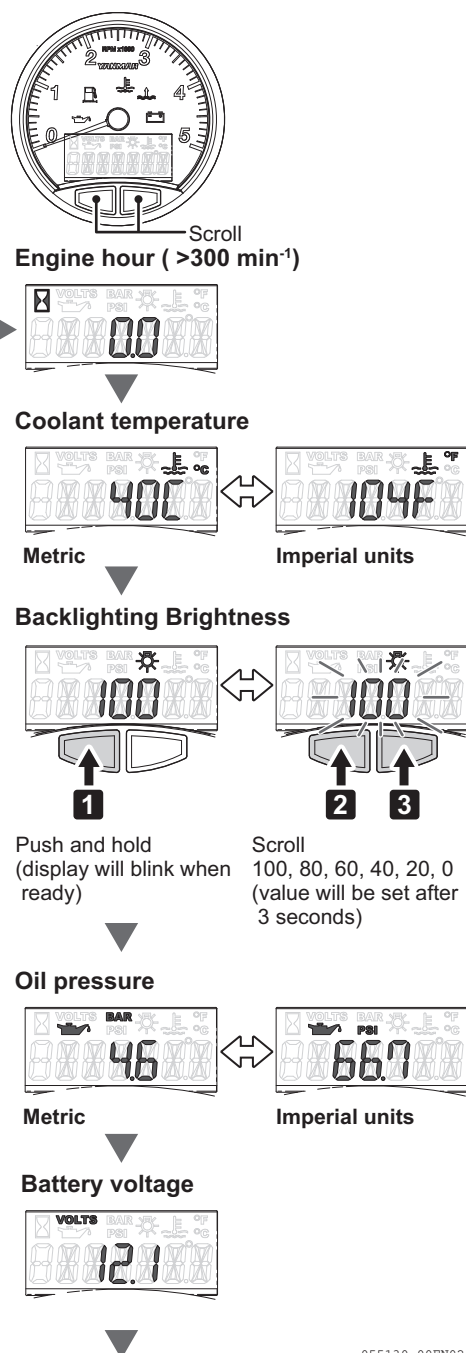

055130-00EN02

Figure 8

Pressing the button once more, shows the engine alarms “ALARMS”.

- 1 Press and hold the left button, “WAIT” will display in the LCD about 1 second while DTC is being read.

Note: DTC means Diagnosis Trouble Code.


“NO dTC” or the number of DTC will show when DTC process is finished.

- 2 When “NO dTC” is indicated on the screen, press the left button and go to the next screen “RETURN”.

- 3 Press and scroll the left button for the number of DTCs to see all the applying trouble codes.
Look up the codes in the *FAILSAFE DIAGNOSIS FUNCTIONAL SPECIFICATION CHART* on page 190 and consult your authorized YANMAR Marine dealer or distributor for repairment.

Note: When “UNKNOWN” is displayed, consult your authorized YANMAR Marine dealer or distributor.

- 4 When you are done browsing the DTC list, press the left button to go to “RETURN”.
- 5 When “RETURN” is displayed, press the right button to return to “ALARMS”.
- 6 Press the right button again to return to the initial hour meter.

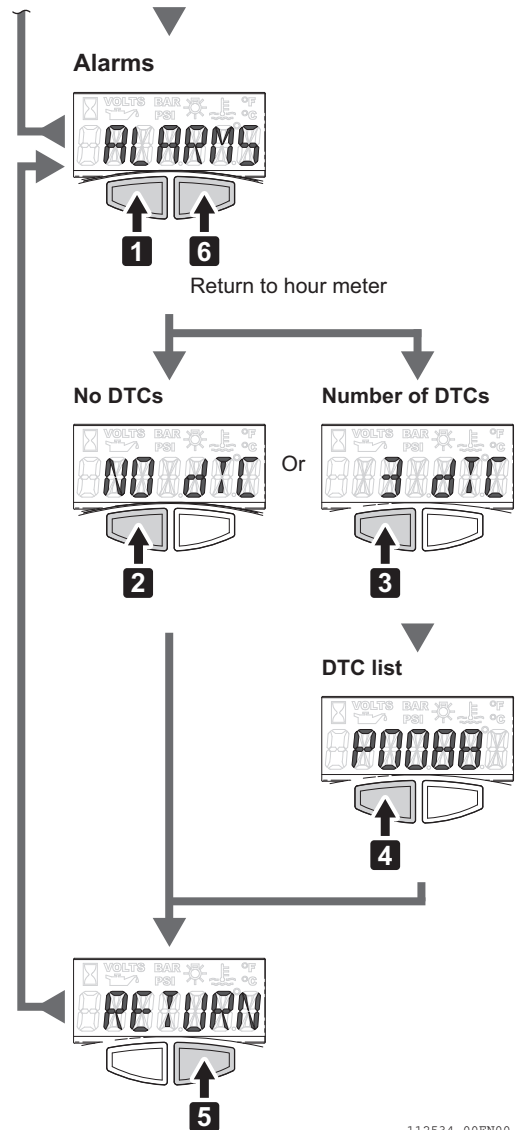

112534-00EN00

Figure 9

PRODUCT OVERVIEW

Setup screen access and control (Setting the temperature, pressure units and others)

Use the buttons on the bottom of the LCD display to set the instrument panel. Press the left button to switch between displays.

- 1 Press and hold both buttons until “SET UP” appears.
- 2 Press the left button to set the units for the temperature and pressure display.

Setting the temperature and pressure units

The display says “UNIT”.

- 1 Next, press the right button to select Metric units (°C, BAR). The display says “METRIC”.
- 2 Press the left button to switch to Imperial units (°F, PSI). The display says “ENGL”.
- 3 Press the right button to select and go back to the “UNIT” screen.
- 4 Press the left button and go to the next screen “FUEL”.

Confirm that the display indicates “FUEL”. Pressing the right button displays the fuel tank level setting screen.

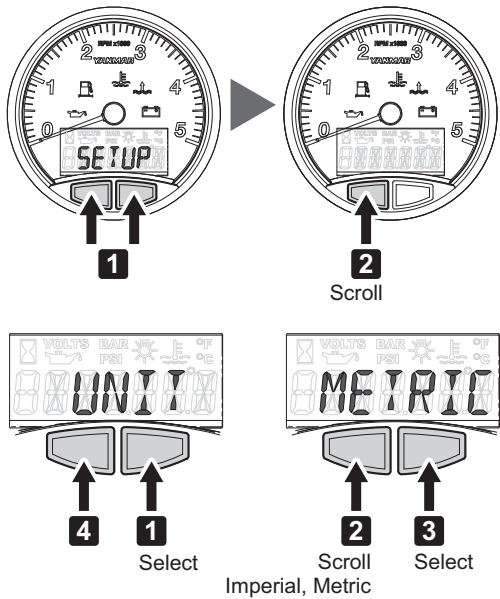


Figure 10

057180-00EN01

Selecting the fuel tank level gauge (Usually set at boat builder)

The display indicates "FUEL".

(You can select to the next setting by pressing the left button.)

- 1** Press the right button to select the type of the gauges.
- 2** Change the type by pressing the left button.
- 3** Press the right button to select the type.
- 4** Press the left button and go to the next screen "DISPLAY".

There are four types of fuel level gauge setting. The type of level gauge can be changed by scrolling and selecting the setting with the buttons.

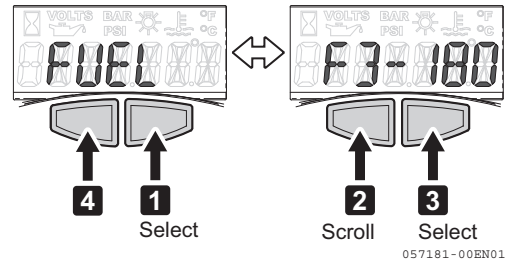


Figure 11

Type	F3-180
	F240-3
	F70-3
	CAN

PRODUCT OVERVIEW

Selection of the display setting

The following indicators can be displayed on LCD by this setting.

TH POS	TH ON	Throttle position %
	TH OFF	
ENG Ld	Ld ON	Engine load %
	Ld OFF	
FL RT	FR ON	Fuel flow rate L/h or Gal/h
	FR OFF	
AIR PRS	AP ON	Intake air pressure Bar or PSI
	AP OFF	
FL TMP	FT ON	Fuel temperature degC or degF
	FT OFF	
AIR TMP	AT ON	Intake air temperature degC or degF
	AT OFF	
RETURN		Return to dISPLAY

The display indicates “dISPLAY”. You can select to the next setting by pressing the left button.

- 1 Press the right button to select the indicator.
- 2 Press the right button to display the setting screen.
- 3 Press the left button to toggle between On/Off.
- 4 Press the right button to select the setting.
- 5 Press the left button and go to the next screen “ENG Ld”.

Setting of the next indicator.
Repeat the same procedure to set other indicators.

- 6 When “RETURN” is indicated on the screen, press the right button to return to “dISPLAY” mode.
- 7 Press the left button and go to the next screen “ENGINE”.

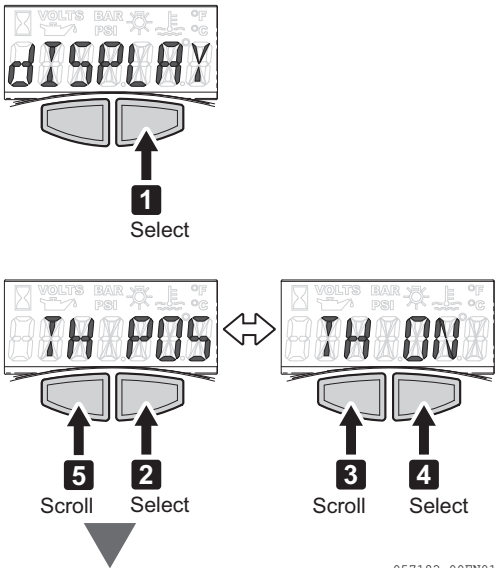


Figure 12


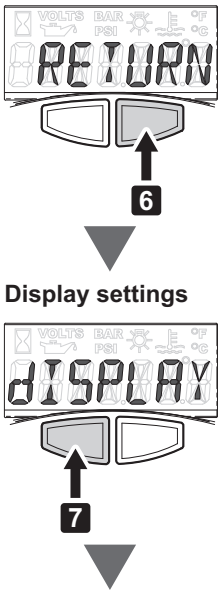


Figure 13

Setting of the engine model

- 1** When "ENGINE" is indicated, press the right button to select the engine model.
- 2** Press the left button to select "4LV".
Note: Initial setting indicates "JH".
- 3** When "4LV" is indicated on the screen, press the right button to return to "ENGINE".
- 4** When "ENGINE" is indicated, press the left button to go to "EXIT".
- 5** Press the right button when "EXIT" is shown on the screen to exit the setup mode.
All LCD light up for a while, and then returns to hour meter.

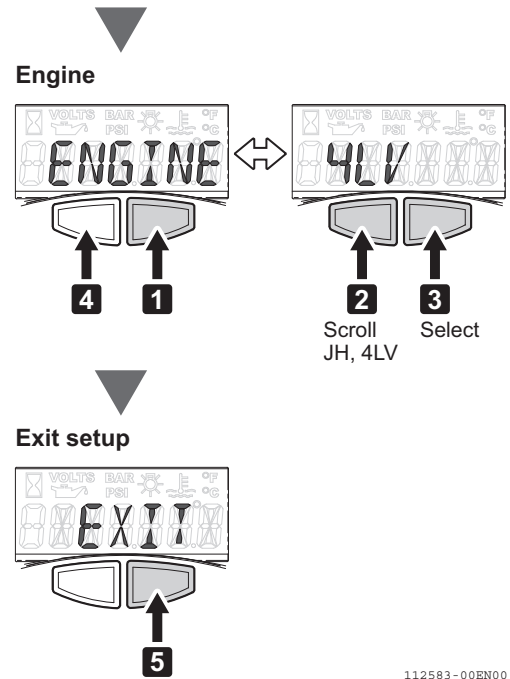

112583-00EN00

Figure 14

PRODUCT OVERVIEW

Scroll the LCD screen with the buttons.

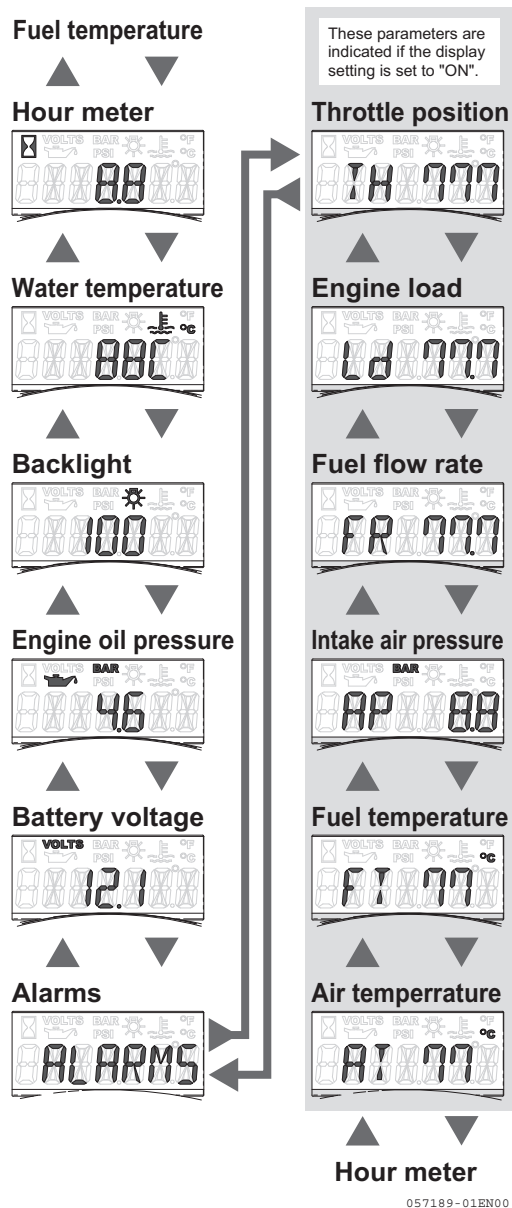


Figure 15

Alarms

Checking the Warning Devices

Be Sure to Check the Warning Devices before Starting the Engine.

If the devices are not working properly, it is impossible to prevent any accidents arising from problems like insufficient oil and water.

NOTICE

When the warning devices are activated and normal operation is impossible, stop the engine and do not use it until the problem has been solved.

Before Engine Start

1. Turn on the battery switch.
2. Push the power switch on.
 - All alarm lamps light up for 4 seconds.
 - After 4 seconds, the hour meter is displayed.

After Engine Start

After engine start, make sure that the warning devices operate correctly and according to "After start" in the below table.

- All alarm lamps turn off. The above check tells you whether the electric circuit for the alarm lamps and alarm buzzer operate correctly. If they do not operate correctly, inspection and repair are required. Consult your dealer or distributor for repairs.

Correct operation of the warning devices				
Instrument panel (power switch)	Power ON			
	Immediately	After 2 seconds	After 4 seconds	–
	Before start			After start
Starter switch	OFF			ON
Alarm buzzer	ON (0.3s)	OFF		OFF
Charge lamp	ON	ON	OFF	OFF
Coolant temperature lamp	ON	ON	OFF	OFF
Engine lubricating oil pressure lamp	ON	ON	OFF	OFF
LCD display	YANMAR	Full display	Hour meter	

Accessory power output

The harness attached to the panel has a terminal where the signal that is synchronized to the panel power supply can be taken off. (**Figure 16**) (Refer to the Service Manual.)

The maximum current of this output terminal is 3 A (Fuse capacity).
Do not use a current higher than 3 A.

For the content of the output terminal, refer to the Service Manual.

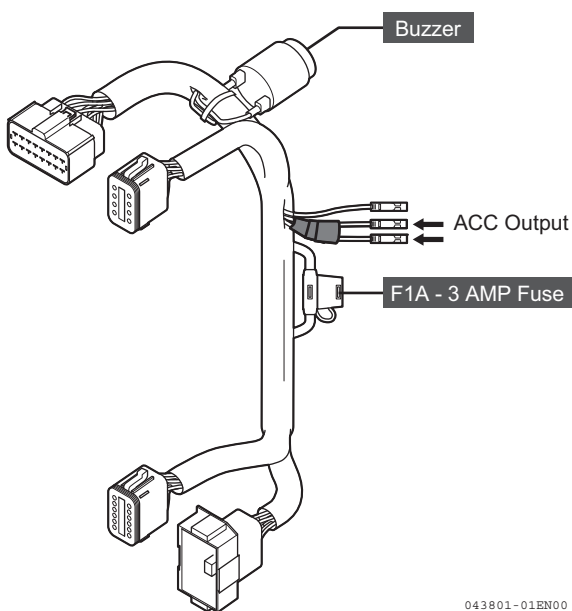


Figure 16

Single-Lever Remote Control Handle

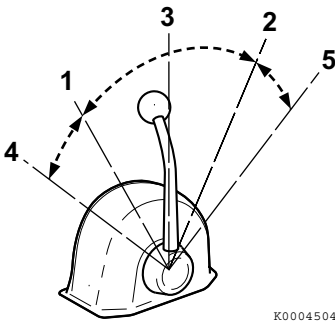


Figure 17

- 1 – Low Speed - FWD or REV**
- 2 – Low Speed - FWD or REV**
- 3 – NEUTRAL - Power to the propeller shaft is cut off and the engine idles**
- 4 – Maximum Engine Speed - FWD or REV**
- 5 – Maximum Engine Speed - FWD or REV**

Note: Direction of travel will vary depending on installation location.

A single handle-type (**Figure 17**) should be used to operate the marine gear clutch (NEUTRAL, FORWARD and REVERSE) and to control the engine speed.

The handle controls the direction of the boat (ahead or astern) and also acts as an accelerator by increasing engine speed as the lever is pushed further in FORWARD or REVERSE directions.

When the handle is pulled out (**Figure 18, (1)**), the engine speed can be controlled without engaging the clutch. The clutch remains in NEUTRAL, no load position. Turn the knob (**Figure 18, (2)**) counterclockwise to move the handle or clockwise to lock the handle.

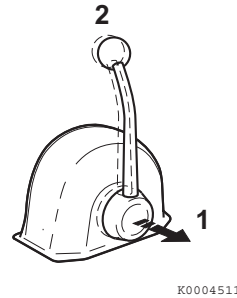


Figure 18


Note: YANMAR recommends the use of a single-lever type for the remote control system. If only a two-lever type is available in the market, reduce engine speed to 1000 min⁻¹ or less before engaging and disengaging the marine gear clutch.

VESSEL CONTROL SYSTEM (VC10)

4LV common rail series engine is a fully electronic control engine, which is controlled by YANMAR’s original “Vessel Control System (VC10)”.

The control equipment consists of the Switch Panel, the Display, the Drive & Helm ECU, the Control Head and the Backup Panel, which are connected by the cable harness to the engine and marine gear or Stern drive for remote control operation.

Note: The YANMAR Vessel Control System (VC10) was designed to operate the 4LV common rail series and drive system. There are many control functions and diagnostic functions that are integrated together to insure safe operation. If this system is not utilized in specific accordance with the instructions in this manual or the system is modified in any way, YANMAR will not be responsible for any warranty failures in the operation of the system or the vessel utilizing the system. YANMAR has designed the Vessel Control System (VC10) in conjunction with the 4LV common rail series. The system has many functions that must be configured and calibrations must be made before the vessel can be operated. Please arrange to have a YANMAR trained technician inspect the vessel prior to the vessels operation.

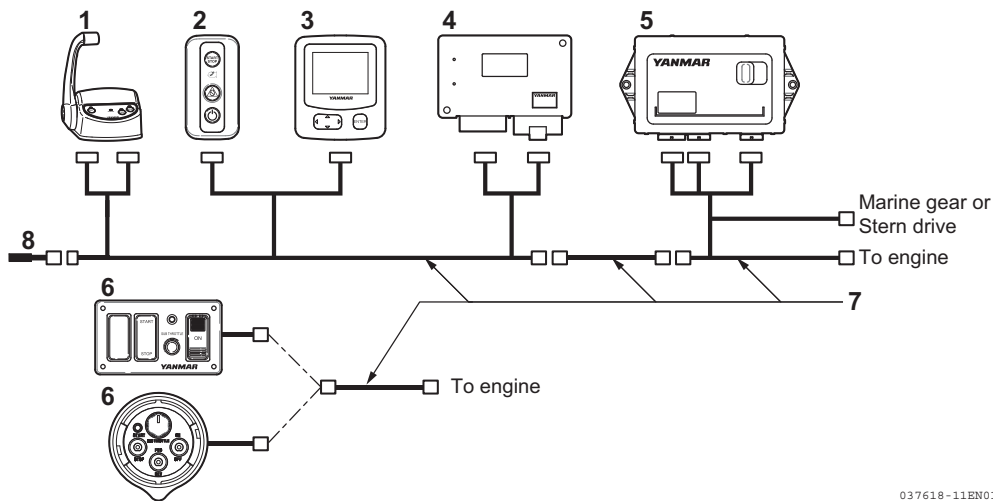

037618-11EN01

Figure 19

No.	Description	No.	Description
1	Shift and Throttle Control Head	5	Drive ECU
2	Switch Panel (to start and stop the engine)	6	Backup Panel *
3	VC10 Digital Display	7	Cable Harness Set
4	Helm ECU	8	Adapter, Terminal

* The backup panel has two design types.

Display

The multi-function information display has the following functions.

Display Function

Runtime Engine Data Tri-Screen

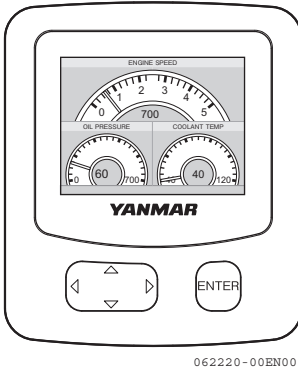


Figure 20

This screen displays real time engine data and alarm indications.

Alarm Indicators

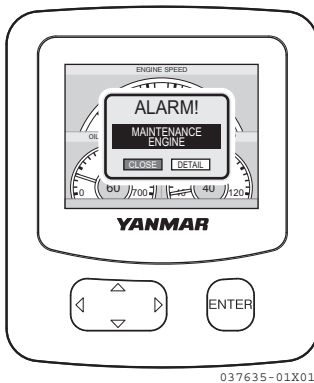


Figure 21

The alarm window appears with an audible alarm when abnormal engine activity occurs.

Note: When starting the engine, make it a rule to check that when the switch panel is pressed to the power switch, the welcome screen appears on the display and goes out. If the system does not function normally, consult your authorized YANMAR Marine dealer or distributor and ask for diagnostics.

Diag Codes Screen

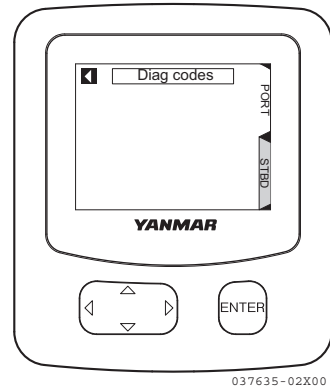


Figure 22

Alarm Indicator Functions

The alarm indicators and buzzer are activated when sensors detect an abnormality during engine operation. The alarm indicators are off during normal operation, but are activated as follows when an abnormality arises:

- The coolant temperature alarm indicator activates when the coolant gets too hot.
- The engine oil pressure alarm indicator activates when the engine oil pressure drops.
- The electric charge alarm indicator activates when there is a charging failure.

PRODUCT OVERVIEW

Operation of the Display's Buttons

Buttons

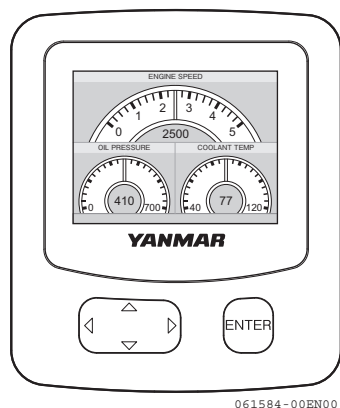



Figure 23

- Act on pop-up menu (MAIN MENU)
 - Perform the function
- ▲ Up Arrow moves menu selection up
- ▼ Down Arrow moves menu selection down
- ◀ Left Arrow acts on current menu item
- ▶ Right Arrow acts on current menu item

Hot Key List

Item	Operation	Indication
MAIN MENU	Press the [ENTER] button.	Display MAIN MENU.
MENU LAYER SKIP	Hold the ◀ button down for 1 second.	Close MENU and return to the normal screen.
ICON INFO	Press the ▼ button while the icon with a detail information indication function is displayed.	Display the related setting screen of the relevant icon. If there are multiple items, execute with the [ENTER] button after selecting with the ◀ ▶ buttons.
Adjusting Brightness	Press the ▲ button.	Display the brightness adjustment screen and adjust brightness with the ▲ ▼ buttons.
Switching Night Mode	Press the ◀ button.	Switch to the night mode indication.
Setting Complete	Hold the [ENTER] button down for 1 second while the ◼ icon is highlighted.	Close the setting screen and MENU and return to the normal indication.
Switching Monitor Display Indication	Press the ▶ button.	Switch to the monitor screen in the normal indication. Send the screen in order with the ◀ ▶ buttons. The monitor screen is fixed when there is no operation with the ◀ ▶ buttons for 5 seconds.

Display Menu Navigation

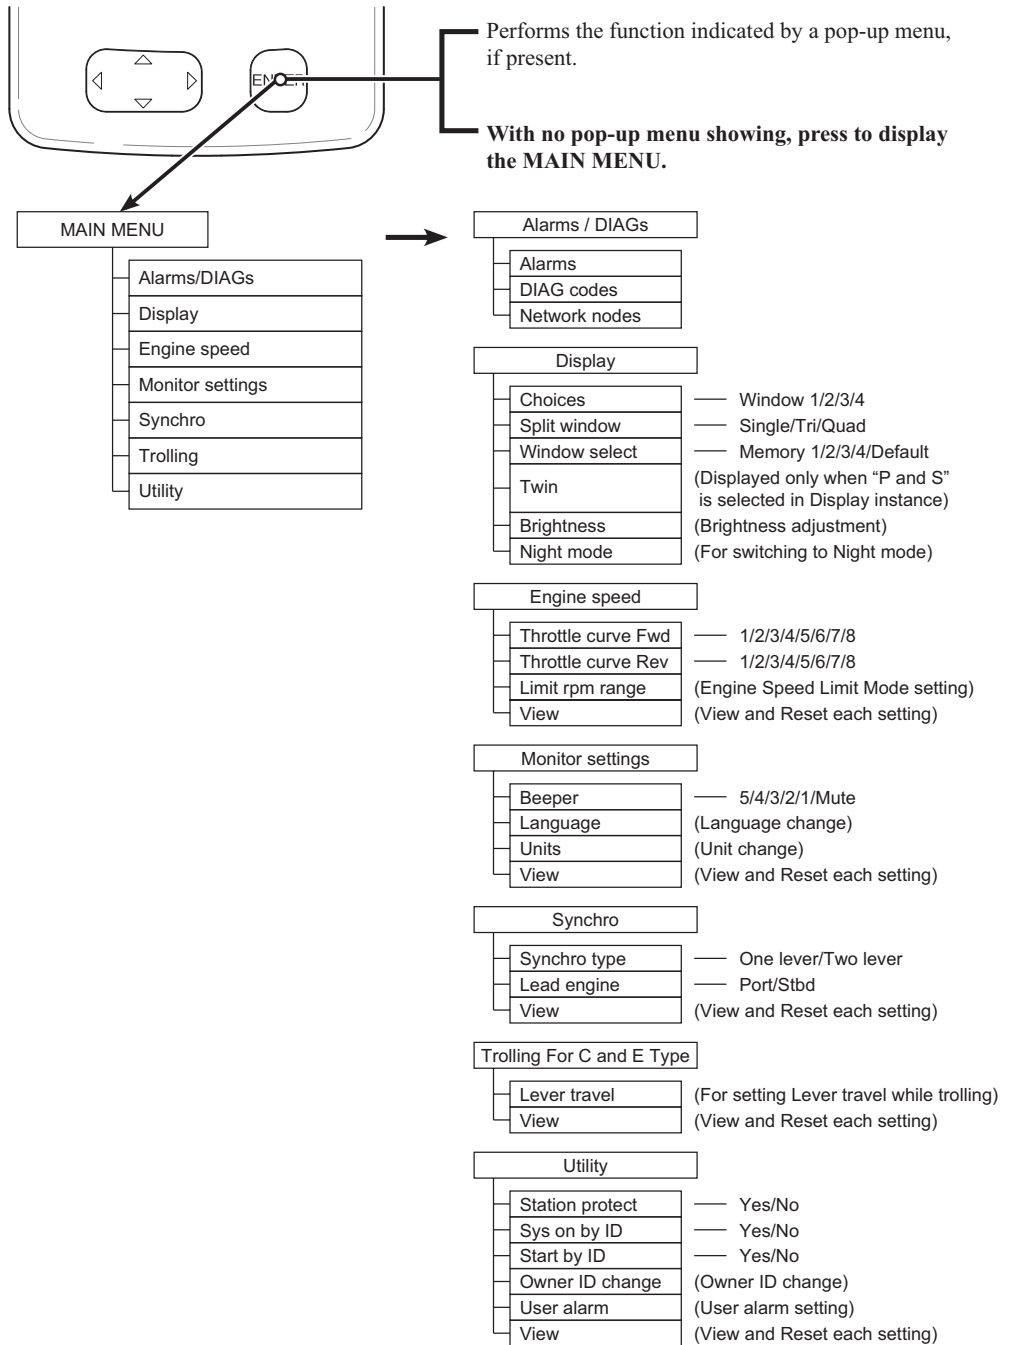

147621-00EN

Figure 24

PRODUCT OVERVIEW

Available data on the display

Display	Choices	Window 1/2/3/4	Engine	Battery voltage	Digital
			Engine	Boost pressure	Gauge/digital
				Coolant temp	Gauge/digital
				Engine speed	Gauge/digital
				Load	Gauge/digital
				Oil pressure	Gauge/digital
				Oil temp	Gauge/digital
				Running hours	Gauge/digital
				Throttle	Gauge/digital
			Drive	Prop speed	Gauge/digital
				Rudder position	Gauge/gauge (Port)
					Gauge/gauge (Stbd)
				Shift position	
				Trim tab position	Digital/bar
				Tilt position	Digital/bar
				Transmission P	Gauge/digital
				Transmission T	Gauge/digital
				Trolling status	Digital
			Boat	Boat speed	Digital
				Tank1	Digital/bar
				Tank2	Digital/bar
				House battery voltage	Digital
				Outside temp	Digital
				Seawater temp	Digital
			Eco	Fuel rate	Digital

Available languages on the monitor settings


Monitor settings	Language	English / Spanish / French / Italian / German / Dutch / Norwegian / Portuguese
------------------	----------	--

Available data on the display

Monitor settings	Units	Pressure	psi/kPa/bar
		Temperature	°F/°C
		Tank	%/Ltr/gal/USgal
		Fuel consumption	Ltr/hr, gal/hr, USgal/hr
		Boat speed	MPH, km/h, Knots

Throttle Curve Selection

1. There are 8 patterns for forward and 8 patterns for reverse in the throttle curve.
2. Select each pattern on the display. A different curve can be selected respectively for forward/reverse.

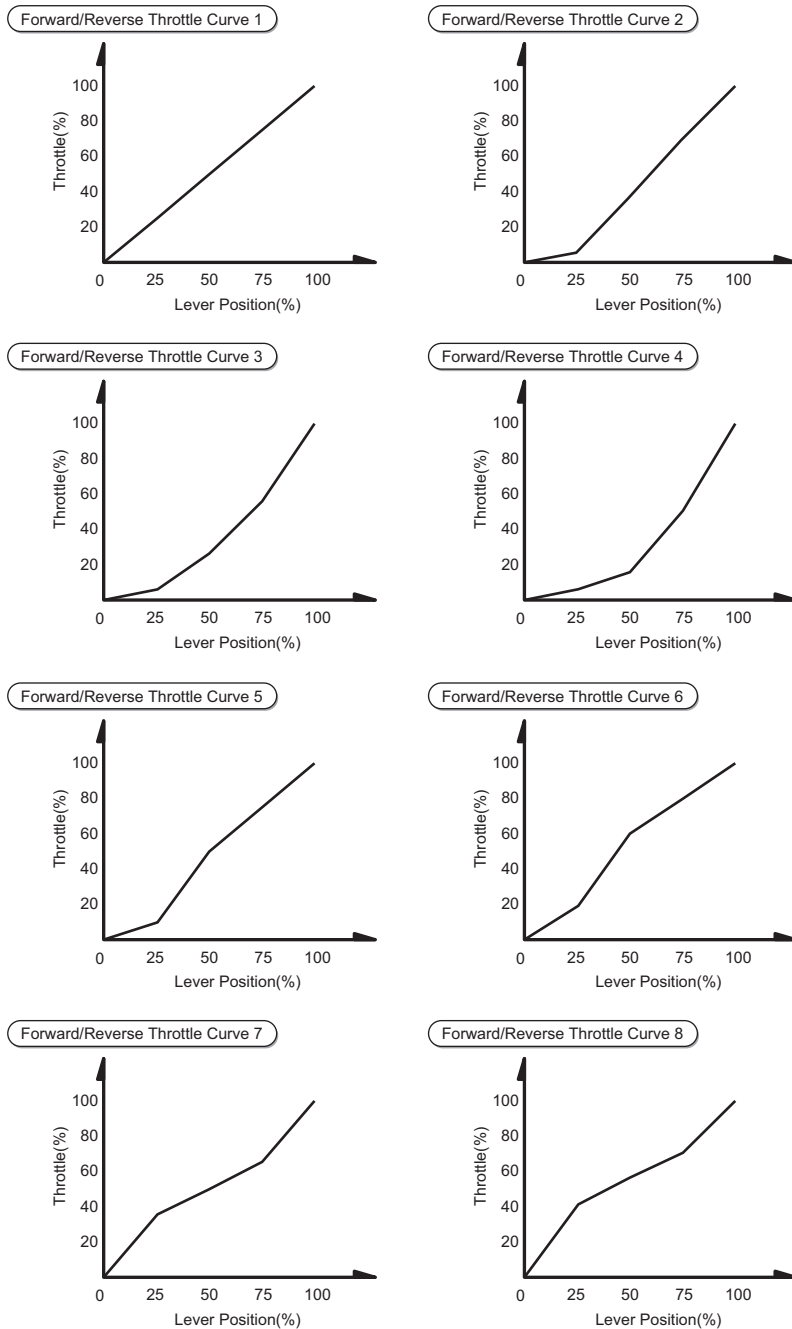

147623-00BN

Figure 25

Display Icons

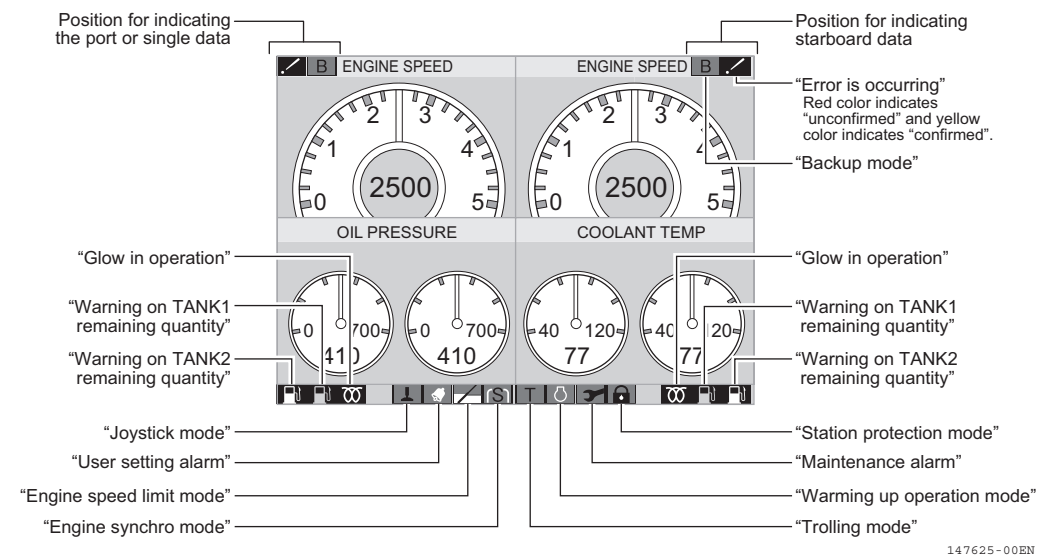


Figure 26

Error Indication

When the ECU detects an abnormality in the engine, drive, or boat, the alarm popup is displayed on the screen.

When there are multiple alarm popups, they are displayed in order of priority.
[Priority] WARNING > NOTICE > ALARM


Selecting the "CLOSE" or "DETAIL" button and pressing the [ENTER] button makes the alarm popup disappear.

If Alarm is indicated, select "DETAIL" and press the "ENTER" button to indicate the Diagnosis Trouble Code.

(See *FAILSAFE DIAGNOSIS FUNCTIONAL SPECIFICATION CHART* on page 190.)

The following functions can be selected in "Alarm/DIAGs" in the MAIN MENU.

- Alarms: Displays warnings and notices for the operator to use the system safely and appropriately.
- DIAG codes: Confirms the details of the abnormality that occurred.
- Network nodes: Confirms the conditions of the connected ECU etc.

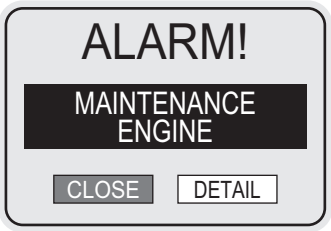

039786-00B00

Figure 27

User Alarm

The alarm can be activated by setting operating hours, which is also used as a timer function.

- Select “User alarm”, highlight “READY/ARM” with the ► button, highlight the “Interval hours” and press the [ENTER] button to set the alarm.

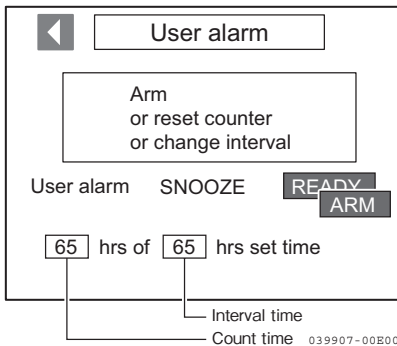


Figure 28

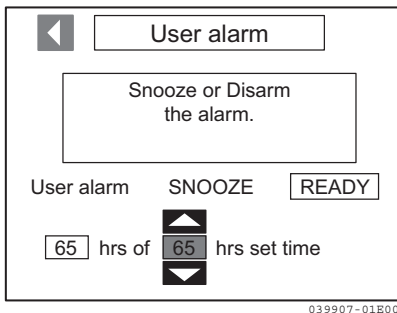


Figure 29

- The alarm function becomes valid by highlighting “ARM” and pressing the [ENTER] button. Return to the normal screen by pressing the [ENTER] button with the ◀ icon highlighted.
- You can temporarily stop the alarm by highlighting “SNOOZE” and pressing the [ENTER] button while the alarm is in operation. The temporary stop time is up to 1 hour and after 1 hour the alarm is activated again.

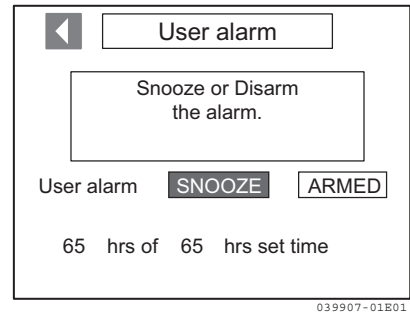


Figure 30

- You can disable the alarm by highlighting “DISARM” and pressing the [ENTER] button while the alarm is in operation.

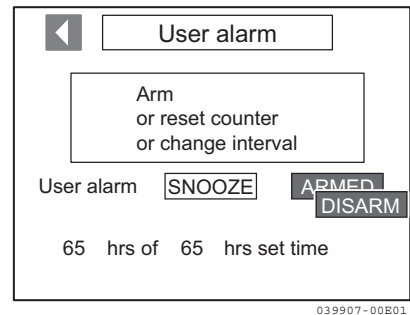


Figure 31

- You can reset the count hours by highlighting the count hours and pressing the [ENTER] button.

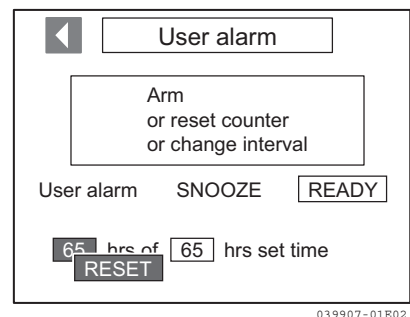


Figure 32

PRODUCT OVERVIEW

Switch Panel (to start and stop the engine)

The switch panel has the following functions.

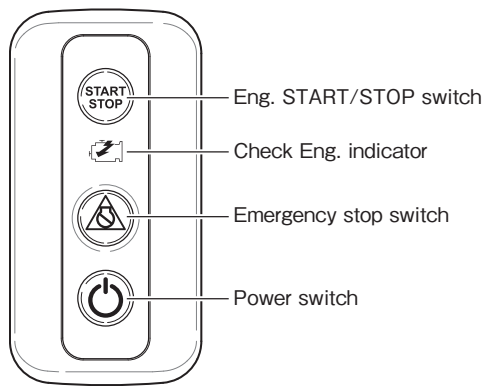


Figure 33

To start and stop the engine:

Press the START/STOP switch.

Emergency Stop Switch

Use this switch only in an emergency.

NOTICE

Under normal circumstances, do not use the Emergency stop switch to stop the engine.


The engine shuts down suddenly when the Emergency stop switch is pressed. After the engine has stopped, press the Emergency stop switch to release the emergency stop.

VESSEL CONTROL SYSTEM (VC20)

4LV common rail series engine is a fully electronic control engine, which is controlled by YANMAR's original "Vessel Control System (VC20)".

The control equipment consists of the Switch Panel, the Display, the Drive & Helm ECU, the Control Head and the Backup Panel, which are connected by the cable harness to the engine and marine gear or Stern drive for remote control operation.

Note: The YANMAR Vessel Control System (VC20) was designed to operate the 4LV common rail series and drive system. There are many control functions and diagnostic functions that are integrated together to insure safe operation. If this system is not utilized in specific accordance with the instructions in this manual or the system is modified in any way, YANMAR will not be responsible for any warranty failures in the operation of the system or the vessel utilizing the system. YANMAR has designed the Vessel Control System (VC20) in conjunction with the 4LV common rail series. The system has many functions that must be configured and calibrations must be made before the vessel can be operated. Please arrange to have a YANMAR trained technician inspect the vessel prior to the vessels operation.

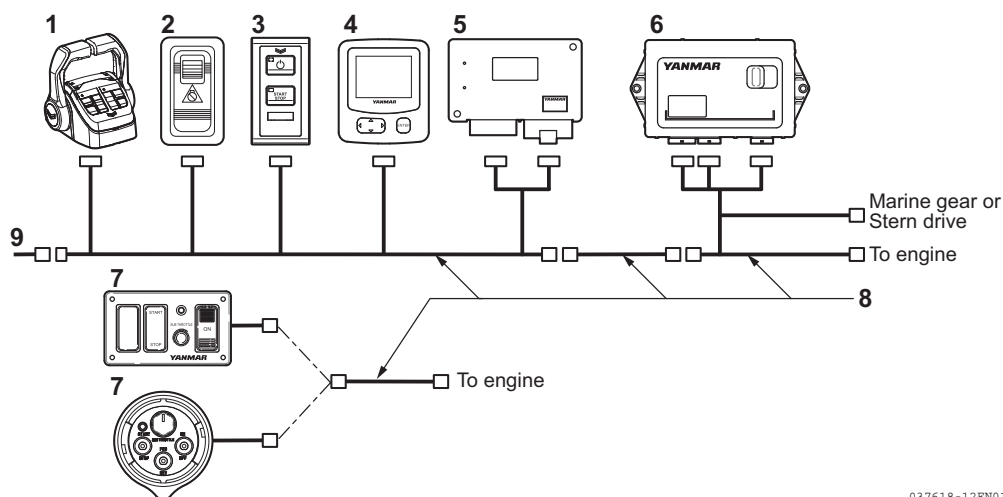

037618-12EN01

Figure 34

No.	Description	No.	Description
1	Shift and Throttle Control Head	6	Drive ECU
2	Emergency Stop Switch (Option)	7	Backup Panel *
3	Switch Panel (to start and stop the engine)	8	Cable Harness Set
4	Display	9	Adapter, Terminal
5	Helm ECU		

* The backup panel has two design types.

NOTICE

Compass safety distance for Shift and Throttle Control Head

Follow the compass safe distances to prevent interference to a magnetic compass.

Standard compass	Steering compass
0.45 m	0.30 m

Display

The multi-function information display has the following functions.

Display Function

Runtime Engine Data Tri-Screen

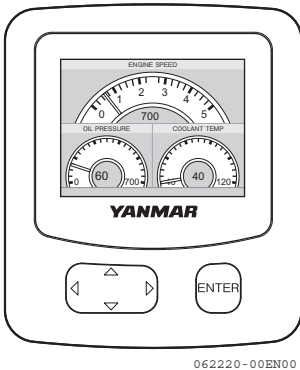


Figure 35

This screen displays real time engine data and alarm indications.

Alarm Indicators

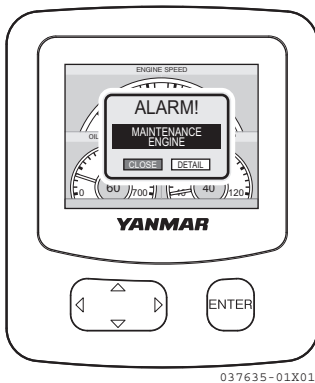


Figure 36

The alarm window appears with an audible alarm when abnormal engine activity occurs.

Note: When starting the engine, make it a rule to check that when the switch panel is pressed to the power switch, the welcome screen appears on the display and goes out. If the system does not function normally, consult your authorized YANMAR Marine dealer or distributor and ask for diagnostics.

Diag Codes Screen

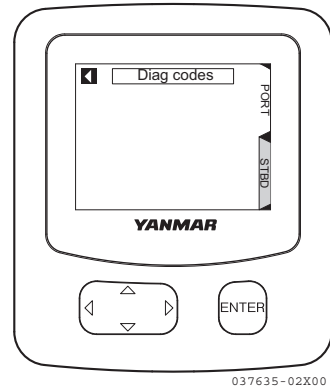


Figure 37

Alarm Indicator Functions

The alarm indicators and buzzer are activated when sensors detect an abnormality during engine operation. The alarm indicators are off during normal operation, but are activated as follows when an abnormality arises:

- The coolant temperature alarm indicator activates when the coolant gets too hot.
- The engine oil pressure alarm indicator activates when the engine oil pressure drops.
- The electric charge alarm indicator activates when there is a charging failure.

PRODUCT OVERVIEW

Operation of the Display's Buttons

Buttons





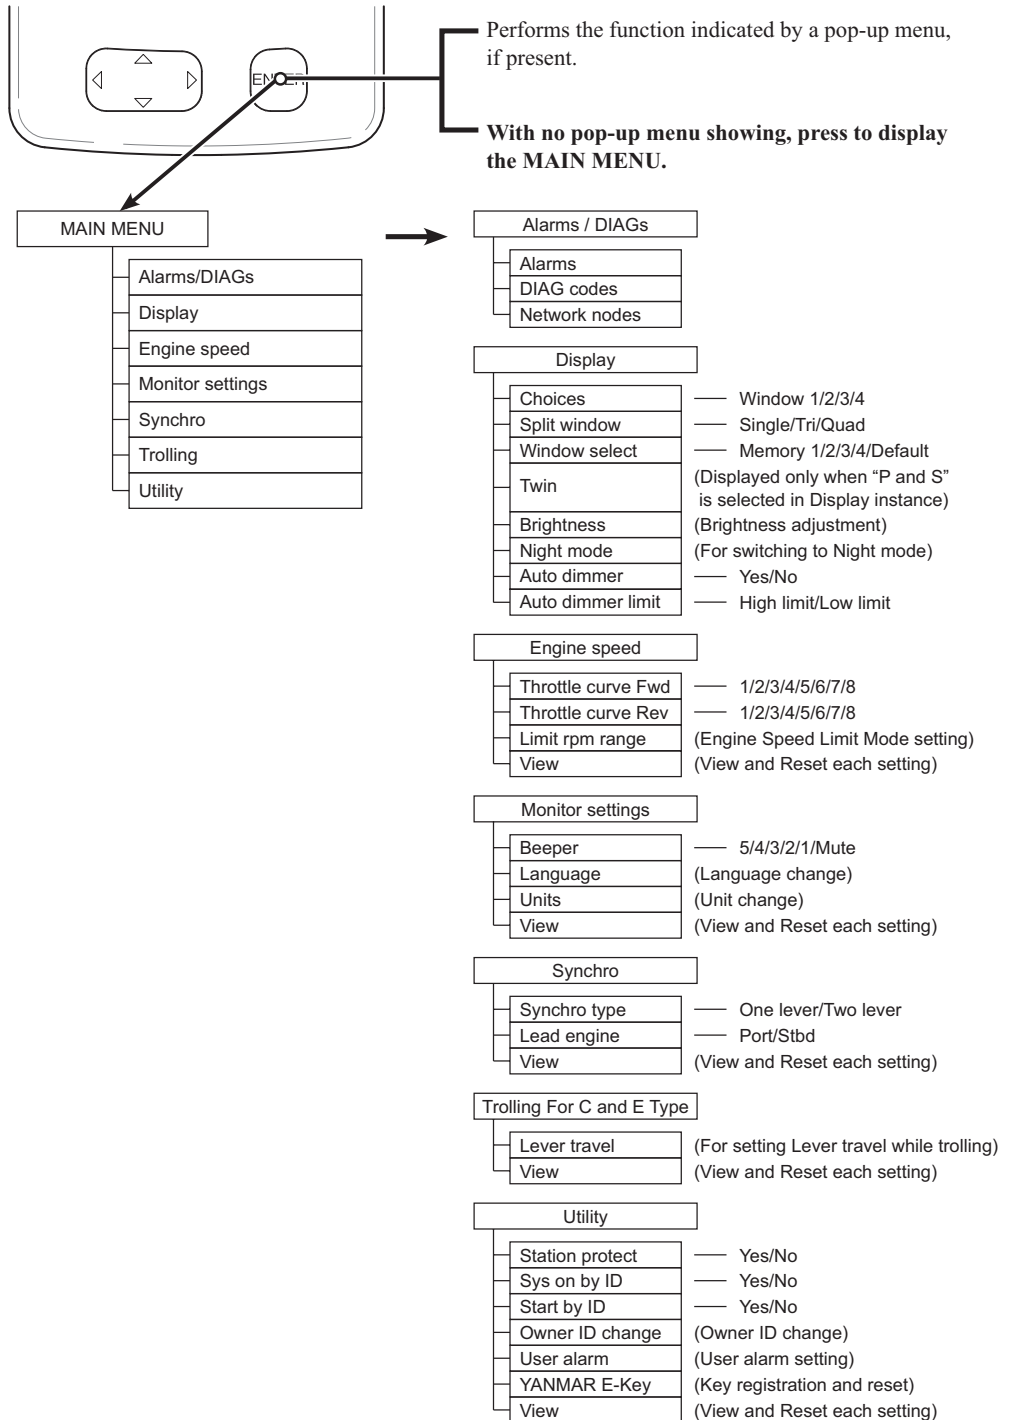
Figure 38

- Act on pop-up menu (MAIN MENU)
 - Perform the function
- ▲ Up Arrow moves menu selection up
- ▼ Down Arrow moves menu selection down
- ◀ Left Arrow acts on current menu item
- ▶ Right Arrow acts on current menu item

Hot Key List

Item	Operation	Indication
MAIN MENU	Press the [ENTER] button.	Display MAIN MENU.
MENU LAYER SKIP	Hold the ◀ button down for 1 second.	Close MENU and return to the normal screen.
ICON INFO	Press the ▼ button while the icon with a detail information indication function is displayed.	Display the related setting screen of the relevant icon. If there are multiple items, execute with the [ENTER] button after selecting with the ◀ ▶ buttons.
Adjusting Brightness	Press the ▲ button.	Display the brightness adjustment screen and adjust brightness with the ▲ ▼ buttons. (Manual dimmer mode only)
Switching Night Mode	Press the ◀ button.	Switch to the night mode indication.
Setting Complete	Hold the [ENTER] button down for 1 second while the  icon is highlighted.	Close the setting screen and MENU and return to the normal indication.
Switching Monitor Display Indication	Press the ▶ button.	Switch to the monitor screen in the normal indication. Send the screen in order with the ◀ ▶ buttons. The monitor screen is fixed when there is no operation with the ◀ ▶ buttons for 5 seconds.

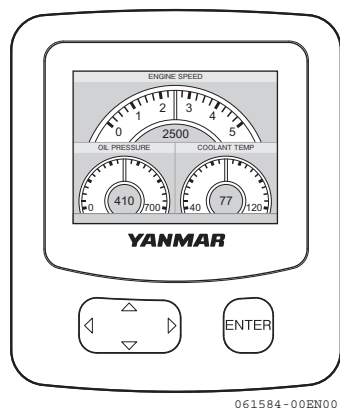Display Menu Navigation



147622-00EN

Figure 39

PRODUCT OVERVIEW

Available data on the display

Display	Choices	Window 1/2/3/4	Engine	Battery voltage	Digital
			Engine	Boost pressure	Gauge/digital
				Coolant temp	Gauge/digital
				Engine speed	Gauge/digital
				Load	Gauge/digital
				Oil pressure	Gauge/digital
				Oil temp	Gauge/digital
				Running hours	Gauge/digital
				Throttle	Gauge/digital
			Drive	Prop speed	Gauge/digital
				Rudder position	Gauge/gauge (Port) Gauge/gauge (Stbd)
				Shift position	
				Trim tab position	Digital/bar
				Tilt position	Digital/bar
				Transmission P	Gauge/digital
				Transmission T	Gauge/digital
				Trolling status	Digital
			Boat	Boat speed	Digital
				Tank1	Digital/bar
				Tank2	Digital/bar
				House battery voltage	Digital
				Outside temp	Digital
				Seawater temp	Digital
			Eco	Fuel rate	Digital

Available languages on the monitor settings


Monitor settings	Language	English / Spanish / French / Italian / German / Dutch / Norwegian / Portuguese
------------------	----------	--

Available data on the display

Monitor settings	Units	Pressure	psi/kPa/bar
		Temperature	°F/°C
		Tank	%/Ltr/gal/USgal
		Fuel consumption	Ltr/hr, gal/hr, USgal/hr
		Boat speed	MPH, km/h, Knots

Throttle Curve Selection

1. There are 8 patterns for forward and 8 patterns for reverse in the throttle curve.
2. Select each pattern on the display. A different curve can be selected respectively for forward/reverse.

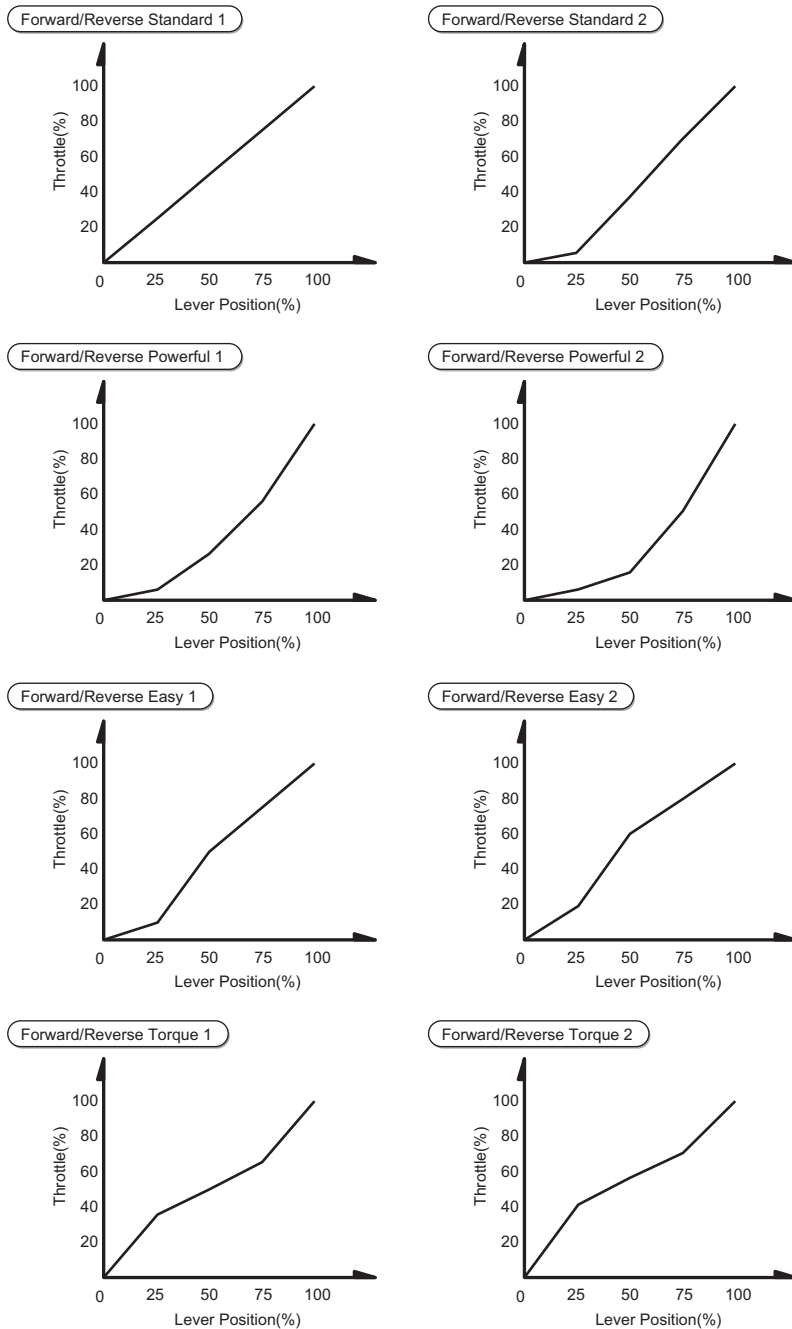

147624-00EN

Figure 40

Display Icons

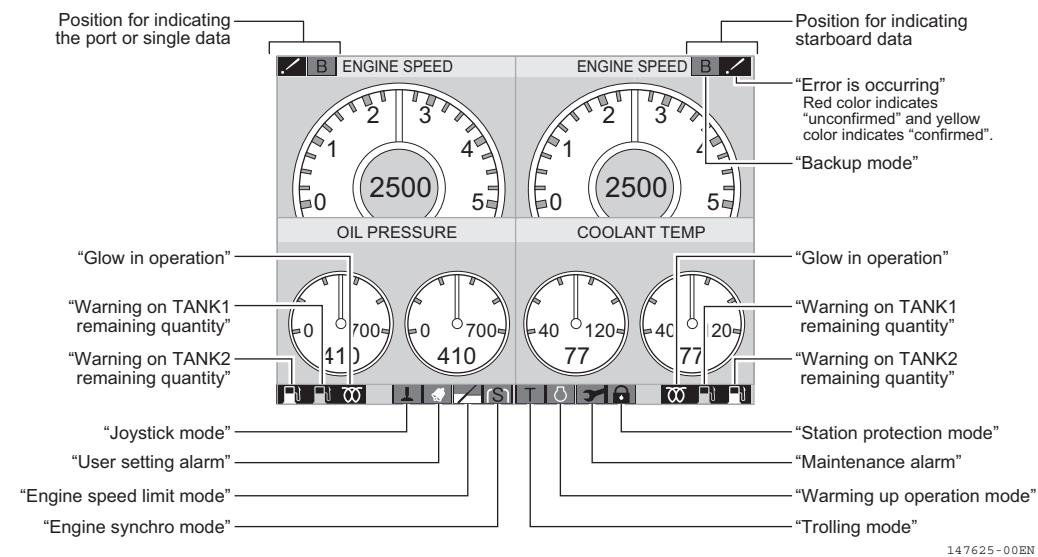


Figure 41

Error Indication

When the ECU detects an abnormality in the engine, drive, or boat, the alarm popup is displayed on the screen.

When there are multiple alarm popups, they are displayed in order of priority.
[Priority] WARNING > NOTICE > ALARM

Selecting the "CLOSE" or "DETAIL" button and pressing the [ENTER] button makes the alarm popup disappear.

If Alarm is indicated, select "DETAIL" and press the "ENTER" button to indicate the Diagnosis Trouble Code.
(See *FAILSAFE DIAGNOSIS FUNCTIONAL SPECIFICATION CHART* on page 190.)

The following functions can be selected in "Alarm/DIAGs" in the MAIN MENU.

- Alarms: Displays warnings and notices for the operator to use the system safely and appropriately.
- DIAG codes: Confirms the details of the abnormality that occurred.
- Network nodes: Confirms the conditions of the connected ECU etc.



Figure 42

User Alarm

The alarm can be activated by setting operating hours, which is also used as a timer function.

- Select “User alarm”, highlight “READY/ARM” with the ► button, highlight the “Interval hours” and press the [ENTER] button to set the alarm.

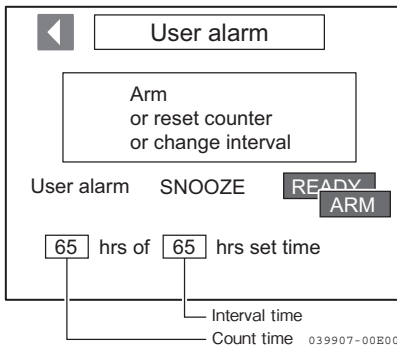


Figure 43

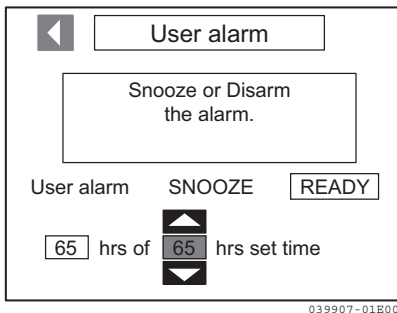


Figure 44

- The alarm function becomes valid by highlighting “ARM” and pressing the [ENTER] button. Return to the normal screen by pressing the [ENTER] button with the ◀ icon highlighted.
- You can temporarily stop the alarm by highlighting “SNOOZE” and pressing the [ENTER] button while the alarm is in operation. The temporary stop time is up to 1 hour and after 1 hour the alarm is activated again.

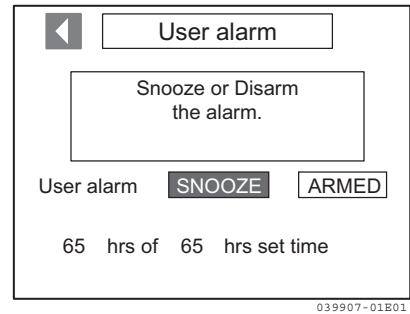


Figure 45

- You can disable the alarm by highlighting “DISARM” and pressing the [ENTER] button while the alarm is in operation.

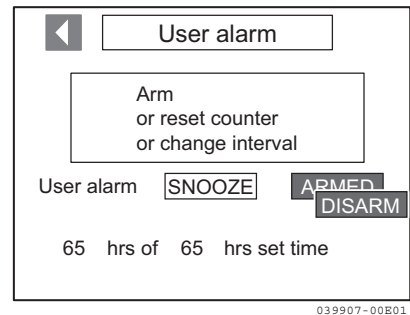


Figure 46

- You can reset the count hours by highlighting the count hours and pressing the [ENTER] button.

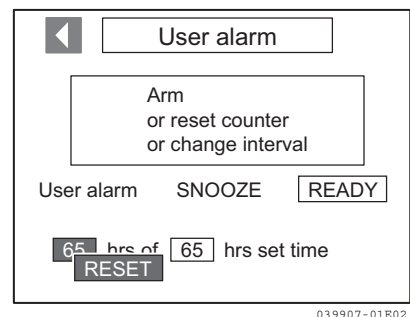


Figure 47

PRODUCT OVERVIEW

Dimmer Linkage

The same brightness as the setting of Display is applied to Switch panel and Control head.

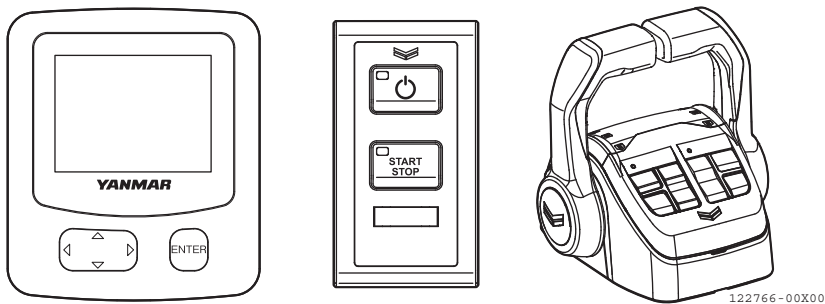


Figure 48

Auto Dimmer

Auto dimmer is enabled, the brightness of each device is automatically adjusted according to the ambient brightness.

- 1. Select “Auto dimmer”.
(Display: Auto dimmer)
 - “YES”: Auto dimmer mode
 - “NO”: Manual dimmer mode

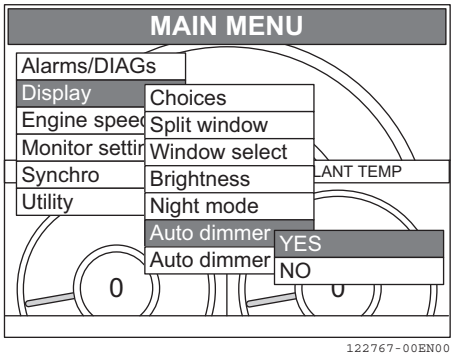


Figure 49

- 2. Select “Auto dimmer limit”.
(Display: Auto dimmer limit)

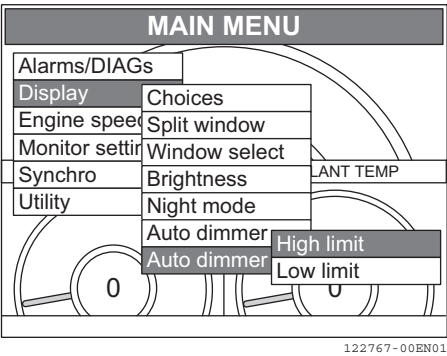


Figure 50

- 3. Set the minimum and maximum brightness as required.
 - The brightness is adjusted in 8 steps.

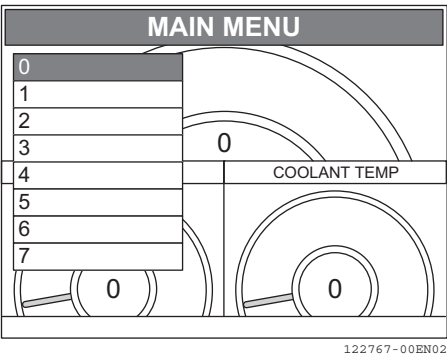


Figure 51

Switch Panel (to start and stop the engine)

The switch panel has the following functions.

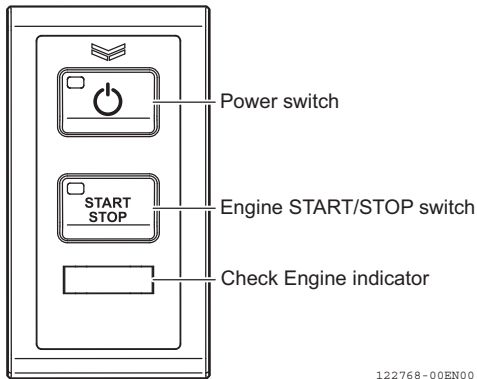


Figure 52

To start and stop the engine:

Press the START/STOP switch.

Emergency Stop Switch (Option)

Use this switch only in an emergency.

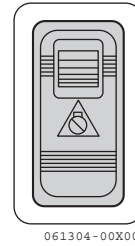


Figure 53

NOTICE

Under normal circumstances, do not use the Emergency stop switch to stop the engine.

The engine shuts down suddenly when the Emergency stop switch is pressed.


After the engine has stopped, press the Emergency stop switch to release the emergency stop.

VESSEL CONTROL SYSTEM (VC30)

4LV common rail series engine is a fully electronic control engine, which is controlled by YANMAR’s original “Vessel Control System (VC30)”.

The control equipment consists of the Switch Panel, the Marine ECU, the Control Head and the Backup Panel, which are connected by the cable harness to the engine and marine gear or Stern drive for remote control operation.

Note: The YANMAR Vessel Control System (VC30) was designed to operate the 4LV common rail series and drive system. There are many control functions and diagnostic functions that are integrated together to insure safe operation. If this system is not utilized in specific accordance with the instructions in this manual or the system is modified in any way, YANMAR will not be responsible for any warranty failures in the operation of the system or the vessel utilizing the system. YANMAR has designed the Vessel Control System (VC30) in conjunction with the 4LV common rail series. The system has many functions that must be configured and calibrations must be made before the vessel can be operated. Please arrange to have a YANMAR trained technician inspect the vessel prior to the vessels operation.

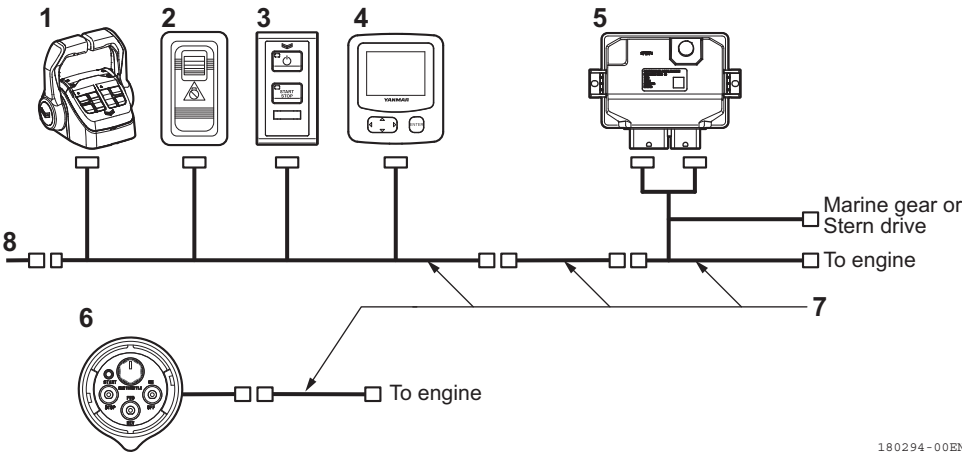

180294-00EN

Figure 54

No.	Description	No.	Description
1	Shift and Throttle Control Head	5	Marine ECU
2	Emergency Stop Switch (Option)	6	Backup Panel
3	Switch Panel (to start and stop the engine)	7	Cable Harness Set
4	Display	8	Adapter, Terminal

NOTICE

Compass safety distance for Shift and Throttle Control Head

Follow the compass safe distances to prevent interference to a magnetic compass.

Standard compass	Steering compass
0.45 m	0.30 m

PRODUCT OVERVIEW

Display

The multi-function information display has the following functions.

Display Function

Run Time Engine Data Screen

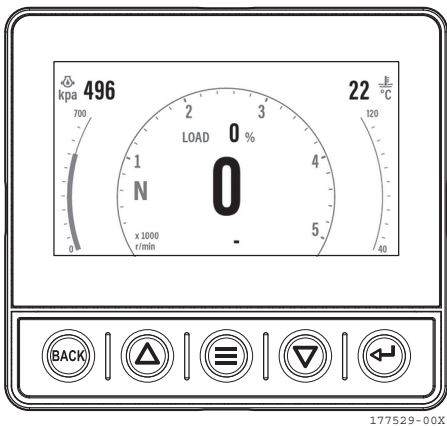


Figure 55

This screen displays real time engine data and alarm indications.

Alarm Indicators

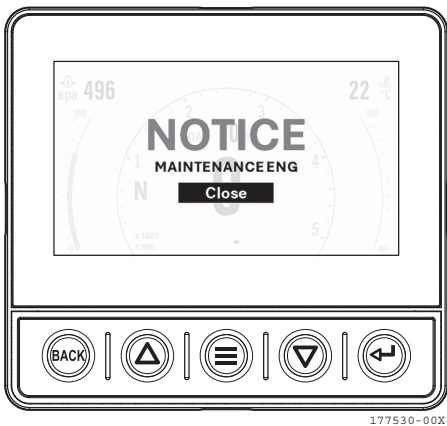


Figure 56

The alarm window appears with an audible alarm when abnormal engine activity occurs.

Note: When starting the engine, make it a rule to check that when the switch panel is pressed to the power switch, the welcome screen appears on the display and goes out. If the system does not function normally, consult your authorized YANMAR Marine dealer or distributor and ask for diagnostics.

Diag Codes Screen

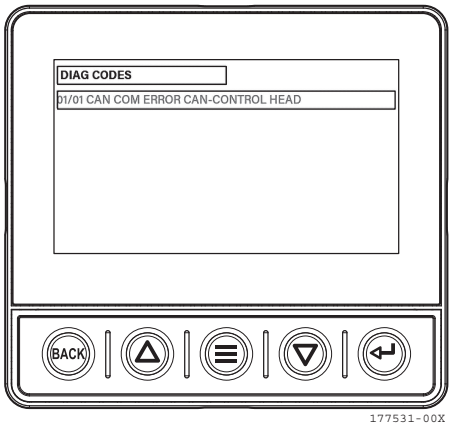


Figure 57

Alarm Indicator Functions

The alarm indicators and buzzer are activated when sensors detect an abnormality during engine operation. The alarm indicators are off during normal operation, but are activated as follows when an abnormality arises:

- The coolant temperature alarm indicator activates when the coolant gets too hot.
- The engine oil pressure alarm indicator activates when the engine oil pressure drops.
- The electric charge alarm indicator activates when there is a charging failure.

Operation of the Display's Buttons

Buttons

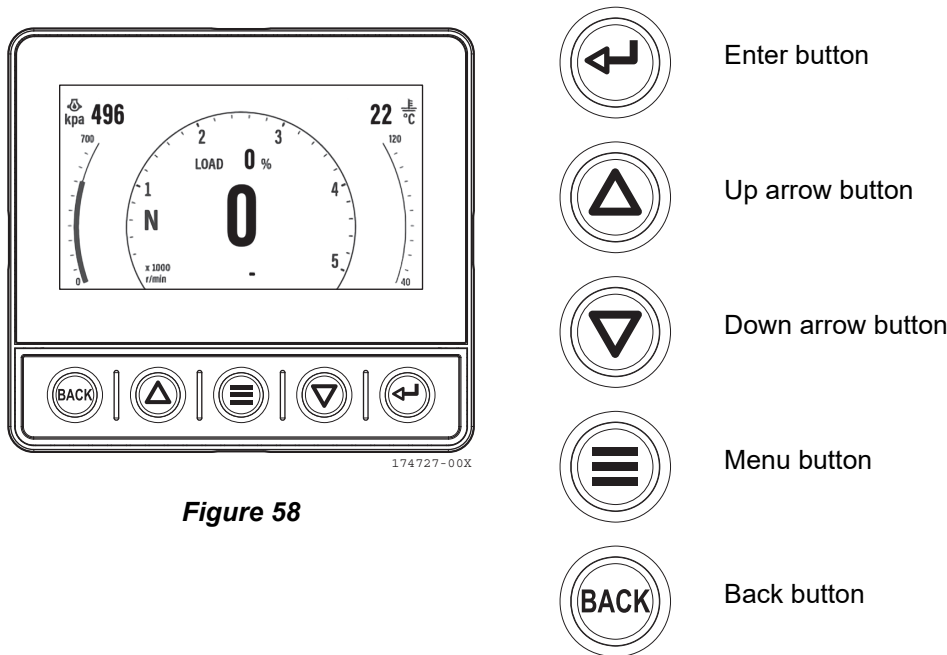


Figure 58


Hot Key List

Item	Operation	Indication
MAIN MENU	Press the menu button.	Display MAIN MENU.
MENU LAYER SKIP	Press the menu button.	Close MENU and return to the normal screen.
Quick menu	Press the enter button.	Quick menu items are as follows: <ul style="list-style-type: none">• Display the brightness adjustment• Switching day mode/night mode• Muting the key operation sound
Switching night mode	Press the back button.	Switch to the night mode indication.
Switching monitor display indication	Press the up/down arrow buttons.	Switch to the monitor screen in the normal indication. Send the screen in order with the up/down arrow buttons.

Copyright

This product consists of software licensed under The MIT License (MIT).
For more information, see <https://github.com/aws/amazon-freertos/blob/main/LICENSE>.

Display Menu Navigation

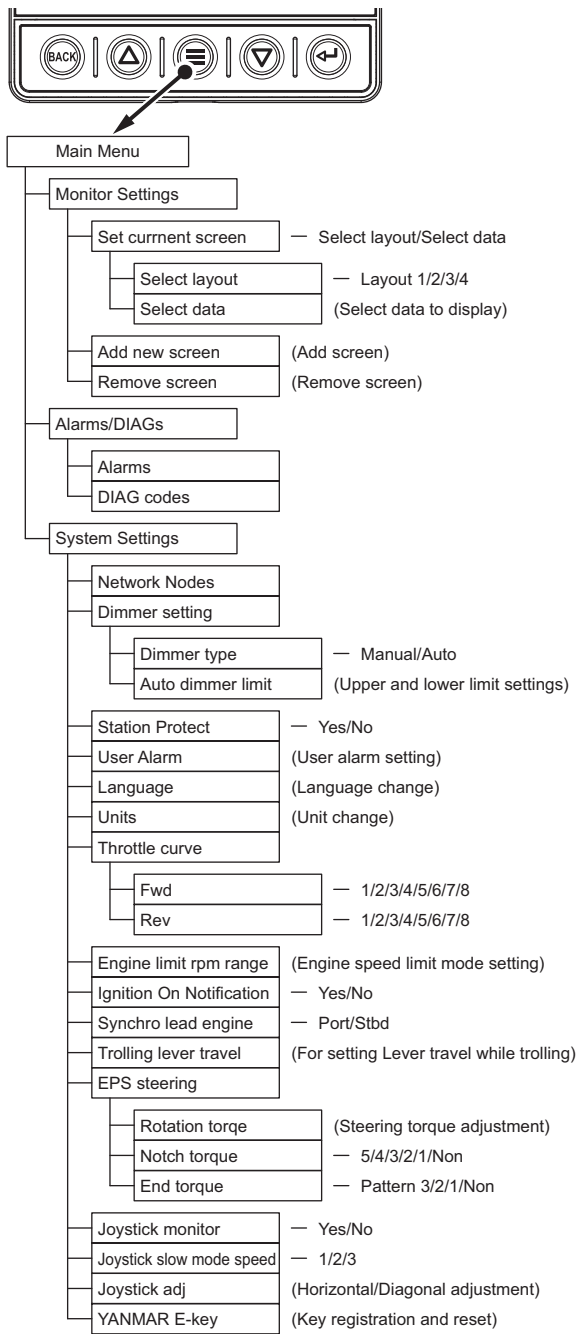

174728-00EN

Figure 59

Note: Some menu items may not be displayed depending on the system configuration.

Available data on the display

Monitor settings	Set current screen	Select data	Engine	Battery voltage
				Boost pressure
				Coolant temp
				Engine speed
				EXH.TEMP TC IN 1
				EXH.TEMP TC IN 2
				EXH.TEMP TC OUT
				Fuel rate
				Load
				Oil pressure
				Oil temperature
				Running hours
				Throttle (Marine)
				Throttle (Engine)
			Drive	Drive trim
				Gear oil pressure
				Gear oil temperature
				Gear position
				Propeller speed
				Rubber position
				Trim tab
				Trolling position
			Boat	Service battery voltage
				Speed over ground
				Speed through water
				Tank1
				Tank2
				Tank1 (NMEA2000)
				Tank2 (NMEA2000)
				Water temperature

Available languages on the monitor settings


System settings	Language	English / Spanish / French / Italian / German / Dutch / Norwegian / Portuguese
-----------------	----------	--

Available data on the display

System settings	Units	Pressure	psi/kPa/bar
		Temperature	°F/°C
		Tank	%/Ltr/gal/USgal
		Fuel consumption	Ltr/hr, gal/hr, USgal/hr
		Boat speed	MPH, km/h, Knots

Throttle Curve Selection


- 1. There are 8 patterns for forward and 8 patterns for reverse in the throttle curve.
- 2. Select each pattern on the display. A different curve can be selected respectively for forward/reverse.

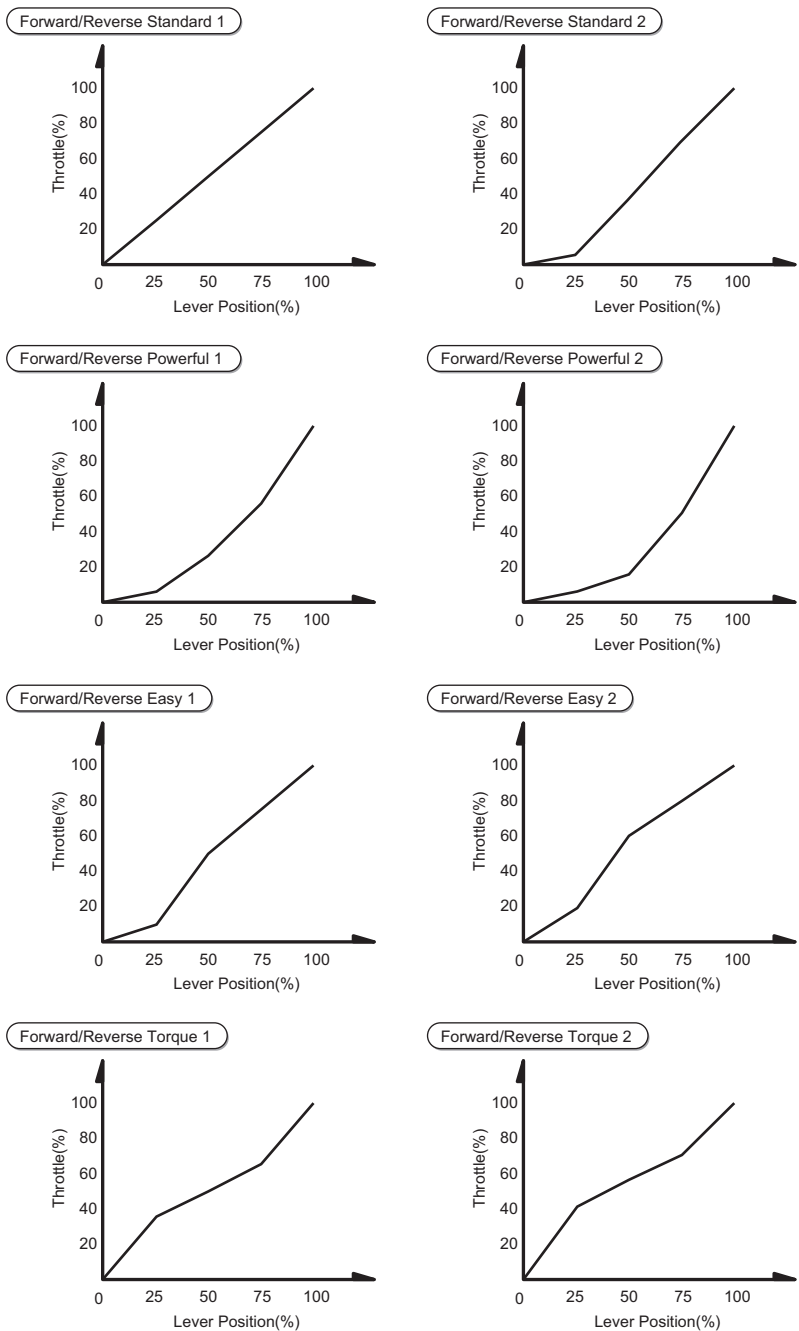

147624-00EN

Figure 60

Display Icons

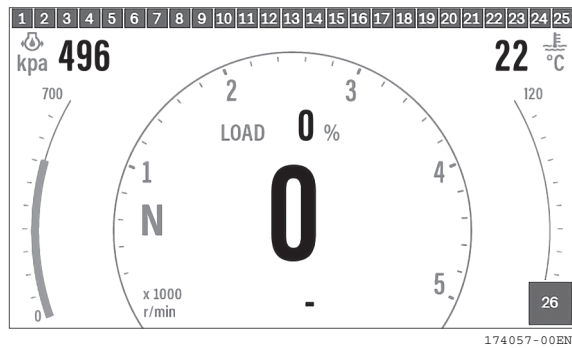

Display area	Icons	Icon name
1	—	—
2	—	—
3	—	—
4	—	—
5	—	—
6	—	—
7	—	—
8	—	—
9	—	—
10		User alarm
11		Autopilot mode
12		Joystick mode
13		Speed limit mode / Trolling mode / Warm up mode

Display area	Icons	Icon name
14		Engine synchro mode
15		Maintenance time
16		Station protect mode
17		Insufficient GPS preparation
18	—	—
19		Cylinder cut off mode
20		Pre-heat
21		Tank2 condition
22		Tank1 condition
23		Lanyard
24		Backup mode
25		DIAG occurring
26		Station information

Figure 61

PRODUCT OVERVIEW

Error Indication

When the ECU detects an abnormality in the engine, drive, or boat, the alarm popup is displayed on the screen.

When there are multiple alarm popups, they are displayed in order of priority.
[Priority] WARNING > NOTICE

Selecting the “CLOSE” or “DETAIL” button and pressing the [ENTER] button makes the alarm popup disappear.

If Alarm is indicated, select “DETAIL” and press the “ENTER” button to indicate the Diagnosis Trouble Code.
(See *FAILSAFE DIAGNOSIS FUNCTIONAL SPECIFICATION CHART* on page 190.)

The following functions can be selected in “Alarm/DIAGs” in the MAIN MENU.

- Alarms: Displays warnings and notices for the operator to use the system safely and appropriately.
- DIAG codes: Confirms the details of the abnormality that occurred.
- Network nodes: Confirms the conditions of the connected ECU etc.

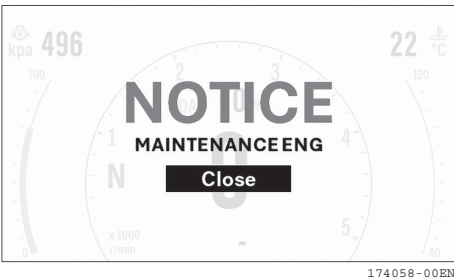


Figure 62

User Alarm

The alarm can be activated by setting operating hours, which is also used as a timer function.

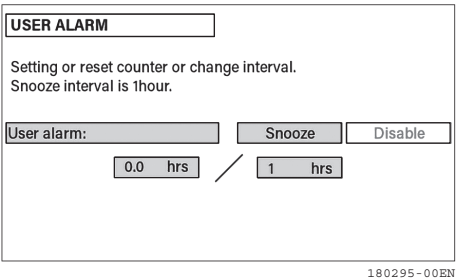


Figure 63

- When the user alarm is “Disable”, select “Interval hours” and press the enter button to set the alarm.

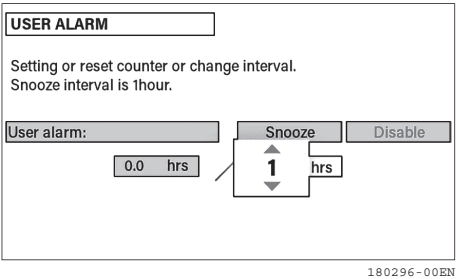


Figure 64

- Select “Disable” and press the enter button to “Enable” the user alarm.
- When the user alarm is active, the alarm popup is displayed on the screen.



Figure 65

- When the alarm is in operation, select “Snooze” and press the enter button to temporarily stop the alarm. The temporary stop time is 1 hour and after 1 hour the alarm is activated again.

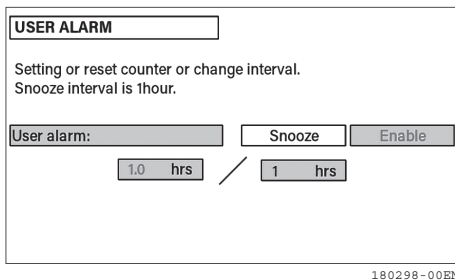


Figure 66

- Select “Enable” and press the enter button to “Disable” the user alarm.

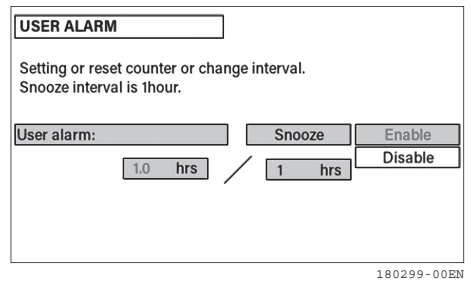


Figure 67

- You can reset the count hours by highlighting the count hours and press the enter button.

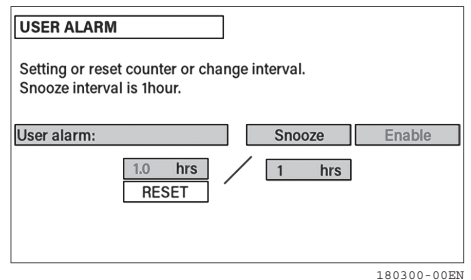


Figure 68

PRODUCT OVERVIEW

Dimmer Linkage

The same brightness as the setting of Display is applied to Switch panel and Control head.

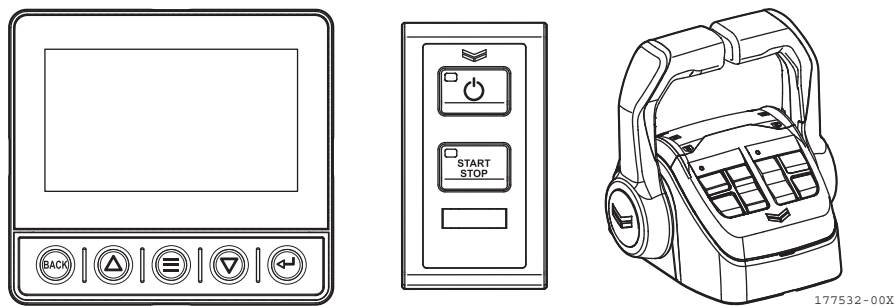


Figure 69

Auto Dimmer

Auto dimmer is enabled, the brightness of each device is automatically adjusted according to the ambient brightness.

- 1. Select “Dimmer”.
(Dimmer setting: Dimmer)
 - “Auto”: Auto dimmer mode
 - “Manual”: Manual dimmer mode

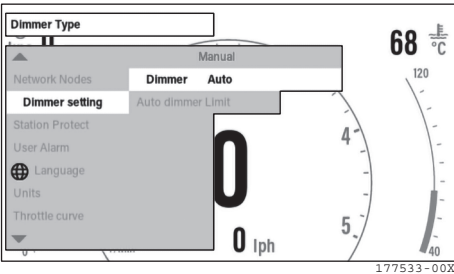


Figure 70

- 2. Select “Auto dimmer Limit”.
(Dimmer setting: Auto dimmer Limit)

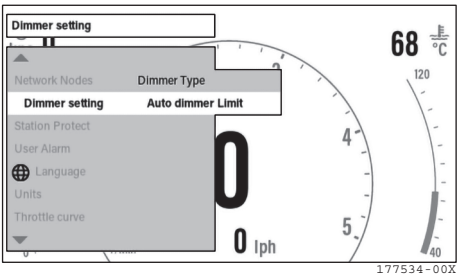


Figure 71

- 3. Set the minimum and maximum brightness as required.
 - The brightness is adjusted in 8 steps.

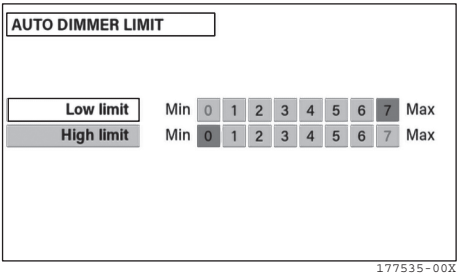


Figure 72

Switch Panel (to start and stop the engine)

The switch panel has the following functions.

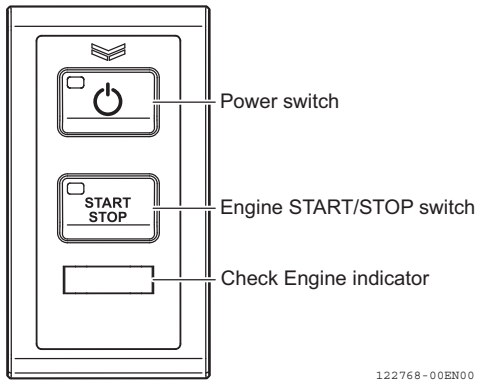


Figure 73

To start and stop the engine:

Press the START/STOP switch.

Emergency Stop Switch (Option)

Use this switch only in an emergency.

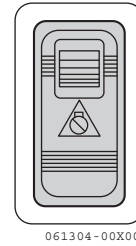


Figure 74

NOTICE

Under normal circumstances, do not use the Emergency stop switch to stop the engine.

The engine shuts down suddenly when the Emergency stop switch is pressed. After the engine has stopped, press the Emergency stop switch to release the emergency stop.

This Page Intentionally Left Blank

BEFORE YOU OPERATE

INTRODUCTION

This section of the *Operation Manual* describes the diesel fuel, engine oil and engine coolant specifications and how to replenish them.

SAFETY PRECAUTIONS

Before performing any operations within this section, review the *SAFETY section on page 3*.

DIESEL FUEL

Diesel Fuel Specifications

 **WARNING**

Fire and Explosion Hazard!

Diesel fuel is flammable and explosive under certain conditions.

NOTICE

Only use diesel fuels recommended by YANMAR for the best engine performance, to prevent engine damage and to comply with EPA warranty requirements. Only use clean diesel fuel.

Diesel fuel should comply with the following specifications. The table lists several worldwide specifications for diesel fuels.

DIESEL FUEL SPECIFICATION	LOCATION
ASTM D975 No. 2-D S15, No. 1-D S15	USA
EN590-2009	European Union
ISO 8217 DMX	International
BS 2869-A1 or A2	United Kingdom
JIS K2204 Grade No. 2	Japan

Biodiesel Fuels

YANMAR approves the use of biodiesel fuels that do not exceed a blend of 7% non-mineral oil based fuel with 93% standard diesel fuel. Such biodiesel fuels are known in the marketplace as B7 biodiesel fuels. B7 biodiesel fuel can reduce particulate matter and the emission of “greenhouse” gases compared to standard diesel fuel.

If the B7 biodiesel fuel used does not meet the approved specifications, it will cause abnormal wear of injectors, reduce the life of the engine and it may affect the warranty coverage of your engine.

B7 diesel fuels must meet certain specifications.

The biodiesel fuels must meet the minimum specifications for the country in which they are used:

- In Europe, biodiesel fuels must comply with the European Standard EN590-2009, EN14214.
- In the United States, biodiesel fuels must comply with the American Standard ASTM D-6751 Grade-S15, D7467 Grade B7-S15.

Biodiesel should be purchased only from recognized and authorized diesel fuel suppliers.

Precautions and concerns regarding the use of biofuels:

- Biodiesel fuels have a higher content of methyl-esters, which may deteriorate certain metal, rubber and plastic components of the fuel system. The customer and/or boat builder are responsible to verify the usage of biodiesel compatible components on the vessel fuel supply and return systems.
- Free water in biodiesel may result in plugging of fuel filters and increased bacterial growth.
- High viscosity at low temperatures may result in fuel delivery problems, supply pump seizures and poor injection nozzle spray atomization.
- Biodiesel may have adverse effects on some elastomers (seal materials) and may result in fuel leakage and dilution of the engine lubricating oil.

- Even biodiesel fuels that comply with a suitable standard as delivered will require additional care and attention to maintain the quality of the fuel in the equipment or other fuel tanks. It is important to maintain a supply of clean, fresh fuel. Regular flushing of the fuel system, and/or fuel storage containers, may be necessary.
- The use of biodiesel fuels that do not comply with the standards as agreed to by the diesel engine manufacturers and the diesel fuel injection equipment manufacturers, or biodiesel fuels that have degraded as per the precautions and concerns above, may affect the warranty coverage of your engine.

Additional Technical Fuel Requirements

- The fuel cetane number should be 45 or higher.
- The sulfur content must not exceed 0.5% by volume. Less than 0.05% is preferred. Especially in U.S.A. and Canada, Ultra Low sulfur fuel (≤ 15 ppm) must be used.
- Never mix kerosene, used engine oil or residual fuels with the diesel fuel.
- Water and sediment in the fuel should not exceed 0.05% by volume.
- Keep the fuel tank and fuel-handling equipment clean at all times.
- Ash content not to exceed 0.01% by volume.
- Carbon residue content not to exceed 0.35% by volume. Less than 0.1% is preferred.
- Total aromatics content should not exceed 35% by volume. Less than 30% is preferred.
- PAH (polycyclic aromatic hydrocarbons) content should be below 10% by volume.
- Do not use Biocide.
- Lubricity: Wear mark of WS1.4 should be Max. 0.016 in. (400 μ m) at HFRR test.

BEFORE YOU OPERATE

Handling of Diesel Fuel

WARNING

Fire and Explosion Hazard!

- Only fill the fuel tank with diesel fuel. Filling the fuel tank with gasoline may result in a fire and will damage the engine. Never refuel with the engine running. Wipe up all spills immediately. Keep sparks, open flames or any other form of ignition (match, cigarette, static electric source) well away when refueling.
- Always put the diesel fuel container on the ground when transferring the diesel fuel from the pump to the container. Hold the hose nozzle firmly against the side of the container while filling it. This prevents static electricity buildup which could cause sparks and ignite fuel vapors.

1. Water and dust in the fuel may cause engine failure. When fuel is stored, be sure that the inside of the storage container is clean and dry, and that the fuel is stored away from dirt or rain.



Figure 1

2. Keep the fuel container stationary for several hours to allow any dirt or water to settle to the bottom of the container. Use a pump to extract the clear, filtered fuel from the top of the container.

Fuel Tank (Optional)

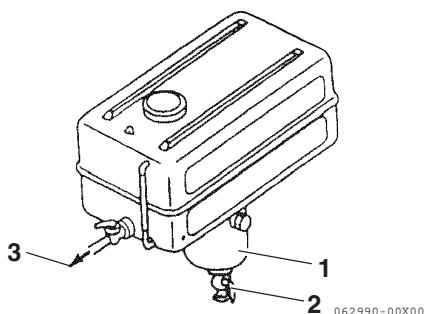


Figure 2

- 1 – Sediment Bowl
- 2 – Drain Cock
- 3 – Fuel Line to Engine

Install a drain cock (**Figure 2, (2)**) at the bottom of the fuel tank to remove water and contaminants from the sediment bowl (**Figure 2, (1)**).

The fuel outlet should be positioned 20 to 30 mm (0.79 to 1.18 in.) above the bottom of the tank so that only clean fuel is distributed to the engine.

Fuel System

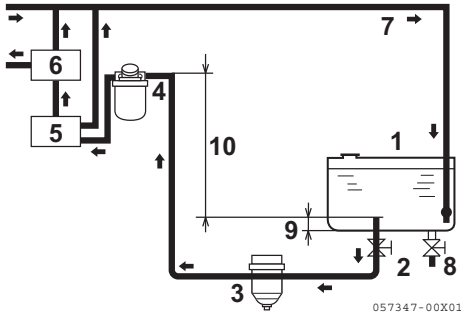


Figure 3

- 1 – Fuel Tank
- 2 – Fuel Cock
- 3 – Pre-filter (Water separator: Option)
- 4 – Fuel filter (with priming pump)
- 5 – Fuel supply pump
- 6 – Common rail
- 7 – Fuel return line
- 8 – Drain cock
- 9 – Approximately 20 to 30 mm (0.79 to 1.18 in.)
- 10 – Less than 500 mm (19.7 in.)

Install the fuel line from the fuel tank to the fuel supply pump as shown in **Figure 3**. The pre-filter (fuel/water separator: Optional) is installed at the intermediate section of that line.

Filling the Fuel Tank

Before filling fuel tank for the first time:

⚠ WARNING

Fire and Explosion Hazard!
Never refuel with the engine running.

Rinse fuel tank with kerosene or diesel fuel. Dispose of waste properly.

To fill the fuel tank:

⚠ WARNING

Fire and Explosion Hazard!
Operate bilge ventilation (blowers) for a minimum of 5 minutes to purge fumes from engine compartment after refueling. Never operate bilge blower while refueling. Doing so can pump explosive fumes into the engine compartment and result in an explosion.

1. Clean the area around the fuel cap.
2. Remove the fuel cap from the fuel tank.
3. Fill the tank with clean fuel free of oil and dirt.

⚠ WARNING

Fire and Explosion Hazard!
Hold the hose nozzle firmly against the filler port while filling. This prevents static electricity buildup which could cause sparks and ignite fuel vapors.

4. Stop fueling when the gauge shows the fuel tank is full.

⚠ WARNING

Fire and Explosion Hazard!
Never overfill the fuel tank.

5. Replace the fuel cap and hand-tighten. Over-tightening the fuel cap will damage it.

BEFORE YOU OPERATE

Bleeding the Fuel System

Bleeding must be done if any fuel system maintenance has been performed (replacement of fuel filter, etc.) or if the engine does not start after several attempts.

The fuel system needs to be primed under certain conditions:

- Before starting the engine for the first time.
- After running out of fuel and fuel has been added to the fuel tank.
- After fuel system maintenance such as changing the fuel filter and draining the fuel filter/water separator, or replacing a fuel system component.

WARNING

Fire and Explosion Hazard!

- Diesel fuel is flammable and explosive under certain conditions.
- Failure to comply could result in death or serious injury.

Exposure Hazard!

Always wear safety glasses when bleeding the fuel system.

Bleeding the fuel filter

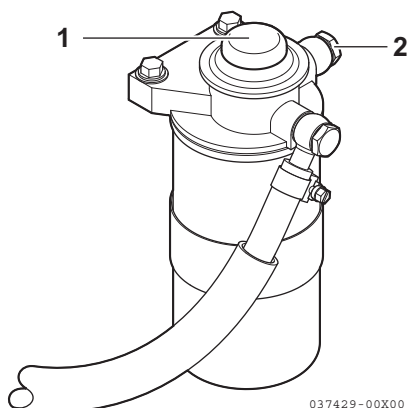


Figure 4

1. Check the fuel level in the fuel tank. Refill if necessary.
2. Open the fuel cock of the fuel tank.
3. Loosen the air bleed screw (**Figure 4, (2)**) two to three turns.
4. Push up and down on the priming pump (**Figure 4, (1)**) to release air out of the air bleed screw.
5. Continue pumping until a stream of fuel with no air bubbles begins to flow.
6. Tighten the air bleed screw.

NOTICE

Never use the starter motor to crank the engine in order to prime the fuel system. This may cause the starter motor to overheat and damage the coils, pinion and/or ring gear.

ENGINE OIL

Engine Oil Specifications

Using engine oil that does not meet or exceed the following guidelines or specifications may cause seizure of parts, abnormal wear and shorten engine life.

Service Categories

Use an engine oil that meets or exceeds the following guidelines and classifications:

- API Service Categories CD, CF, CF-4, CI and CI-4.
- SAE Viscosity: 15W-40. Engine oil 15W-40 can be used throughout the year.

NOTICE

- Be sure the engine oil, engine oil storage containers and engine oil filling equipment are free of sediment or water.
- Change the engine oil after the first 50 hours of operation and then at every 250 hours thereafter.
- Select the oil viscosity based on the ambient temperature where the engine is being operated. See the SAE Service Grade Viscosity Chart (**Figure 5**).
- YANMAR does not recommend the use of engine oil “additives”.

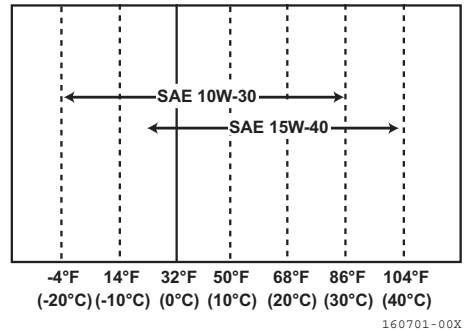


Figure 5

Handling Engine Oil

1. When handling and storing engine oil, be careful not to allow dust and water to contaminate the oil. Clean around the filler port before filling.
2. Do not mix lube oils of different types or brands. Mixing may cause the chemical characteristics of the oil to change and lubricating performance to decrease, reducing the engine's life.
3. Engine oil should be replaced at the specified intervals, regardless if the engine has been operated.

Engine Oil Viscosity

SAE 15W-40 is the recommended oil viscosity.

If you operate your equipment at temperatures outside the limits shown, consult your authorized YANMAR dealer or distributor for special lubricants or starting aids.

Checking the Engine Oil

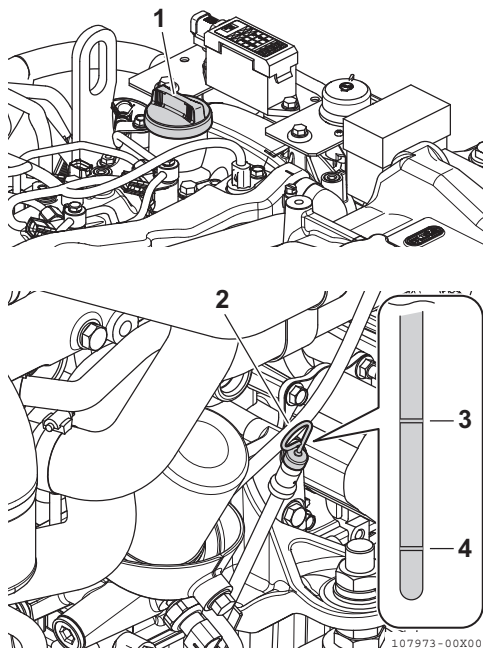


Figure 6

- 1 – Engine oil filler port cap
(On the rocker arm cover)**
- 2 – Dipstick**
- 3 – Upper Limit**
- 4 – Lower Limit**

1. Make sure the engine is level.
2. Remove dipstick (**Figure 6, (2)**) and wipe with clean cloth.
3. Fully reinsert dipstick.
4. Remove dipstick. The oil level should be between upper (**Figure 6, (3)**) and lower (**Figure 6, (4)**) lines on the dipstick.
5. Add oil if necessary. See *Adding Engine Oil* on page 71.
6. Fully reinsert dipstick.

Adding Engine Oil

1. Remove the oil filler port cap from filler port (**Figure 6, (1)**) and fill with engine oil.

NOTICE

Prevent dirt and debris from contaminating engine oil. Carefully clean the dipstick and the surrounding area before you remove the cap.

2. Fill with oil to the upper limit (**Figure 6, (3)**) on the dipstick (**Figure 6, (2)**).

NOTICE

Never overfill the engine with engine oil.

3. Insert the dipstick fully to check the level.

NOTICE

Always keep the oil level between upper and lower lines on the oil cap/dipstick.

4. Hand-tighten the filler port cap securely.

MARINE GEAR OIL

Note: Refer to the marine gear manufacturer's operation manual for the marine gear oil specifications.

Marine Gear Oil Specifications

Use marine gear oil that meets or exceeds the following guidelines and classifications:

KMH50A, KMH50V (Option):

- API Service Categories CD or higher
- SAE Viscosity #30

Checking Marine Gear Oil

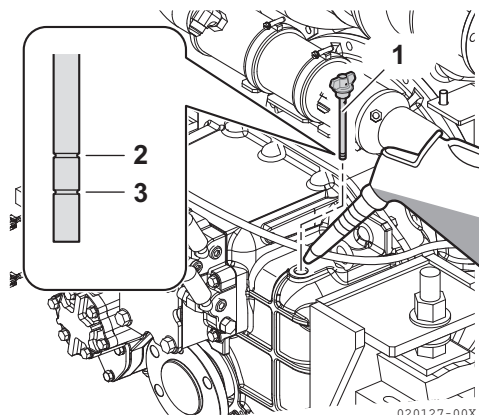


Figure 7

- 1 – Dipstick
(Filler cap combined type)**
- 2 – Upper Limit**
- 3 – Lower Limit**

Note: KMH50A marine gear shown.

1. Make sure engine is level.
2. Remove the filler cap (**Figure 7, (1)**) at the top of the housing.
3. Remove dipstick (**Figure 7, (1)**) and wipe with clean cloth.
4. Re- insert the dipstick without screw in.
5. Remove dipstick. The oil level should be between upper (**Figure 7, (2)**) and lower (**Figure 7, (3)**) lines on the dipstick.
6. Screw in the dipstick.

Adding Marine Gear Oil

1. Make sure the engine is level.
2. Remove the filler cap (**Figure 7, (1)**) at the top of the housing.
3. Fill with oil to the upper limit on the dipstick (**Figure 7, (2)**). See *Marine Gear Oil Specifications* on page 71.

NOTICE

Never overfill the marine gear with oil.

4. Screw in the dipstick.
5. Tighten the filler port cap by hand.

STERN DRIVE OIL

Note: Refer to the manufacturer's operation manual for stern drive oil specifications.

Stern Drive Oil Specifications

Refer to the Operation Manual of the stern drive for the procedure to fill or replace the stern drive oil.

ZT370

- 4LV230Z, 4LV250Z:
QuickSilver®*1 High Performance Gear Lube
- 4LV150Z, 4LV170Z, 4LV195Z:
QuickSilver®*1 High Performance Gear Lube or GL-5 (SAE 80W90)

Power steering oil (4LVZ only)

- QuickSilver® Power Trim and Steering Fluid or Dexlone-III

Power trim oil

- QuickSilver® Power Trim and Steering Fluid or Dexlone-III

Checking and Adding Stern Drive Oil

Note: Refer to the manufacturer's operation manual for the proper procedure to check and fill the stern drive oil.

*1: QuickSilver is a registered trademark of Brunswick® Corporation.

Checking and Adding Power Steering Oil (4LVZ Models)

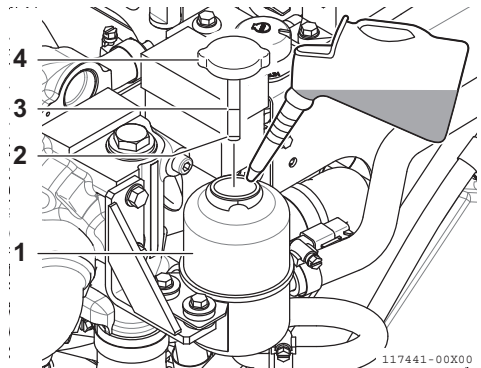


Figure 8

1. Remove the filler cap/dipstick (**Figure 8, (3), (4)**) from the power steering oil service tank (**Figure 8, (1)**) and wipe with a clean cloth.
2. Fully reinsert dipstick.
3. Remove dipstick. The oil level should be between upper (**Figure 8, (3)**) and lower (**Figure 8, (2)**) lines on the dipstick.
4. Fill with oil to the upper limit on the dipstick. See *Stern Drive Oil Specifications* on page 73.

NOTICE

Never overfill the power steering system with oil.

5. Fully reinsert dipstick and tighten.

ENGINE COOLANT

Engine Coolant Specifications

Note: In the U.S., LLC is required for the warranty to be valid.

- Texaco Long Life Coolant (LLC), both standard and premixed, product code 7997 and 7998
- Havoline Extended Life Antifreeze/Coolant, product code 7994

Following the manufacturer's recommendations, use a proper LLC which will not have any adverse effects on the materials (cast iron, aluminum, copper, etc.) of the engine's cooling system.

Always use the mixing ratios specified by the antifreeze manufacturer for the temperature range.

Coolant (Closed Cooling System)

NOTICE

Always add LLC to soft water especially when operating in cold weather. Never use hard water. Water should be clean and free from sludge or particles. Without LLC, cooling performance will decrease due to scale and rust in the coolant system. Water alone may freeze and form ice; it expands approximately 9% in volume. Use the proper amount of coolant concentrate for the ambient temperature as specified by the LLC manufacturer. LLC concentration should be a minimum of 30% to a maximum of 60%. Too much LLC will decrease the cooling efficiency. Excessive use of antifreeze also lowers the cooling efficiency of the engine. Never mix different types or brands of LLC, as a harmful sludge may form. Mixing different brands of antifreeze may cause chemical reactions, and may make the antifreeze useless or cause engine problems.

Checking and Adding Coolant

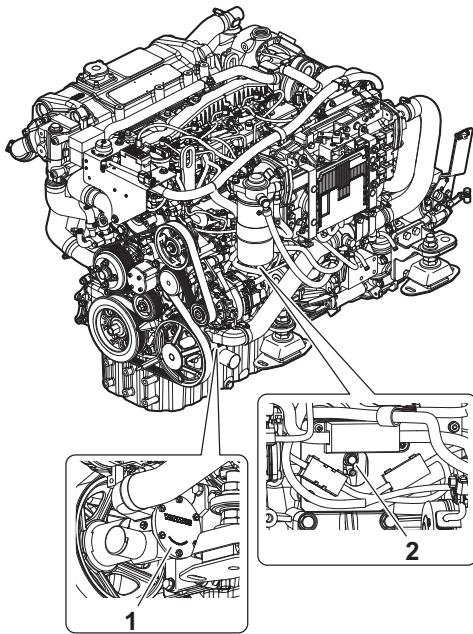


Figure 9

- 1 – Seawater pump
(Drain from pump cover)**
- 2 – Coolant drain cock
(Cylinderblock)**

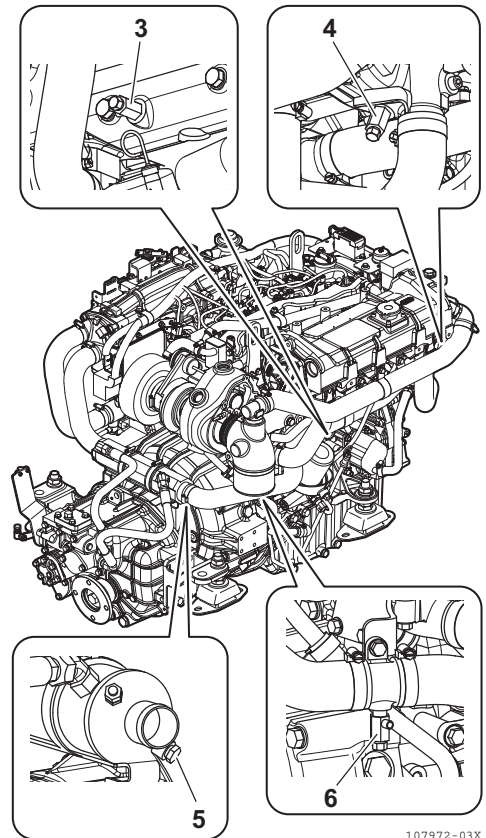


Figure 10

- 3 – Coolant drain cock
(Exhaust manifold)**
- 4 – Seawater drain cock
(Coolant tank/Heat exchanger)**
- 5 – Seawater drain plug
(Marine gear oil cooler)**
- 6 – Seawater drain plug
(Air cooler/Coolant cooler)**

BEFORE YOU OPERATE

1. Ensure all drain cocks are closed.

Note: The drain cocks are opened before shipping from the factory.

2. Loosen the filler cap of coolant tank to relieve the pressure, then remove the filler cap.

⚠ WARNING

Burn Hazard!

Never remove the coolant filler cap if the engine is hot. Steam and hot engine coolant will spray out and seriously burn you. Allow the engine to cool down before you attempt to remove the cap.

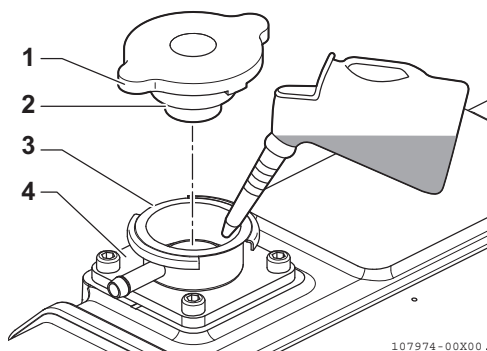


Figure 11

- 1 – Filler Cap Tabs
- 2 – Coolant Filler Cap
- 3 – Filler Port Notches
- 4 – Coolant Tank

3. Pour coolant slowly into coolant tank (**Figure 11, (4)**) to avoid air bubbles. Fill until coolant overflows from the filler port.

NOTICE

Never pour cold coolant into a hot engine.

4. Align filler cap tabs (**Figure 11, (1)**) with filler port notches (**Figure 11, (3)**) and tighten filler cap (**Figure 11, (2)**) firmly.

NOTICE

Always tighten coolant tank cap securely after checking coolant tank. Steam can spray out during engine operation if the cap is loose.

Note: The coolant level rises in the reservoir during operation. After stopping the engine, the coolant will cool down and the extra coolant will return to coolant tank.

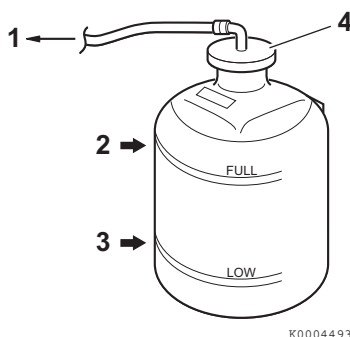


Figure 12

5. Check the coolant level in the reservoir. The level should be at the FULL mark (**Figure 12, (2)**). Add coolant if necessary.

NOTICE

Never pour cold coolant into a hot engine.

6. Remove reservoir cap (**Figure 12, (4)**) to add coolant if necessary. Do not add water.
7. Install filler cap and tighten it firmly. Failure to do so will cause water leakage.

Reservoir capacity
0.8 L (0.85 qt)

8. Check the rubber hose (**Figure 12, (1)**) connecting the reservoir to coolant tank/heat exchanger. Replace if damaged.

Note: If the coolant runs low too often or the coolant level in coolant tank drops without any change in the level in the reservoir, there may be water or air leaks in the cooling system. Consult authorized YANMAR dealer or distributor.

This Page Intentionally Left Blank

ENGINE OPERATION

INTRODUCTION

This section of the *Operation Manual* describes the procedures for starting the engine, checking engine performance during operation and shutting down the engine.

SAFETY PRECAUTIONS

Before performing any operations within this section, review the *SAFETY section on page 3*.

WARNING

Fire and Explosion Hazard!



Never jump-start the engine. Sparks caused by shorting the battery to the starter terminals may cause a fire or explosion.

Only use the start switch on the instrument panel to start the engine.

Sudden Movement Hazard!

Be sure the boat is in open water away from other boats, docks or other obstructions before increasing engine speed. Avoid unexpected equipment movement. Shift the marine gear into the NEUTRAL position any time the engine is at idle.

To prevent accidental equipment movement, never start the engine in gear.

Sever Hazard!



Keep children and pets away while the engine is operating.

NOTICE

If any indicator illuminates during engine operation, stop the engine immediately. Determine the cause and repair the problem before you continue to operate the engine.

If the vessel is equipped with a water lift (water lock) muffler, excessive cranking could cause seawater to enter the cylinders and damage the engine. If the engine does not start after cranking for 10 seconds, close the thru-hull water intake valve to avoid filling the muffler with water. Crank for 10 seconds at a time until the engine starts. When the engine does start, stop the engine immediately and turn off the switch.

Be sure to re-open the seacock and restart the engine. Operate the engine normally.

NOTICE

Observe the following environmental operating conditions to maintain engine performance and avoid premature engine wear:

- Avoid operating in extremely dusty conditions.
- Avoid operating in the presence of chemical gases or fumes.
- Never run the engine if the room temperature is above +60 °C (+140 °F) or below -16 °C (+3 °F).
- If the engine room temperature exceeds +60 °C (+140 °F), the engine may overheat and cause the engine oil to break down.
- If the ambient temperature is below -16 °C (+3 °F), rubber components such as gaskets and seals will harden causing premature engine wear and damage.
- Consult your authorized YANMAR Marine engine dealer or distributor if the engine will be operated outside of this standard temperature range.


Never engage the starter motor while the engine is running. Damage to the starter motor pinion and/or ring gear will result.

OPERATION (B25, C35-TYPE INSTRUMENT PANEL)

Starting the Engine

1. Open the seacock (if equipped).
2. Open the fuel tank cock.
3. Put remote control handle in NEUTRAL.

Note: Safety equipment should make it impossible to start the engine in any other position than NEUTRAL.

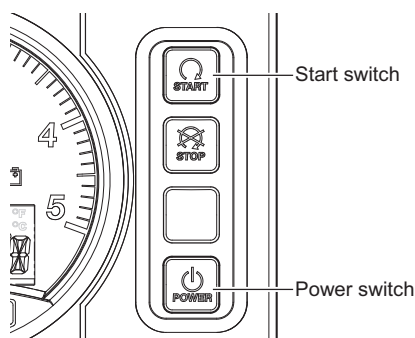

042590-02EN00

Figure 1

4. Turn on the battery switch for engine and engine control system. Do not turn off the battery switch during engine operation. Also, turn it off when the engine does not operate.
5. If all alarm lamps operate when you turn on the power switch on the instrument panel, the warning devices operate correctly.
6. Pushing the start switch turns on the engine. Release the switch after the engine starts.

If the Engine Fails to Start

Before pushing the start switch again, be sure to confirm that the engine has stopped completely. If an attempt to restart is made while the engine is running, the pinion gear of the starter motor will be damaged.

NOTICE

Never hold for longer than 15 seconds or the starter motor will overheat.

Never attempt to restart the engine if the engine has not stopped completely. Pinion gear and starter motor damage will occur.

Note: Push and hold the start switch for a maximum of 15 seconds. If the engine does not start the first time, wait for about 15 seconds before trying again.

NOTICE

If the vessel is equipped with a water lift (water lock) muffler, excessive cranking could cause seawater to enter the cylinders and damage the engine. If the engine does not start after cranking for 15 seconds, close the thru-hull water intake valve to avoid filling the muffler with water. Crank for 10 seconds at a time until the engine starts. When the engine does start, stop the engine immediately and turn off the power switch. Be sure to re-open the seacock and restart the engine. Operate the engine normally.

Air Bleeding the Fuel System after Starting Failure

If the engine does not start after several attempts, there may be air in the fuel system. If air is in the fuel system, fuel cannot reach the fuel supply pump. Bleed the air out of the system. See *Bleeding the Fuel System on page 68*.

Starting at Low Temperatures

Comply with local environmental requirements. Do not use starting aids.

NOTICE

Never use an engine starting aid such as ether. Engine damage will result.

To limit white smoke, run the engine at low speed and under moderate load until the engine reaches normal operating temperature. A light load on a cold engine provides better combustion and faster engine warm-up than no load.

Avoid running the engine at idling speed any longer than necessary.

After the Engine has Started

After the engine has started, check the following items at a low engine speed:

1. Check that the gauges, indicators and alarm are normal.
 - Normal coolant operating temperature is lower than 80 °C (176 °F).
 - Normal oil pressure at fuel stop power is 0.45 to 0.55 MPa (65 to 80 psi).
2. Check for water, fuel or oil leakage from the engine.
3. Check that the smoke color, engine vibration and sound are normal.
4. When there are no problems, keep the engine at low speed with the boat still stopped to distribute engine oil to all parts of the engine.
5. Check that sufficient seawater is discharged from the seawater outlet. Operation with inadequate seawater discharge will damage the impeller of the seawater pump. If seawater discharge is too low, stop the engine immediately. Identify the cause and repair.

NOTICE

The engine will seize if it is operated when seawater discharge is too small or if load is applied without any warming up operation.

6. For troubleshooting assistance, see **TROUBLESHOOTING AFTER STARTING** on page 183 or **TROUBLESHOOTING CHART** on page 185.
If necessary, consult authorized YANMAR dealer or distributor.

REMOTE CONTROL HANDLE OPERATION

Acceleration and Deceleration

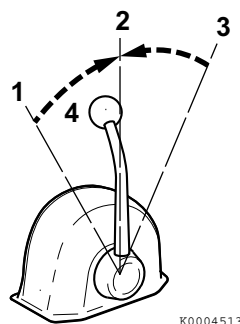


Figure 2

- 1 – FORWARD or REVERSE
- 2 – NEUTRAL
- 3 – REVERSE or FORWARD
- 4 – Throttle Handle/Shifting Handle

Note: Direction of travel will vary depending on installation location.

Use the throttle handle (**Figure 2, (4)**) to control acceleration and deceleration. Move the handle slowly.

Shifting the Engine

WARNING

Sudden Movement Hazard!

The boat will start to move when the marine gear is engaged:

- Ensure the boat is clear of all obstacles forward and aft.
- Quickly shift to the FORWARD position then back to the NEUTRAL position.
- Observe whether the boat moves in the direction you expect.

NOTICE

Shifting the marine gear while operating at high speed or not pushing the handle fully into position (partial engagement) will result in damage to marine gear parts and abnormal wear.


1. Before using the marine gear, be sure to move the throttle handle to a low idle position (less than 1000 min⁻¹). Move the throttle handle slowly to a higher speed position after completing marine gear engagement.
2. When moving the handle between FORWARD (**Figure 2, (1 or 3)**) and REVERSE (**Figure 2, (3 or 1)**), bring the handle to NEUTRAL (**Figure 2, (2)**) and pause before slowly shifting to the desired position. Never shift abruptly from FORWARD to REVERSE or vice versa.

NOTICE

- Never shift the marine gear at high engine speed. During normal operation, the marine gear should only be shifted with the engine at idle.
- When sailing, set the remote control handle in NEUTRAL. Not doing so WILL introduce slippage or any damage and void your warranty.
- In case that the marine gear can not be shifted by remote control handle for some reason such as broken cable, remove the cable from shift lever on the marine gear and shift manually by turning the lever.

Switching to Trolling (KMH50A, KMH50V)

Use the trolling handle to begin trolling. When changing from FORWARD or REVERSE to trolling, the speed of the propeller revolution will be reduced to a minimum.

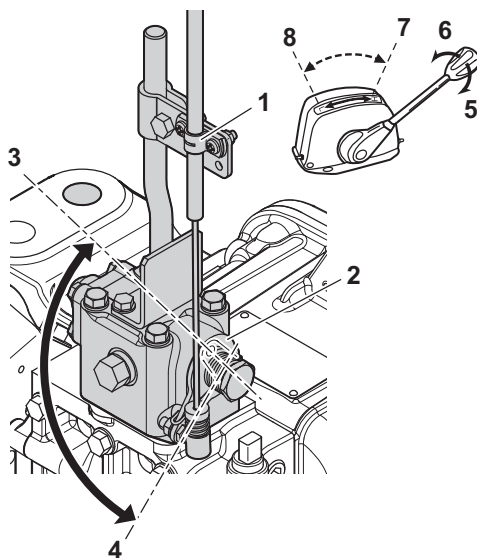

107975-00X00

Figure 3

- 1 – Cable Fitting
- 2 – Trolling Lever
- 3 – Low Speed (trolling)
- 4 – High Speed
- 5 – Loosen
- 6 – Tighten
- 7 – Normal Operation (high speed)
- 8 – Trolling (low speed)

1. Operation continues at low engine speed of 1000 min^{-1} or less.
2. Reduce the speed by moving the trolling handle from high speed (H) (**Figure 3, (4)**) to low speed (L) (**Figure 3, (3)**). Adjust the speed to the desired rate and secure the trolling handle in place.
3. Before returning to normal operation, be sure to put the trolling handle in high-speed (H) position.
4. Increase engine speed and continue normal operation.

CAUTIONS DURING OPERATION

NOTICE

Engine trouble can arise if the engine is operated for a long time under overloaded conditions with the control handle in the full throttle position (maximum engine speed position), exceeding the continuous rated output engine speed. Operate the engine at about 100 min^{-1} lower than the full throttle engine speed.

Note: If the engine is in the first 50 hours of operation, see New Engine Break-In on page 10.

Always be on the lookout for problems during engine operation.

Pay particular attention to the following:

- Is sufficient seawater being discharged from the exhaust and seawater outlet pipe?

If the discharge is small, stop the engine immediately; identify the cause and repair.

- Is the smoke color normal?

The continuous emission of black exhaust smoke indicates engine overloading. This shortens the engines life and should be avoided.

ENGINE OPERATION

- Are there abnormal vibrations or noise?

NOTICE

Excessive vibration may cause damage to the engine, marine gear, hull and onboard equipment. In addition, it causes able passenger and crew discomfort.

Depending on the hull structure, engine and hull resonance may suddenly become great at a certain engine speed range, causing heavy vibrations. Avoid operation in this speed range. If you hear any abnormal sounds, stop the engine and inspect.

- Alarm buzzer sounds during operation.

NOTICE

If any alarm indicator with audible alarm sound appears on the display during engine operation, stop the engine immediately. Determine the cause and repair the problem before you continue to operate the engine.

-
- Is there water, oil or fuel leakage, or are there any loose bolts?

Check the engine room periodically for any problems.

- Is there sufficient diesel fuel in the diesel fuel tank?

Replenish diesel fuel before leaving the dock to avoid running out of fuel during operation.

- When operating the engine at low speed for long periods of time, race the engine once every 2 hours.

NOTICE

Racing the engine: With the gear in NEUTRAL, accelerate from the low-speed position to the high-speed position and repeat this process about five times. This is done to clean out carbon from the cylinders and the fuel injection valve. Neglecting to race the engine will result in poor smoke color and reduce engine performance.

-
- If possible, periodically operate the engine at near maximum engine speed while underway. This will generate higher exhaust temperatures, which will help clean out hard carbon deposits, maintaining engine performance and prolonging the life of the engine.

NOTICE

Never turn off the battery switch (if equipped) or short the battery cables during operation. Damage to the electric system will result.


SHUTTING DOWN THE ENGINE

Normal Shutdown

1. Reduce engine speed to low idle and put remote control handle in NEUTRAL.
2. Accelerate from low speed to high speed and repeat five times. This will clean out the carbon from the cylinders and the fuel injection nozzles.
3. Allow engine to run at low speed (approximately 1000 min⁻¹) without load for 5 minutes.

NOTICE

For maximum engine life, YANMAR recommends that when shutting the engine down, you allow the engine to idle, without load, for 5 minutes. This will allow the engine components that operate at high temperatures, such as the turbocharger (if equipped) and exhaust system, to cool slightly before the engine itself is shut down.

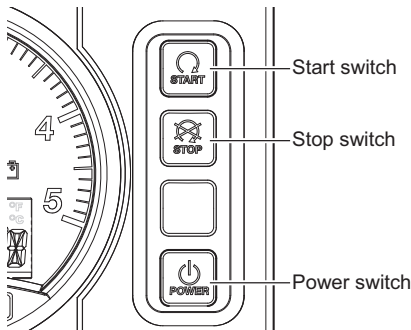

042590-02EN01

Figure 4

4. Push and hold the stop switch.
After the engine has stopped, push the power switch off.

NOTICE

Continue to hold the stop switch in until the engine is completely stopped. If the switch is released before the engine has completely stopped, it may restart. If the engine does not shut down, see *Engine Auxiliary Stop Switch on page 88 and 89*.

5. Wait 6 seconds or more before turning the battery switch off for secure system settle down.

NOTICE

- Do not turn the battery switch off before turning the power switch off or immediately after turning off the power switch.
- Turning the battery switch off before secure system settle down may cause alarm to be set at the next activation by turning on the power switch. In an emergency situation, you can start the engine even if the alarm is set. In order to release above alarm, turn off the power switch and wait 6 seconds before turning the power switch on again.

6. Turn off the battery switch (if equipped).
7. Close the fuel cock.

ENGINE OPERATION

8. Close the seacock (if equipped).


NOTICE

- Be sure to close the seacock. Neglecting to close the seacock could allow water to leak into the boat and may cause it to sink.
- If seawater is left inside the engine, it may freeze and damage parts of the cooling system when the ambient temperature is below 0 °C (32 °F).

Engine Auxiliary Stop Switch

NOTICE


Never use the auxiliary stop switch for a normal engine shutdown. Use this switch only when stopping the engine suddenly in an emergency.

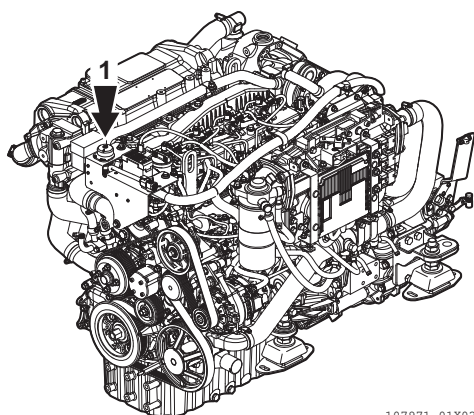

107971-01X02

Figure 5


1. Pressing the Auxiliary Stop switch on the ECU cover will stop the engine immediately.
2. "AUX STP" will be shown on the LCD of the instrument panel.
3. After the engine has stopped, release the switch by pressing and turning it to the RUN position.

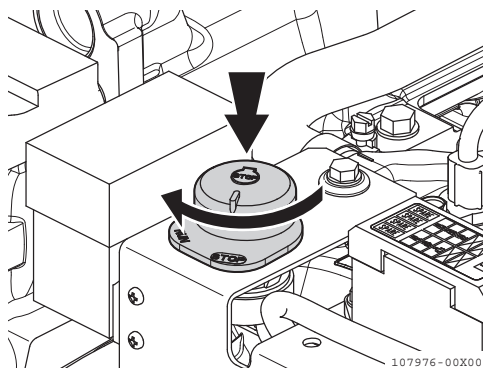

107976-00X00

Figure 6

Auxiliary Stop Switch
(Option: It is recommended that this switch is installed in an easily accessible location.)

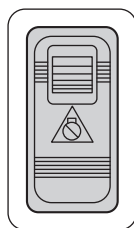

061304-00X00

Figure 7

1. Pressing the upper part of the Auxiliary Stop switch will stop the engine immediately.
2. "AUX STP" will be shown on the LCD of the instrument panel.
3. After the engine has stopped, push the bottom part of the switch to release it.

*Note: The engine cannot be started while the Auxiliary Stop switch is pressed.
(Auxiliary Stop mode not canceled)*

NOTICE

- In case of emergency, turning off the battery switch for the engine control unit can also stop the engine immediately.
- You can restart the engine but an alarm may be set up when the power switch is turned on. Unless you are in an emergency situation, in order to release above alarm, turn off the power switch and wait 6 seconds before turning the power switch on again.

CHECKING THE ENGINE AFTER OPERATION

- Check that the power switch is off and that the battery switch (if equipped) is turned to off.
- Fill the fuel tank. *See Filling the Fuel Tank on page 67.*
- Close seawater cock(s).
- If there is a risk of freezing, check that the cooling system contains enough coolant. *See Engine Coolant Specifications on page 74.*
- If there is a risk of freezing, drain the seawater system. *See DRAIN SEAWATER COOLING SYSTEM on page 200.*
- At temperatures below 0 °C (32 °F), drain seawater system and connect the engine heater (if equipped).

OPERATION (VC10: VESSEL CONTROL SYSTEM)

Starting the Engine

1. Open the seacock (if equipped).
2. Open the fuel tank cock.
3. Turn the battery switch on for engine and engine control system.
4. Press the Power switch on the switch panel of the selected station (**Figure 8, (1)**).
 - The switch panel lamp will come on, and the control head (**Figure 9**) “SEL” lamp (**Figure 10**) will come on or flash.
 - To use the Engine START/STOP switch, be sure to turn the Power switch ON.

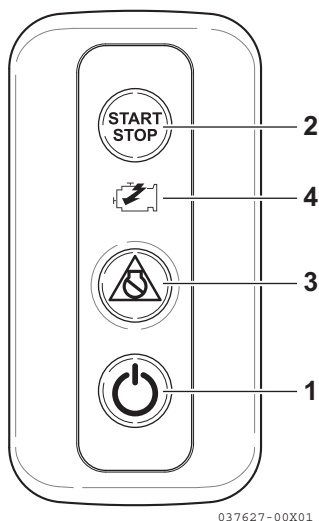


Figure 8

5. If the “Sys on by ID” has been set, enter the password into the display.
6. Press the control head “SEL” switch.
 - Wait until the display shows the engine data. The display is shown.

7. If the “Start by ID” has been set, enter the password into the display.
 - The “Start by ID” has been set, the engine can be started in 10 seconds after entering the password into the display.
8. Move the remote control handle to the N (Neutral) position.

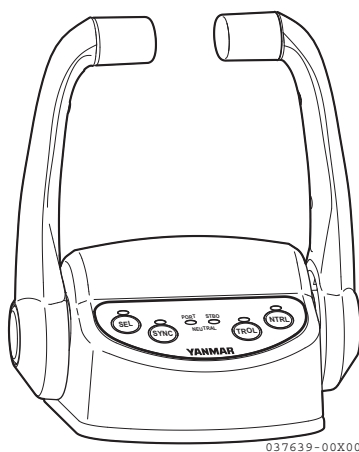


Figure 9

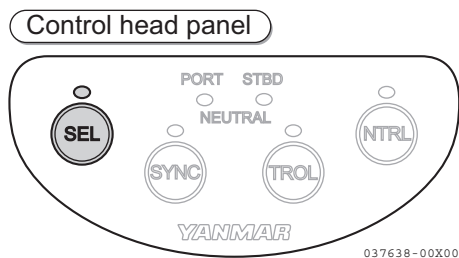


Figure 10

9. Press the Engine START/STOP switch (**Figure 8, (2)**) and power on the starter.
 - When the engine starts, the VC10 display will show the screen with engine conditions (**Figure 11**).

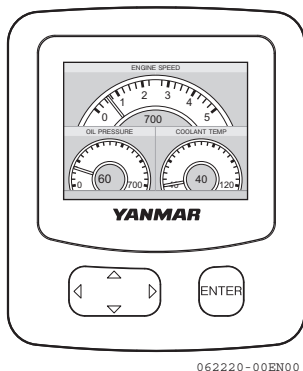


Figure 11

Note:

1. Concerning the control head “SEL” lamp.
For Multi-Station: the “SEL” lamp will flash and for Single Station: the “SEL” lamp will come on.
2. Pressing the Engine START/STOP switch when the “SEL” lamp is flashing allows the station to be selected as the engine is started.
3. The engine will not start or stop if the Power switch is OFF. The Power switch must be ON at all times when the engine is running.
4. Do not press the engine START/STOP switch except for stopping the engine.

ENGINE OPERATION

Vessel Control System (VC10) has the following functions, which can be set in the Utility screen of MAIN MENU in the Digital Display. For more details, refer to the Vessel Control System Installation Manual.

Station Protect

It is a function to prevent the operation from the other stations while steering.

- Select “YES” to enable “Station protect”. The display and control head of that station can no longer be operated.
- Select “NO” or turn off the system power to disable “Station protect”.

Sys on by ID, Start by ID

It is a function to check ID for the purpose of anti-theft.

- If you select “YES” in “Sys on by ID”, it is necessary to enter the Owner ID on the display when turning on the system power. If you select “YES” in “Start by ID”, it is necessary to enter the owner ID on the display at engine start.
- The initial ID is “00000” and it can be changed with the below “Owner ID change” function.
- Even when the system power is turned off, the selected “Sys on by ID” and “Start by ID” cannot be disabled and it is required to enter the Owner ID at each time.
- After entering the ID and verification, if you don’t operate for 10 seconds, the entry becomes invalid and it is required to enter the Owner ID again.

Owner ID Change

The ID used in “Sys on by ID” and “Start by ID” can be set and changed as follows.

- If you select “Owner ID change”, the ID verification screen is displayed and you are asked to enter the current ID (Default: “00000”).
- If you enter the wrong ID 5 times, the ID is locked and you are no longer able to make an input. The lock can be released by turning off the system power.
- ID can be changed to any 5 digit number from 00000 to 99999.
- Select the number from 0 to 9 with the ▲▼ buttons. The fixed number is displayed by an asterisk when you press the ► button and the next digit is highlighted.
- Press the [ENTER] button after highlighting it with the ► button when all 5 digits are entered and the new ID becomes valid.

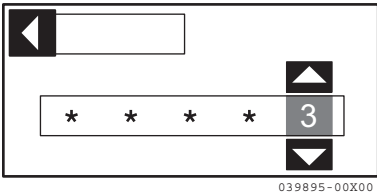


Figure 12

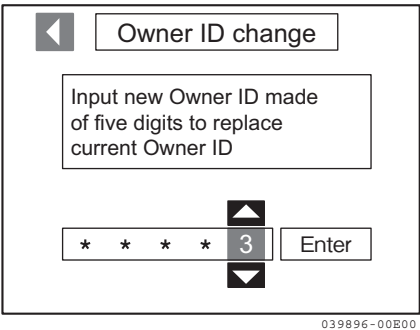


Figure 13

If the Engine Fails to Start

Before pressing the Start switch again, confirm that the engine has stopped completely. If the starter motor is operated before the engine has completely stopped, the starter motor pinion gear will be damaged.

NOTICE

Never hold for longer than 15 seconds or the starter motor will overheat.

Never attempt to restart the engine if the engine has not stopped completely. Pinion gear and starter motor damage will occur.

Note: Push and hold the start switch for a maximum of 15 seconds. If the engine does not start the first time, wait for about 15 seconds before trying again.

NOTICE

If the vessel is equipped with a water lift (water lock) muffler, excessive cranking could cause seawater to enter the cylinders and damage the engine. If the engine does not start after cranking for 15 seconds, close the thru-hull water intake valve to avoid filling the muffler with water. Crank for 10 seconds at a time until the engine starts. When the engine does start, stop the engine immediately and turn off the power switch. Be sure to re-open the seacock and restart the engine. Operate the engine normally.

Air Bleeding the Fuel System after Starting Failure

If the engine does not start after several attempts, there may be air in the fuel system. If air is in the fuel system, fuel cannot reach the fuel supply pump. Bleed the air out of the system. See *Bleeding the Fuel System* on page 68.

Starting at Low Temperatures

Comply with local environmental requirements. Do not use starting aids.

NOTICE

Never use an engine starting aid such as ether. Engine damage will result.

To limit white smoke, run the engine at low speed and under moderate load until the engine reaches normal operating temperature. A light load on a cold engine provides better combustion and faster engine warm-up than no load.

Avoid running the engine at idling speed any longer than necessary.

After the Engine has Started

After the engine has started, check the following items at a low engine speed:

1. Check that the gauges, indicators and alarm are normal.
 - Normal coolant operating temperature is lower than 80 °C (176 °F).
 - Normal oil pressure at fuel stop power is 0.45 to 0.55 MPa (65 to 80 psi).
2. Check for water, fuel or oil leakage from the engine.
3. Check that the smoke color, engine vibration and sound are normal.
4. When there are no problems, keep the engine at low speed with the boat still stopped to distribute engine oil to all parts of the engine.
5. Check that sufficient seawater is discharged from the seawater outlet. Operation with inadequate seawater discharge will damage the impeller of the seawater pump. If seawater discharge is too low, stop the engine immediately. Identify the cause and repair.

NOTICE

The engine will seize if it is operated when seawater discharge is too small or if load is applied without any warming up operation.

CONTROL HEAD OPERATION

Control Head for Marine Gear

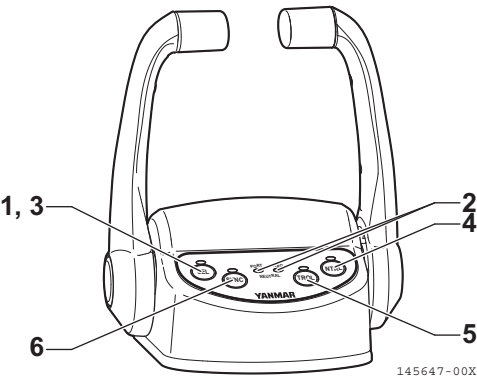


Figure 14

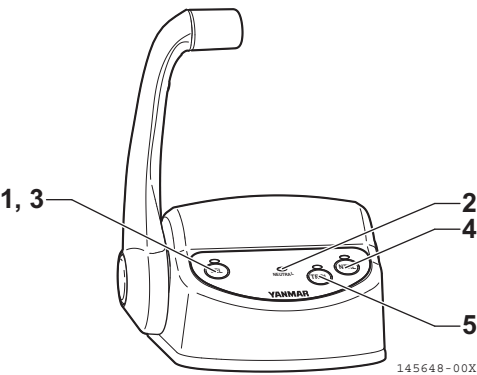


Figure 15

1. Select/change station
A lit "SEL" lamp indicates that the station is active.
 - On single station boats, station selection is automatic.
 - For multi-stations, choose a station and then press "SEL" switch with handles in neutral.
2. Neutral position
A lit NEUTRAL lamp indicates that the handle station is neutral.
3. Indicator dimming
Press "SEL" switch and the lamps will dim.
4. Shift disconnect (SD)
Flashing NEUTRAL lamp indicate SD engaged for this engine allowing throttle control without gear engagement.
 - Check the handle is neutral, and press "NTRL" switch.
5. Trolling
Check the handle is neutral, and press "TROL" switch, and "TROL" lamp indicates trolling is active.
6. Synchronizing
Press "SYNC" switch and "SYNC" lamp indicates sync. is active.

Control Head for Stern Drive

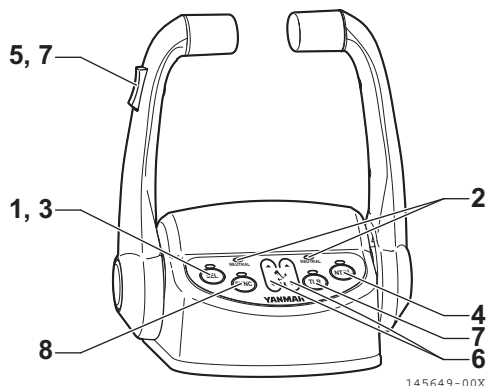


Figure 16

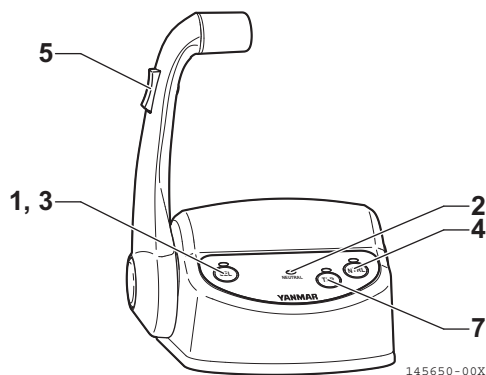


Figure 17

1. Select/change station
A lit “SEL” lamp indicates a station is active.
 - On single station boat, station selection is automatic.
 - For multi-stations, choose a station and then press “SEL” switch with handles in neutral.
2. Neutral position
A lit NEUTRAL lamp indicates a handle station is neutral.
3. Indicator dimming
Press “SEL” switch and the lamps will dim.
4. Shift disconnect (SD)
A flashing NEUTRAL lamp indicates that the SD is engaged on this engine. This allows throttle control without gear engagement.
 - Check that the handle is in the NEUTRAL position, and press “NTRL” switch.
5. Trimming adjustment
Push the trim switch arrows both or single stern drive will be adjustment on cruising boat.
6. Trimming adjustment (Dual control head only)
Press the trim adjustment switches arrows and each side stern drive will be fine trimming adjustment.
7. Tilt (Trailer mode)
Press “TLR” switch with handle trim switch and both side stern drives will be tilted together.
8. Synchronizing
Press “SYNC” switch and “SYNC” lamp indicates sync. is active.

Station Selection (Only for Multiple Stations)

Engine not running (Control head in Neutral)

When first turning the panel switch to the “POWER ON” position, the “SEL” lamp will flash and the NEUTRAL lamp will light up. This is an indication that no specific helm station has been selected for boat operation.

By simply pressing the “SEL” switch at the station desired for operation, the flashing lamp will turn on continuously.

This indicates control of the boat is now at this station location. If you choose to change helm locations while cruising, switch the station as described below.

Engine running (Control head in Neutral)

To change stations when the engine is running but in Neutral position, do the following:

1. Press the control head “SEL” switch of the desired station (make sure control head is in Neutral position).
2. The “SEL” lamp will come on at the same time as the stations switch, enabling control of the selected station.

Engine running (Control head not in Neutral)

To change stations when the engine is running and not in Neutral position (so the boat is moving), do the following:

1. Press the control head “SEL” switch of the desired station.
2. The “SEL” lamp will flash and switch to standby mode for 5 seconds.
3. Stations will switch when the handle position (throttle and shift) of the desired station is the same as the handle position of the station current active station.
4. The “SEL” lamp will come on at the same time as the stations switch, enabling control of the selected station.

Note:

1. *All lamps for stations that have not been selected will turn off.*
2. *If the handle is not aligned with the station to be selected during the idling period for 5 seconds, the lamps will turn off and the station to be selected will remain unusable.*
3. *For dual control heads, both handles must be aligned.*
4. *SD mode and trolling mode for the newly selected station will be applied to the selected station. Synchro-mode will not be applied.*

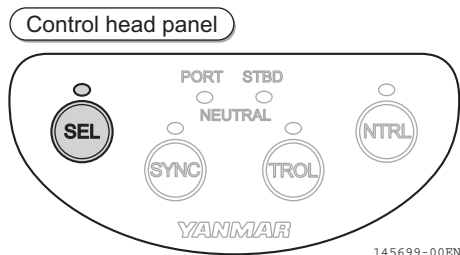


Figure 18

Indicator Dimming Feature

The light on the VC20 components can be varied in intensity to a more comfortable level if desired.

The dimming level is shared between all components of a station.

The lamps can be dimmed (light adjustment) using the following two methods.

1. Dimmer with the display dimmer settings.
2. Dimmer with the control head “SEL” switch.

Dimmer with the control head “SEL” switch

1. The lamp brightness will decrease one level each time the “SEL” switch of the selected station control head is pressed.
2. Pressing “SEL” switch with the brightness on its lowest level will return the brightness to its highest level.

Dimmer with the display dimmer settings

1. Go to the brightness setting in the display.
2. Select the desired brightness level.

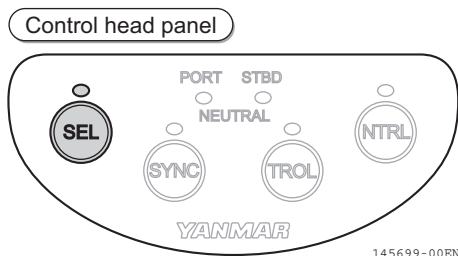


Figure 19

Synchronization

Note: Power train sync. and cruise sync. may be selected using the display. Be sure to set the lead engine on the display before using SYNC.

Two lever sync. (Cruise sync.)

The engine speed synchronization is activated when the engine speed exceeds 1000 rpm and the control head handle is in proximity.

1. Press "SYNC" switch.
2. Match the control head handle positions within 10% of each other. ("SYNC" lamp goes steady when handles match.)
3. When handles are moved within 10% of each other and over 1000 rpm forward throttle, cruise sync. is engaged.
4. When handles are moved more than 10% apart or under 1000 rpm forward throttle, cruise sync. is disengaged. ("SYNC" lamp flashes.)
5. To leave the sync. mode, return the handles to the Neutral position and press the "SYNC" switch.

One lever sync. (Power train sync.)

Automatically synchronizes engines and transmission. The engine handle controls throttle and shift of both engines across the entire control range.

1. Press "SYNC" switch.
2. Match the control head handle positions within 10% of each other. ("SYNC" lamp goes steady when handles match.)
3. To leave the sync. mode, return the handles to the Neutral position and press "SYNC" switch.

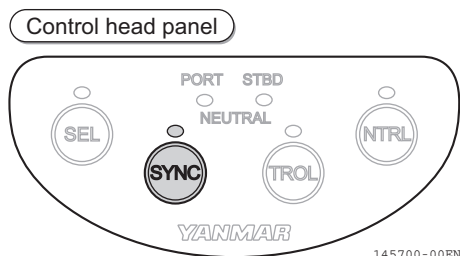


Figure 20

Tilt Elevation (Stern Drive Specification)

⚠ WARNING

To tilt the stern drive, be sure to check that there is nobody near the drive and no obstacles in the surroundings before the operation.

Normal operation

1. Pressing the control head handle trim switch will elevate the drives (both engines 1 and 2). The trim angle is limited.
2. With two engines, press the control head port side or starboard side trim adjustment switch to make fine adjustments to the elevation angle of the left and right drive motors, respectively.

When aligning with the Trailer position, when aligning from the Trailer position to the Drive position

1. Check that the control head handle is in the Neutral position and the engine is stopped.
2. To move from the Drive position to the Trailer position, press the trim switch while pressing the TLR switch at the same time.
3. To move from the Trailer position to the Drive position, press the trim switch only. Do not operate the TLR switch.

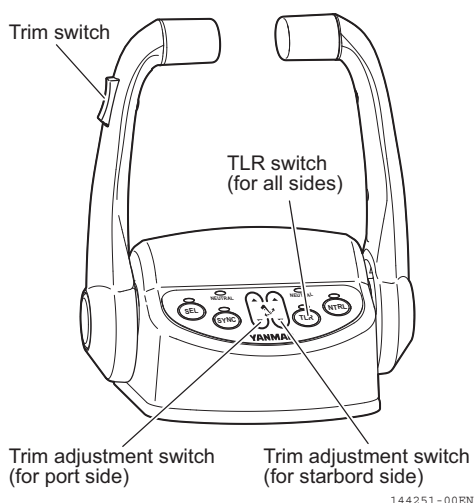


Figure 21

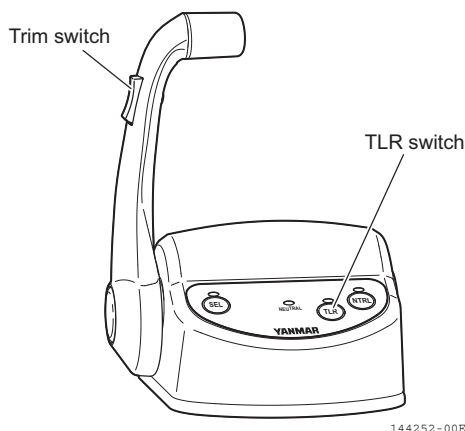


Figure 22

TROLLING OPTION (FOR KMH MARINE GEAR SPECIFICATION)

Trolling Overview and Function

On the marine gear equipped with trolling, trolling mode is engaged by a TROL (trolling switch) on the control head that is used to turn trolling ON and OFF.

The factory default configuration for trolling operation is the split trolling mode.

This operation allows the operator to perform from minimum prop RPM (full slip) to maximum prop RPM (full lock up) and then a throttle ramp up with one handle motion. The defaults are: 60% of the handle movement from gear-idle to maximum prop RPM, with the remaining 40% handle movement used for throttle control to a maximum of 40% throttle. The width of the trolling range can be set with the display. (Trolling: Lever travel)

1. Move the control head handle to the N (Neutral) position.
2. Press the "TROL" switch.
3. The "TROL" lamp will come on.
4. In trolling range, the propeller speed is adjusted by slipping the clutch while the engine is idling. In throttle range, the engine speed is adjusted with the clutch in the engaged (connected) condition.
5. Moving the control head handle to the N (Neutral) position and pressing the "TROL" switch will release trolling mode.

Note: Switching stations will apply the trolling mode.

Warm up the marine gear sufficiently before starting the trolling operation.

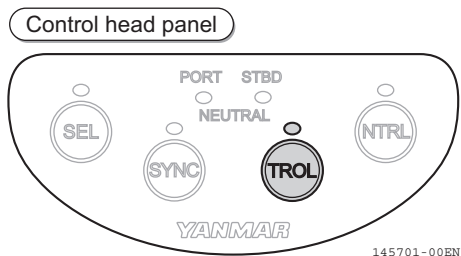


Figure 23

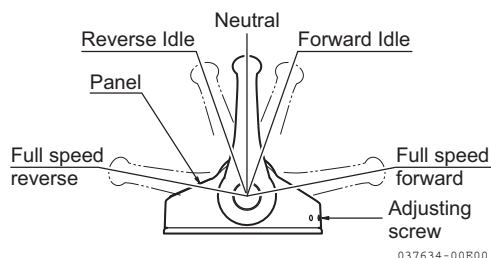


Figure 24

Trolling Adjustment for C-Type Trolling

No need for any adjustment/calibration.

Trolling Adjustment for E-Type Trolling

Please set “Full slip point” and “Lock up point” under “Trolling” as follows.

To perform this adjustment, you need to enter the Service ID and switch to the Service mode display. Contact your YANMAR dealer or distributor with reference to Operating in Service Mode on the Vessel Control System Installation Manual for details.

Note:

- Warm up the marine gear sufficiently before calibration.
- The propeller shaft can be rotated during this adjustment, fix the boat with a rope or move the boat to a safe area.

1. Select the “Lever travel” (trolling, lever travel) on the display and set it to 100%. (Default value: 60%)
2. Select “Trolling calibration” (trolling, trolling calibration) then set “Full slip point” to 40 (%) and “Lock up point” 100 (%).
3. Set the control head handle at Forward Idle position.
4. Check the propeller shaft rotation, if the propeller shaft is rotating reduce the “Full slip point” value until the propeller shaft stops.
5. Increase the “Full slip point” value until the propeller shaft starts rotating smoothly. That will be the adjustment point for “Full slip point”.
6. Set the control head handle at Max. position.
7. Reduce “Lock up point” value, and set the value to the boundary between trolling and non-trolling.
The rough target of “Lock up point” is the value of “Full slip point” +10 - 20%.

Note: Lock up point must be bigger than full slip point.

WARM UP MODE (SHIFT DISCONNECT)

1. Move the remote control handle to the N (Neutral) position. (The NEUTRAL lamp will come on)
2. Press the “NTRL” switch of the selected station control head.
3. The NEUTRAL lamp will come on, and the NEUTRAL lamp will flash.
4. Move the remote control handle. The engine speed can be controlled while the gear shift is in neutral.
5. Move the remote control handle to the N (Neutral) position, press the “NTRL” switch and cancel warm up mode.

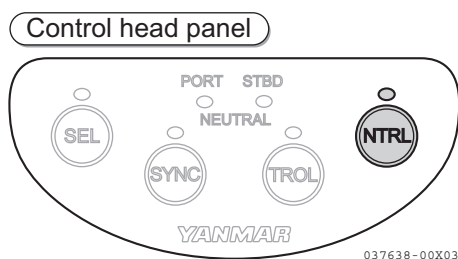


Figure 25

THROTTLE AND SHIFT CONTROL

⚠ WARNING

Sudden Movement Hazard!

The boat will start to move when the marine gear is engaged:

- **Ensure the boat is clear of all obstacles forward and aft.**
- **Quickly shift to the FORWARD position then back to the NEUTRAL position.**
- **Observe whether the boat moves in the direction you expect.**

Neutral

1. Move the remote control handle to the N (Neutral) position. (The NEUTRAL lamp will come on)
2. When switching between forward and reverse, move the handle slowly between the forward and reverse positions. Move the handle firmly into either the forward or reverse position.

Forward

Move the handle toward F (forward) to the forward-side notch position. The engine will remain idling. Moving the handle forward further will increase the engine speed.

Reverse

Move the handle toward R (reverse) to the reverse-side notch position. The engine will remain idling. Pulling the handle back further will increase the engine speed.

Forward (Reverse) to Reverse (Forward)

Moving the handle quickly and switching from forward (reverse) to reverse (forward) will activate the gear shift delay (astern delay). The engine speed to decrease to idle speed for several seconds.

Note: The force required to move the throttle or shift handles can be adjusted with the Adjusting Screw.

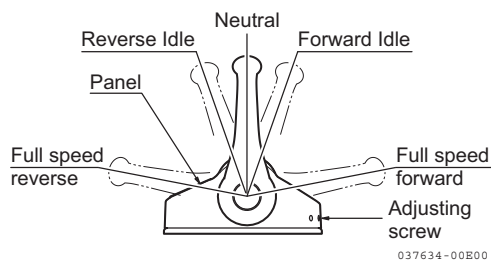


Figure 26

ENGINE SPEED LIMIT MODE

- 1. Move the remote control handle to the Forward Idle position. (Both sides in the case of twin engine.)
- 2. Press the “NTRL” switch of the selected station. (The lamp above “NTRL” switch will flash.)
- 3. Even if you tilt the handle to accelerate, the engine speed increases only up to the setting value.
- 4. Move the remote control handle to the N (Neutral), Forward Idle, or Reverse Idle position (both sides in the case of twin engine) and press the “NTRL” switch to release the [Engine Speed Limit Mode].

Note: The setting value can be set by the VC10 display. The default value is 50%.

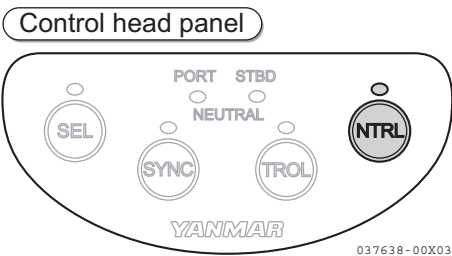


Figure 27

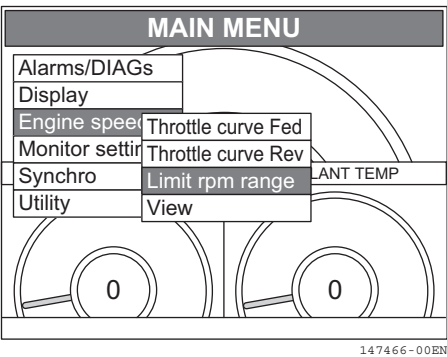


Figure 28

CAUTIONS DURING OPERATION

NOTICE

Engine trouble can arise if the engine is operated for a long time under overloaded conditions with the control handle in the full throttle position (maximum engine speed position), exceeding the continuous rated output engine speed. Operate the engine at about 100 min⁻¹ lower than the full throttle engine speed.

Note: If the engine is in the first 50 hours of operation, see New Engine Break-In on page 10.

Always be on the lookout for problems during engine operation.

Pay particular attention to the following:

- Is sufficient seawater being discharged from the exhaust and seawater outlet pipe?

If the discharge is small, stop the engine immediately; identify the cause and repair.

- Is the smoke color normal?

The continuous emission of black exhaust smoke indicates engine overloading. This shortens the engines life and should be avoided.

- Are there abnormal vibrations or noise?

NOTICE

Excessive vibration may cause damage to the engine, marine gear, hull and onboard equipment. In addition, it causes able passenger and crew discomfort.

Depending on the hull structure, engine and hull resonance may suddenly become great at a certain engine speed range, causing heavy vibrations. Avoid operation in this speed range. If you hear any abnormal sounds, stop the engine and inspect.

- Alarm buzzer sounds during operation.

NOTICE

If any alarm indicator with audible alarm sound appears on the display during engine operation, stop the engine immediately. Determine the cause and repair the problem before you continue to operate the engine.

- Is there water, oil or fuel leakage, or are there any loose bolts?

Check the engine room periodically for any problems.

- Is there sufficient diesel fuel in the diesel fuel tank?

Replenish diesel fuel before leaving the dock to avoid running out of fuel during operation.

ENGINE OPERATION

- When operating the engine at low speed for long periods of time, race the engine once every 2 hours.

NOTICE

Racing the engine: With the gear in NEUTRAL, accelerate from the low-speed position to the high-speed position and repeat this process about five times. This is done to clean out carbon from the cylinders and the fuel injection valve. Neglecting to race the engine will result in poor smoke color and reduce engine performance.

- If possible, periodically operate the engine at near maximum engine speed while underway. This will generate higher exhaust temperatures, which will help clean out hard carbon deposits, maintaining engine performance and prolonging the life of the engine.

NOTICE

Never turn off the battery switch (if equipped) or short the battery cables during operation. Damage to the electric system will result.

SHUT-DOWN THE ENGINE (STOPPING)

Stop the engine in accordance with the following procedures:

Normal Stopping

- Move the remote control handle to the N (Neutral) position. (The NEUTRAL lamp will come on.)
- Cool the engine down at low speed (below 1000 min⁻¹ (rpm)) for about 5 minutes.

NOTICE

For maximum engine life, YANMAR recommends that when shutting the engine down, you allow the engine to idle, without load, for 5 minutes. This will allow the engine components that operate at high temperatures, such as the turbo-charger and exhaust system, to cool slightly before the engine itself is shut down.

- Press the Engine START/STOP switch on the switch panel of the selected station.
- Press the Power switch and turn the power OFF.

CAUTION

Do not press the Engine START/STOP switch when the engine is stopped. The engine will restart.

5. Wait 6 seconds or more before turning the battery switch off for secure system settle down.

NOTICE

- Do not turn the battery switch off before turning the power switch off or immediately after turning off the power switch.
- Turning the battery switch off before secure system settle down may cause alarm to be set at the next activation by turning on the power switch. In an emergency situation, you can start the engine even if the alarm is set. In order to release above alarm, turn off the power switch and wait 6 seconds before turning the power switch on again.

6. Turn the battery switch off for engine and engine control system.
7. Close the fuel tank cock.
8. Close the seacock.

CAUTION

- **Be sure to close the seacock.** Neglecting to close the seacock could allow water to leak into the boat and may cause it to sink.
- **If seawater is left inside the engine,** it may freeze and damage parts of the cooling system when the ambient temperature is below 0 °C (32 °F).

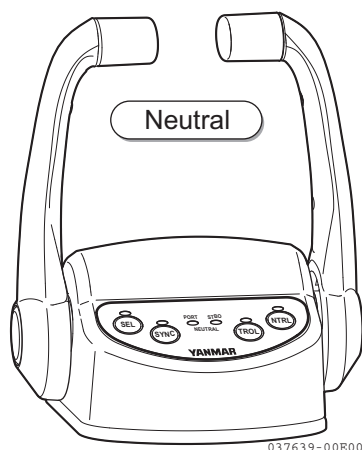


Figure 29

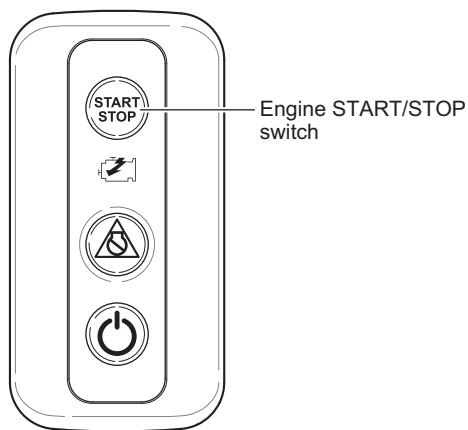


Figure 30

Emergency Stop

Electric Emergency Stop


NOTICE

Never use the Emergency Stop switch for a normal engine shutdown. Use this switch only when stopping the engine suddenly in an emergency.

1. Pressing the Emergency Stop switch on the switch panel will stop the engine immediately.
2. The Emergency Stop screen will be shown on the display, and the buzzer will sound.
3. After the engine has stopped, press the Emergency Stop switch to release the emergency stop. After releasing, it may take sometime to restart.

Note:

1. *The Emergency Stop switch should only be used in emergencies. Use the Engine START/STOP switch to stop the engine normally.*
2. *The engine cannot be started while the Emergency Stop switch is pressed (emergency stop mode not canceled).*

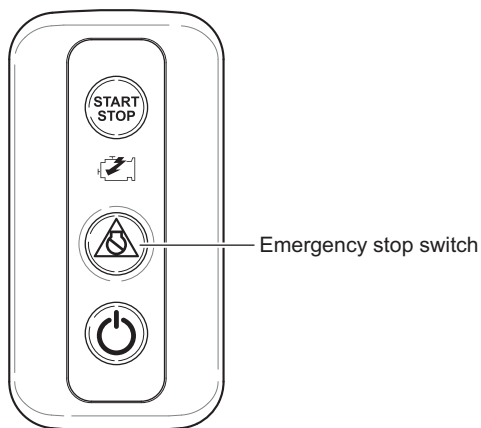

037627-01EN01

Figure 31

NOTICE

- In case of emergency, turning off the battery switch for the engine control unit can also stop the engine immediately.
- You can restart the engine but an alarm may be set up when the power switch is turned on. Unless you are in an emergency situation, in order to release above alarm, turn off the power switch and wait 6 seconds before turning the power switch on again.

CONTROL THE BACKUP PANEL

WARNING

Only use this in an emergency.

1. Pull out the protect cover.
2. Check that the power switch on the switch panel is OFF and that the control head handle and backup panel's shift switch are in the N (Neutral) position.
3. Press the power switch to the "ON" position on the backup panel. The lamp will come and control by the backup panel is enabled.
4. The engine can be started or stopped with the START/STOP switch.
5. Shift gears using the shift switch.
(FWD: forward, NTRL: neutral, REV: reverse)
6. Adjust the engine speed using the sub throttle volume. (anti-clockwise: lower engine speed, clockwise: raise engine speed)

When controlling the throttle, first move it fully anti-clockwise.

NOTICE

- The throttle of the engine that has been turned on can be controlled.
- When controlling the throttle, always move it fully anti-clockwise first.
- Be sure to lower the engine speed by turning the sub throttle volume fully to anti-clockwise before stopping the engine.

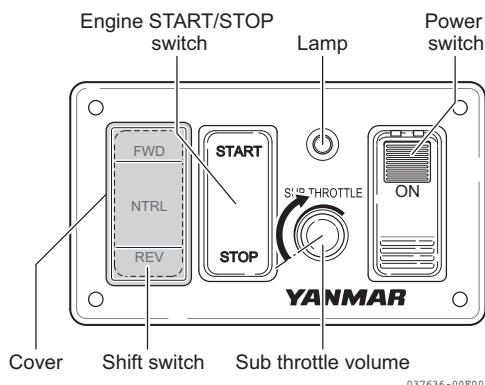


Figure 32

CONTROL THE BACKUP
PANEL (NEW TYPE)

⚠ WARNING

Only use this in an emergency.

1. Remove the cover of the backup panel.
2. Check that the power switch on the switch panel is OFF and that the control head handle and backup panel's shift switch are in the neutral position.
3. Press the power switch to the "ON" position on the backup panel. The lamp will come and control by the backup panel is enabled.
4. The engine can be started or stopped with the START/STOP switch.
5. Shift gears using the shift switch.
(FWD: forward, intermediate position of switch: neutral, REV: reverse)
6. Adjust the engine speed using the sub throttle control volume. (anti-clockwise: lower engine speed, clockwise: raise engine speed)

When controlling the throttle, first move it fully anti-clockwise.

NOTICE

- The throttle of the engine that has been turned on can be controlled.
- When controlling the throttle, always move it fully anti-clockwise first.
- Be sure to lower the engine speed by turning the sub throttle volume fully to anti-clockwise before stopping the engine.

State where cover is removed

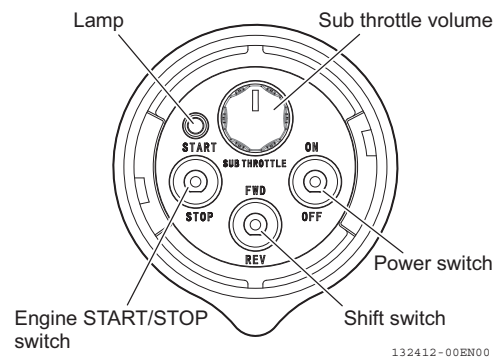


Figure 33

State where cover is attached

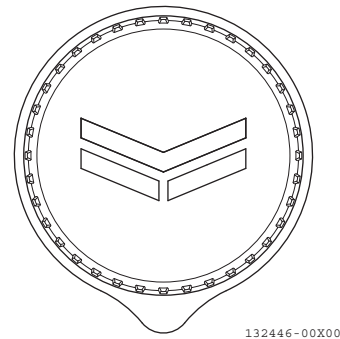


Figure 34

CHECKING THE ENGINE AFTER OPERATION

- Check that the power switch is off and that the battery switch (if equipped) is turned to off.
- Fill the fuel tank. *See Filling the Fuel Tank on page 67.*
- Close seawater cock(s).
- If there is a risk of freezing, check that the cooling system contains enough coolant. *See Engine Coolant Specifications on page 74.*
- If there is a risk of freezing, drain the seawater system. *See DRAIN SEAWATER COOLING SYSTEM on page 200.*
- At temperatures below 0 °C (32 °F), drain seawater system and connect the engine heater (if equipped).

OPERATION (VC20: VESSEL CONTROL SYSTEM)

Starting the Engine

1. Open the seacock (if equipped).
2. Open the fuel tank cock.
3. Turn the battery switch on for engine and engine control system.
4. Press the Power switch on the switch panel of the selected station (**Figure 35, (1)**).
 - If the “YANMAR E-key” has been set, hold the key fob in front of the blinking lamp on the switch panel to authenticate the key.
 - The switch panel lamp will come on, and the control head (**Figure 36**) “SEL” lamp (**Figure 37**) will come on or flash.
 - To use the Engine START/STOP switch, be sure to turn the Power switch ON.

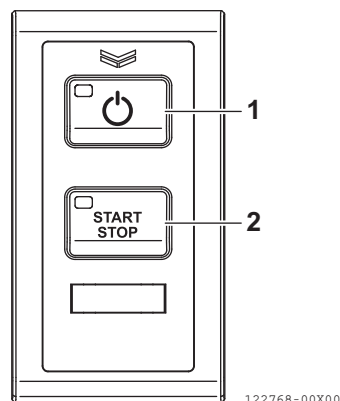


Figure 35

5. If the “Sys on by ID” has been set, enter the password into the display.
6. Press the control head “SEL” switch.
 - Wait until the display shows the engine data. The display is shown.

ENGINE OPERATION

7. If the “Start by ID” has been set, enter the password into the display.
 - The “Start by ID” has been set, the engine can be started in 10 seconds after entering the password into the display.
8. Move the remote control handle to the N (Neutral) position.



Figure 36

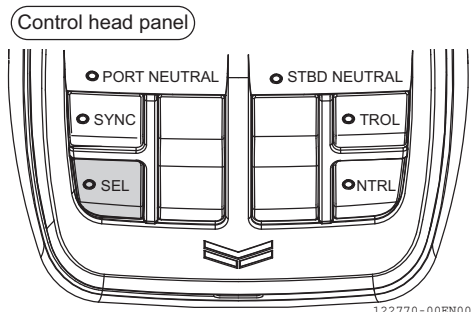


Figure 37

9. Press the Engine START/STOP switch (**Figure 35, (2)**) and power on the starter.
 - When the engine starts, the VC20 display will show the screen with engine conditions (**Figure 38**).

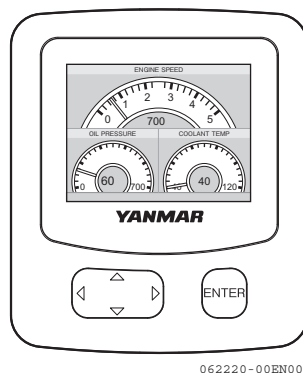


Figure 38

Note:

1. Concerning the control head “SEL” lamp. For Multi-Station: the “SEL” lamp will flash and for Single Station: the “SEL” lamp will come on.
2. Pressing the Engine START/STOP switch when the “SEL” lamp is flashing allows the station to be selected as the engine is started.
3. The engine will not start or stop if the Power switch is OFF. The Power switch must be ON at all times when the engine is running.
4. Do not press the engine START/STOP switch except for stopping the engine.

Vessel Control System (VC20) has the following functions, which can be set in the Utility screen of MAIN MENU in the Digital Display. For more details, refer to the Vessel Control System Installation Manual.

Station Protect

It is a function to prevent the operation from the other stations while steering.

- Select "YES" to enable "Station protect". The display and control head of that station can no longer be operated.
- Select "NO" or turn off the system power to disable "Station protect".

Sys on by ID, Start by ID

It is a function to check ID for the purpose of anti-theft.

- If you select "YES" in "Sys on by ID", it is necessary to enter the Owner ID on the display when turning on the system power. If you select "YES" in "Start by ID", it is necessary to enter the owner ID on the display at engine start.
- The initial ID is "00000" and it can be changed with the below "Owner ID change" function.
- Even when the system power is turned off, the selected "Sys on by ID" and "Start by ID" cannot be disabled and it is required to enter the Owner ID at each time.
- After entering the ID and verification, if you don't operate for 10 seconds, the entry becomes invalid and it is required to enter the Owner ID again.

Owner ID Change

The ID used in "Sys on by ID" and "Start by ID" can be set and changed as follows.

- If you select "Owner ID change", the ID verification screen is displayed and you are asked to enter the current ID (Default: "00000").
- If you enter the wrong ID 5 times, the ID is locked and you are no longer able to make an input. The lock can be released by turning off the system power.
- ID can be changed to any 5 digit number from 00000 to 99999.
- Select the number from 0 to 9 with the ▲▼ buttons. The fixed number is displayed by an asterisk when you press the ► button and the next digit is highlighted.
- Press the [ENTER] button after highlighting it with the ► button when all 5 digits are entered and the new ID becomes valid.

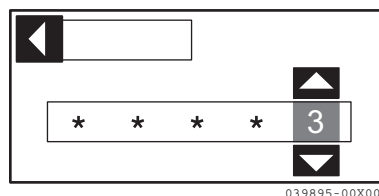


Figure 39

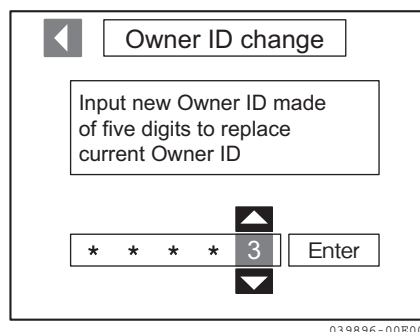


Figure 40

YANMAR E-key

By registering the key, the key authentication function is enabled when the system power is turned on.

Note: To register the key, the system version must support YANMAR E-key and the YANMAR E-key function must be enabled at initial settings.

NOTICE

- If you lose your key, contact an authorized dealer or distributor.
- If you are traveling to a country that has not obtained radio wave certification, you need to perform a Key reset to disable the YANMAR E-key.

Key registration

1. Select “YANMAR E-key-ON” from the MAIN MENU.

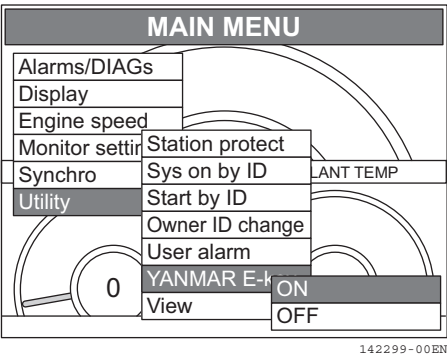


Figure 41

2. Confirm the pop-up screen and select OK. (For two or more engines, turn on all switch panels)

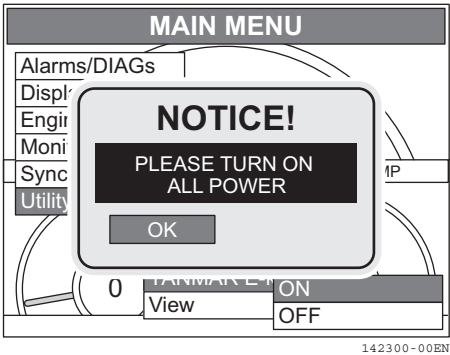


Figure 42

3. Confirm the pop-up screen and select OK.

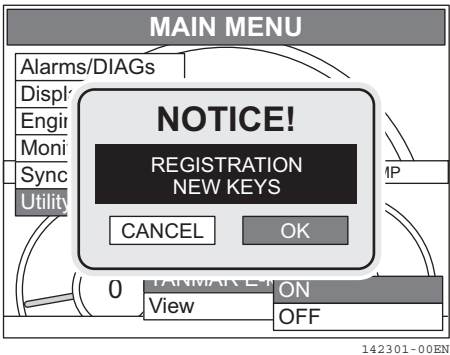


Figure 43

4. When the key registration screen is displayed, the switch panel lamp blinks.

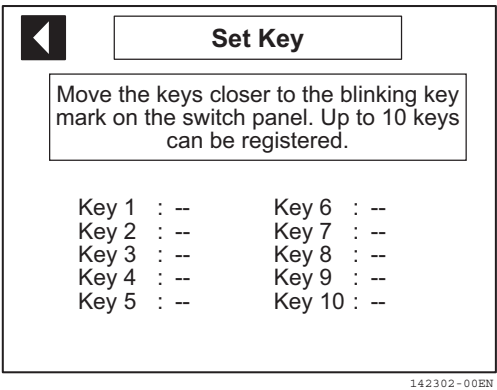


Figure 44

5. Hold the key to be registered over the key icon on the switch panel and make sure that the pop-up display and registration status have been updated. (If you wish to register multiple keys, repeat this procedure.)

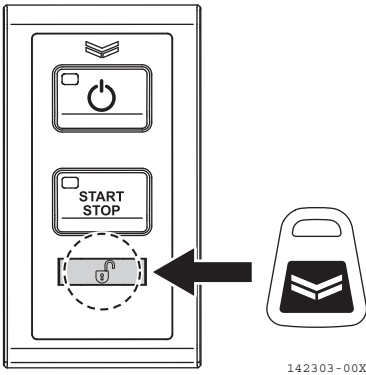


Figure 45

- Up to 10 keys can be registered. If you attempt to register more than 10 keys, the following notice shows and cannot register.

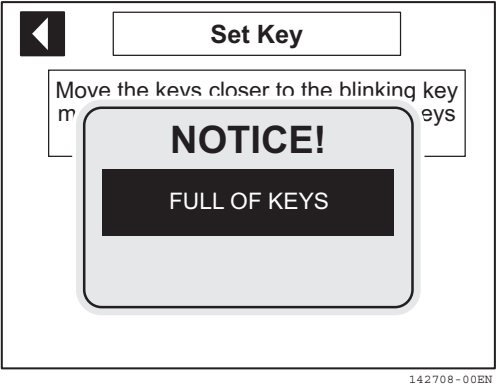


Figure 47

6. Close the key registration screen to complete the registration process. Press the ENTER button with the “◀” icon (left side on the top) highlighted.

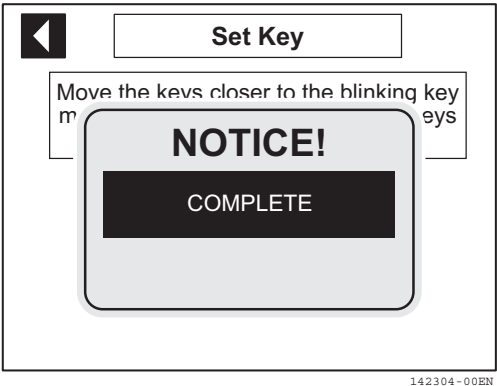


Figure 46

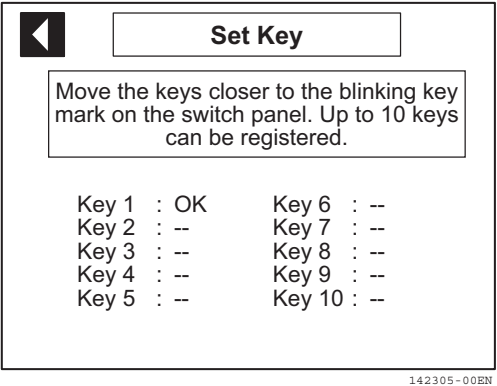


Figure 48

Key 1	: OK	Key 6	: --
Key 2	: --	Key 7	: --
Key 3	: --	Key 8	: --
Key 4	: --	Key 9	: --
Key 5	: --	Key 10	: --

Key reset

Note: When the key authentication function is disabled, all key registration information will also be deleted.

- 1. Select “YANMAR E-key-OFF” from the MAIN MENU.

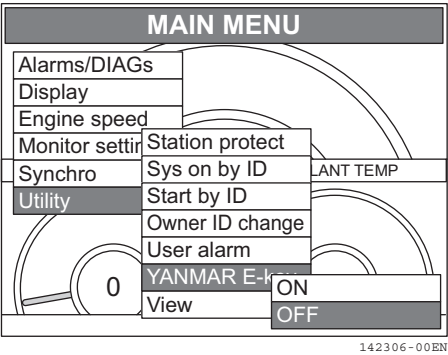


Figure 49

- 2. Confirm the pop-up screen and select OK. (For two or more engines, turn on all switch panels)

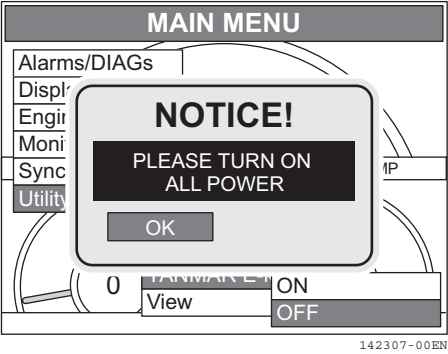


Figure 50

- 3. Confirm the pop-up screen and select OK.

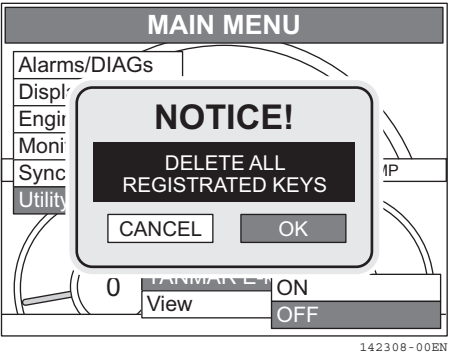


Figure 51

- 4. The key reset is completed.

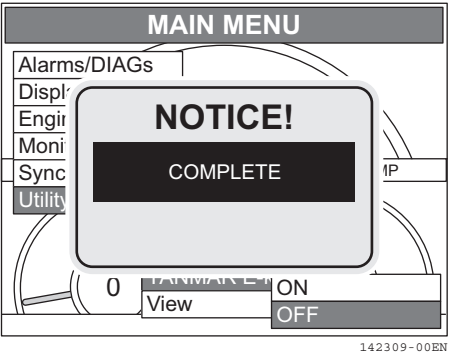


Figure 52

Power on with YANMAR E-key

1. Press the power switch on the switch panel.

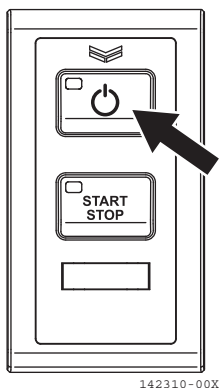


Figure 53

2. The green light will start blinking for 10 seconds.

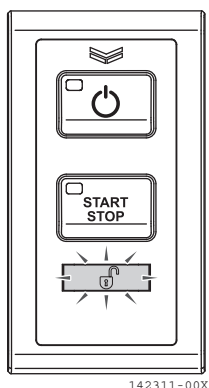


Figure 54

3. Hold the key fob in front of the lamp while it is blinking.

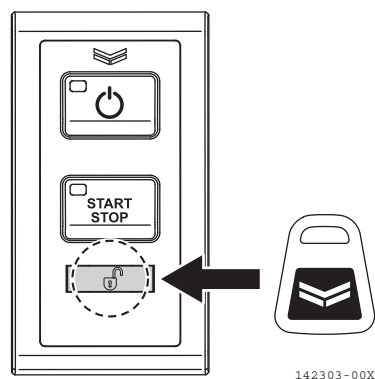


Figure 55

4. The Power switch lamp will come on.

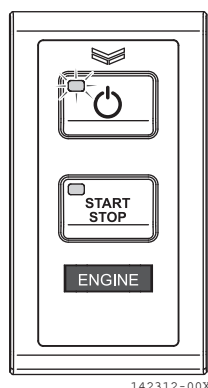


Figure 56

- In the case of two or more engines, once the key is authenticated in one place, the power can be turned on by simply pressing the power switch for the others.

If the Engine Fails to Start

Before pressing the Start switch again, confirm that the engine has stopped completely. If the starter motor is operated before the engine has completely stopped, the starter motor pinion gear will be damaged.

NOTICE

Never hold for longer than 15 seconds or the starter motor will overheat.

Never attempt to restart the engine if the engine has not stopped completely. Pinion gear and starter motor damage will occur.

Note: Push and hold the start switch for a maximum of 15 seconds. If the engine does not start the first time, wait for about 15 seconds before trying again.

NOTICE

If the vessel is equipped with a water lift (water lock) muffler, excessive cranking could cause seawater to enter the cylinders and damage the engine. If the engine does not start after cranking for 15 seconds, close the thru-hull water intake valve to avoid filling the muffler with water. Crank for 10 seconds at a time until the engine starts. When the engine does start, stop the engine immediately and turn off the power switch. Be sure to re-open the seacock and restart the engine. Operate the engine normally.

Air Bleeding the Fuel System after Starting Failure

If the engine does not start after several attempts, there may be air in the fuel system. If air is in the fuel system, fuel cannot reach the fuel supply pump. Bleed the air out of the system. *See Bleeding the Fuel System on page 68.*

Starting at Low Temperatures

Comply with local environmental requirements. Do not use starting aids.

NOTICE

Never use an engine starting aid such as ether. Engine damage will result.

To limit white smoke, run the engine at low speed and under moderate load until the engine reaches normal operating temperature. A light load on a cold engine provides better combustion and faster engine warm-up than no load.

Avoid running the engine at idling speed any longer than necessary.

After the Engine has Started

After the engine has started, check the following items at a low engine speed:

1. Check that the gauges, indicators and alarm are normal.
 - Normal coolant operating temperature is lower than 80 °C (176 °F).
 - Normal oil pressure at fuel stop power is 0.45 to 0.55 MPa (65 to 80 psi).
2. Check for water, fuel or oil leakage from the engine.
3. Check that the smoke color, engine vibration and sound are normal.
4. When there are no problems, keep the engine at low speed with the boat still stopped to distribute engine oil to all parts of the engine.
5. Check that sufficient seawater is discharged from the seawater outlet. Operation with inadequate seawater discharge will damage the impeller of the seawater pump. If seawater discharge is too low, stop the engine immediately. Identify the cause and repair.

NOTICE

The engine will seize if it is operated when seawater discharge is too small or if load is applied without any warming up operation.

CONTROL HEAD OPERATION

Control Head for Marine Gear

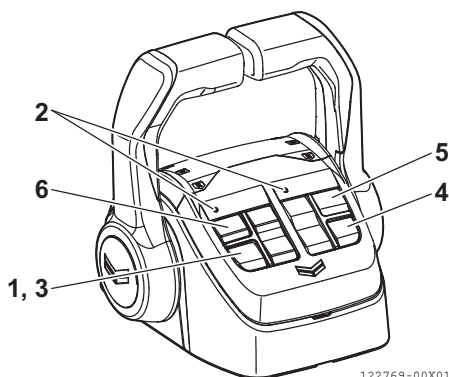


Figure 57

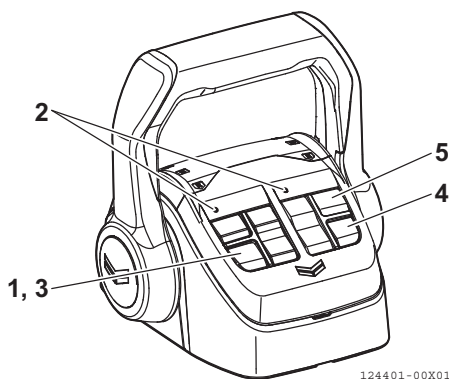


Figure 58

ENGINE OPERATION

1. Select/change station
A lit “SEL” lamp indicates that the station is active.
 - On single station boats, station selection is automatic.
 - For multi-stations, choose a station and then press “SEL” switch with handles in neutral.
2. Neutral position
A lit NEUTRAL lamp indicates hat the handle station is neutral.
3. Indicator dimming
Press “SEL” switch and the lamps will dim.
4. Shift disconnect (SD)
Flashing NEUTRAL lamp indicate SD engaged for this engine allowing throttle control without gear engagement.
 - Check the handle is neutral, and press “NTRL” switch.
5. Trolling
Check the handle is neutral, and press “TROL” switch, and “TROL” lamp indicates trolling is active.
6. Synchronizing
Press “SYNC” switch and “SYNC” lamp indicates sync. is active.

Control Head for Stern Drive

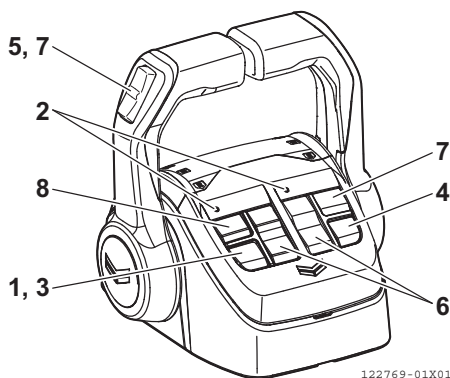


Figure 59

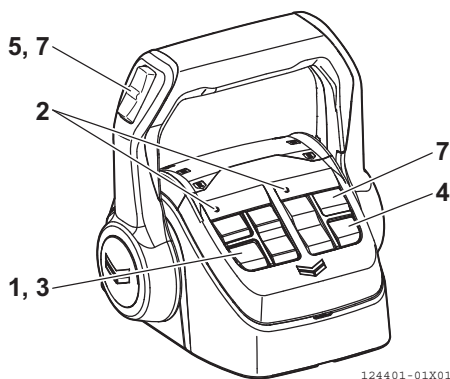


Figure 60

1. **Select/change station**
A lit “SEL” lamp indicates a station is active.
 - On single station boat, station selection is automatic.
 - For multi-stations, choose a station and then press “SEL” switch with handles in neutral.
2. **Neutral position**
A lit NEUTRAL lamp indicates a handle station is neutral.
3. **Indicator dimming**
Press “SEL” switch and the lamps will dim.
4. **Shift disconnect (SD)**
A flashing NEUTRAL lamp indicates that the SD is engaged on this engine. This allows throttle control without gear engagement.
 - Check that the handle is in the NEUTRAL position, and press “NTRL” switch.
5. **Trimming adjustment**
Push the trim switch arrows both or single stern drive will be adjustment on cruising boat.
6. **Trimming adjustment (Dual control head only)**
Press the trim adjustment switches arrows and each side stern drive will be fine trimming adjustment.
7. **Tilt (Trailer mode)**
Press “TLR” switch with handle trim switch and both side stern drives will be tilted together.
8. **Synchronizing**
Press “SYNC” switch and “SYNC” lamp indicates sync. is active.

Station Selection (Only for Multiple Stations)

Engine not running (Control head in Neutral)

When first turning the panel switch to the “POWER ON” position, the “SEL” lamp will flash and the NEUTRAL lamp will light up. This is an indication that no specific helm station has been selected for boat operation.

By simply pressing the “SEL” switch at the station desired for operation, the flashing lamp will turn on continuously.

This indicates control of the boat is now at this station location. If you choose to change helm locations while cruising, switch the station as described below.

Engine running (Control head in Neutral)

To change stations when the engine is running but in Neutral position, do the following:

1. Press the control head “SEL” switch of the desired station (make sure control head is in Neutral position).
2. The “SEL” lamp will come on at the same time as the stations switch, enabling control of the selected station.

ENGINE OPERATION

Engine running (Control head not in Neutral)

To change stations when the engine is running and not in Neutral position (so the boat is moving), do the following:

1. Press the control head “SEL” switch of the desired station.
2. The “SEL” lamp will flash and switch to standby mode for 5 seconds.
3. Stations will switch when the handle position (throttle and shift) of the desired station is the same as the handle position of the station current active station.
4. The “SEL” lamp will come on at the same time as the stations switch, enabling control of the selected station.

Note:

1. *All lamps for stations that have not been selected will turn off.*
2. *If the handle is not aligned with the station to be selected during the idling period for 5 seconds, the lamps will turn off and the station to be selected will remain unusable.*
3. *For dual control heads, both handles must be aligned.*
4. *SD mode and trolling mode for the newly selected station will be applied to the selected station. Synchro-mode will not be applied.*

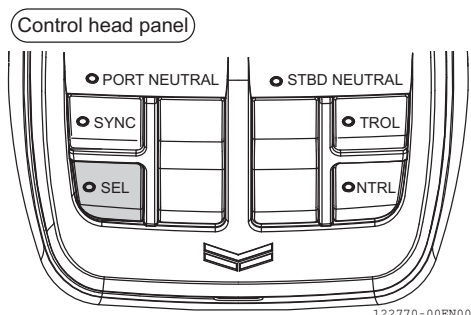


Figure 61

Indicator Dimming Feature

The light on the VC20 components can be varied in intensity to a more comfortable level if desired.

The dimming level is shared between all components of a station.

The lamps can be dimmed (light adjustment) using the following two methods.

1. Dimmer with the display dimmer settings.
2. Dimmer with the control head “SEL” switch.

Dimmer with the control head “SEL” switch

1. The lamp brightness will decrease one level each time the “SEL” switch of the selected station control head is pressed.
2. Pressing “SEL” switch with the brightness on its lowest level will return the brightness to its highest level.

Dimmer with the display dimmer settings

1. Go to the brightness setting in the display.
2. Select the desired brightness level.

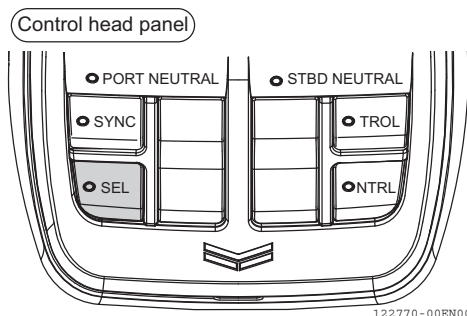


Figure 62

Synchronization

Note: Power train sync. and cruise sync. may be selected using the display. Be sure to set the lead engine on the display before using SYNC.

Two lever sync. (Cruise sync.)

The engine speed synchronization is activated when the engine speed exceeds 1000 rpm and the control head handle is in proximity.

1. Press "SYNC" switch.
2. Match the control head handle positions within 10% of each other. ("SYNC" lamp goes steady when handles match.)
3. When handles are moved within 10% of each other and over 1000 rpm forward throttle, cruise sync. is engaged.
4. When handles are moved more than 10% apart or under 1000 rpm forward throttle, cruise sync. is disengaged. ("SYNC" lamp flashes.)
5. To leave the sync. mode, return the handles to the Neutral position and press the "SYNC" switch.

One lever sync. (Power train sync.)

Automatically synchronizes engines and transmission. The engine handle controls throttle and shift of both engines across the entire control range.

1. Press "SYNC" switch.
2. Match the control head handle positions within 10% of each other. ("SYNC" lamp goes steady when handles match.)
3. To leave the sync. mode, return the handles to the Neutral position and press "SYNC" switch.

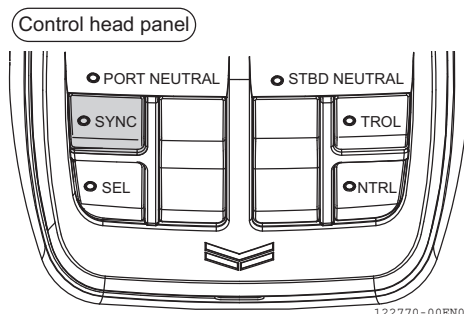


Figure 63

Tilt Elevation (Stern Drive Specification)

WARNING

To tilt the stern drive, be sure to check that there is nobody near the drive and no obstacles in the surroundings before the operation.

Normal operation

1. Pressing the control head handle trim switch will elevate the drives (both engines 1 and 2). The trim angle is limited.
2. With two engines, press the control head port side or starboard side trim adjustment switch to make fine adjustments to the elevation angle of the left and right drive motors, respectively.

When aligning with the Trailer position, when aligning from the Trailer position to the Drive position

1. Check that the control head handle is in the Neutral position and the engine is stopped.
2. To move from the Drive position to the Trailer position, press the trim switch while pressing the TLR switch at the same time.
3. To move from the Trailer position to the Drive position, press the trim switch only. Do not operate the TLR switch.

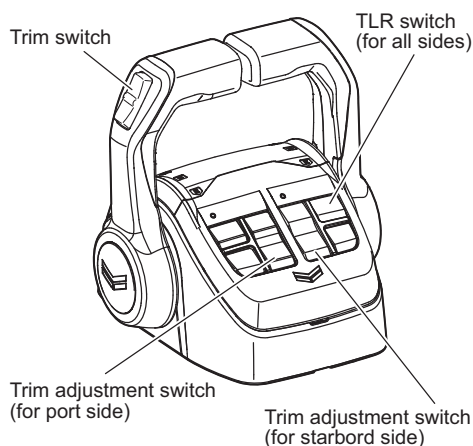


Figure 64

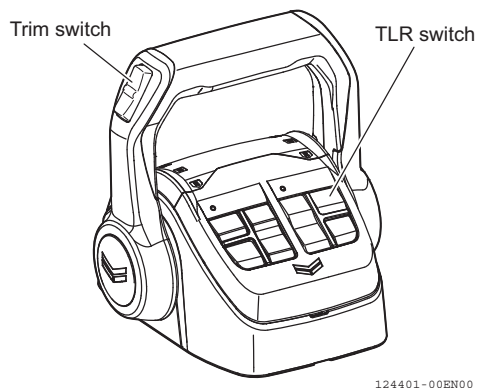


Figure 65

TROLLING OPTION (FOR KMH MARINE GEAR SPECIFICATION)

Trolling Overview and Function

On the marine gear equipped with trolling, trolling mode is engaged by a TROL (trolling switch) on the control head that is used to turn trolling ON and OFF.

The factory default configuration for trolling operation is the split trolling mode. This operation allows the operator to perform from minimum prop RPM (full slip) to maximum prop RPM (full lock up) and then a throttle ramp up with one handle motion. The defaults are: 60% of the handle movement from gear-idle to maximum prop RPM, with the remaining 40% handle movement used for throttle control to a maximum of 40% throttle. The width of the trolling range can be set with the display. (Trolling: Lever travel)

1. Move the control head handle to the N (Neutral) position.
2. Press the "TROL" switch.
3. The "TROL" lamp will come on.
4. In trolling range, the propeller speed is adjusted by slipping the clutch while the engine is idling. In throttle range, the engine speed is adjusted with the clutch in the engaged (connected) condition.
5. Moving the control head handle to the N (Neutral) position and pressing the "TROL" switch will release trolling mode.

Note: Switching stations will apply the trolling mode.

Warm up the marine gear sufficiently before starting the trolling operation.

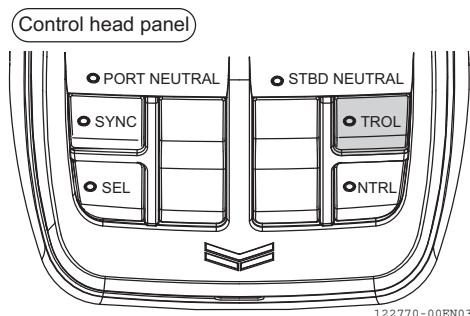


Figure 66

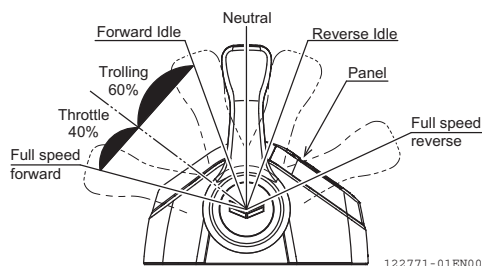


Figure 67

Trolling Adjustment for C-Type Trolling

No need for any adjustment/calibration.

Trolling Adjustment for E-Type Trolling

Please set “Full slip point” and “Lock up point” under “Trolling” as follows.

To perform this adjustment, you need to enter the Service ID and switch to the Service mode display. Contact your YANMAR dealer or distributor with reference to Operating in Service Mode on the Vessel Control System Installation Manual for details.

Note:

- Warm up the marine gear sufficiently before calibration.
- The propeller shaft can be rotated during this adjustment, fix the boat with a rope or move the boat to a safe area.

1. Select the “Lever travel” (trolling, lever travel) on the display and set it to 100%. (Default value: 60%)
2. Select “Trolling calibration” (trolling, trolling calibration) then set “Full slip point” to 40 (%) and “Lock up point” 100 (%).
3. Set the control head handle at Forward Idle position.
4. Check the propeller shaft rotation, if the propeller shaft is rotating reduce the “Full slip point” value until the propeller shaft stops.
5. Increase the “Full slip point” value until the propeller shaft starts rotating smoothly. That will be the adjustment point for “Full slip point”.
6. Set the control head handle at Max. position.
7. Reduce “Lock up point” value, and set the value to the boundary between trolling and non-trolling.
The rough target of “Lock up point” is the value of “Full slip point” +10 - 20%.

Note: Lock up point must be bigger than full slip point.

WARM UP MODE (SHIFT DISCONNECT)

1. Move the remote control handle to the N (Neutral) position. (The NEUTRAL lamp will come on)
2. Press the “NTRL” switch of the selected station control head.
3. The NEUTRAL lamp will come on, and the NEUTRAL lamp will flash.
4. Move the remote control handle. The engine speed can be controlled while the gear shift is in neutral.
5. Move the remote control handle to the N (Neutral) position, press the “NTRL” switch and cancel warm up mode.

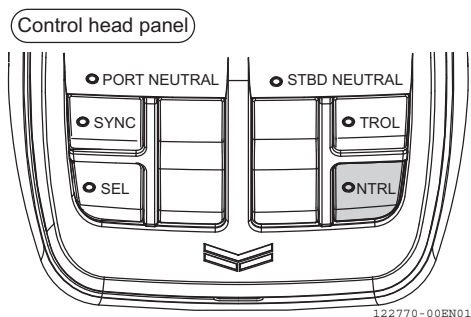


Figure 68

THROTTLE AND SHIFT CONTROL

⚠ WARNING

Sudden Movement Hazard!

The boat will start to move when the marine gear is engaged:

- Ensure the boat is clear of all obstacles forward and aft.
- Quickly shift to the FORWARD position then back to the NEUTRAL position.
- Observe whether the boat moves in the direction you expect.

Neutral

1. Move the remote control handle to the N (Neutral) position. (The NEUTRAL lamp will come on)
2. When switching between forward and reverse, move the handle slowly between the forward and reverse positions. Move the handle firmly into either the forward or reverse position.

Forward

Move the handle toward F (forward) to the forward-side notch position. The engine will remain idling. Moving the handle forward further will increase the engine speed.

Reverse

Move the handle toward R (reverse) to the reverse-side notch position. The engine will remain idling. Pulling the handle back further will increase the engine speed.

Forward (Reverse) to Reverse (Forward)

Moving the handle quickly and switching from forward (reverse) to reverse (forward) will activate the gear shift delay (astern delay). The engine speed to decrease to idle speed for several seconds.

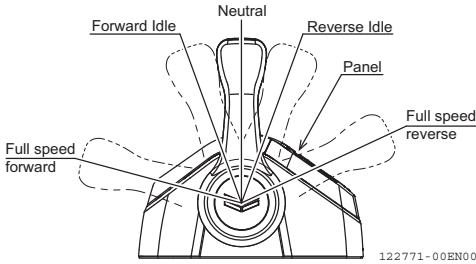


Figure 69

ENGINE SPEED LIMIT MODE

1. Move the remote control handle to the Forward Idle position. (Both sides in the case of twin engine.)
2. Press the “NTRL” switch of the selected station. (The lamp above “NTRL” switch will flash.)
3. Even if you tilt the handle to accelerate, the engine speed increases only up to the setting value.
4. Move the remote control handle to the N (Neutral), Forward Idle, or Reverse Idle position (both sides in the case of twin engine) and press the “NTRL” switch to release the [Engine Speed Limit Mode].

Note: The setting value can be set by the VC20 display. The default value is 50%.

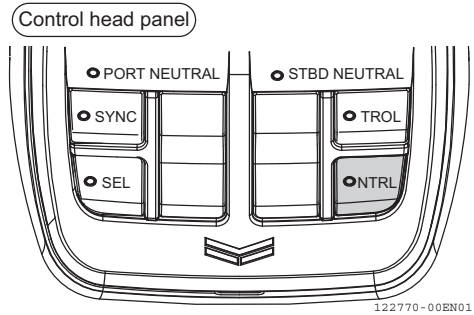


Figure 70

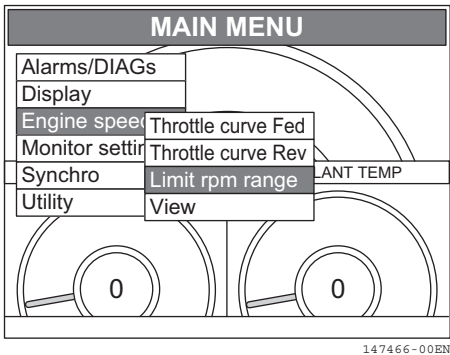


Figure 71

CAUTIONS DURING OPERATION

NOTICE

Engine trouble can arise if the engine is operated for a long time under overloaded conditions with the control handle in the full throttle position (maximum engine speed position), exceeding the continuous rated output engine speed. Operate the engine at about 100 min⁻¹ lower than the full throttle engine speed.

Note: If the engine is in the first 50 hours of operation, see New Engine Break-In on page 10.

Always be on the lookout for problems during engine operation.

Pay particular attention to the following:

- Is sufficient seawater being discharged from the exhaust and seawater outlet pipe?

If the discharge is small, stop the engine immediately; identify the cause and repair.

- Is the smoke color normal?

The continuous emission of black exhaust smoke indicates engine overloading. This shortens the engines life and should be avoided.

- Are there abnormal vibrations or noise?

NOTICE

Excessive vibration may cause damage to the engine, marine gear, hull and onboard equipment. In addition, it causes able passenger and crew discomfort.

Depending on the hull structure, engine and hull resonance may suddenly become great at a certain engine speed range, causing heavy vibrations. Avoid operation in this speed range. If you hear any abnormal sounds, stop the engine and inspect.

- Alarm buzzer sounds during operation.

NOTICE

If any alarm indicator with audible alarm sound appears on the display during engine operation, stop the engine immediately. Determine the cause and repair the problem before you continue to operate the engine.

- Is there water, oil or fuel leakage, or are there any loose bolts?

Check the engine room periodically for any problems.

- Is there sufficient diesel fuel in the diesel fuel tank?

Replenish diesel fuel before leaving the dock to avoid running out of fuel during operation.

- When operating the engine at low speed for long periods of time, race the engine once every 2 hours.

NOTICE

Racing the engine: With the gear in NEUTRAL, accelerate from the low-speed position to the high-speed position and repeat this process about five times. This is done to clean out carbon from the cylinders and the fuel injection valve. Neglecting to race the engine will result in poor smoke color and reduce engine performance.

- If possible, periodically operate the engine at near maximum engine speed while underway. This will generate higher exhaust temperatures, which will help clean out hard carbon deposits, maintaining engine performance and prolonging the life of the engine.

NOTICE

Never turn off the battery switch (if equipped) or short the battery cables during operation. Damage to the electric system will result.

SHUT-DOWN THE ENGINE (STOPPING)

Stop the engine in accordance with the following procedures:

Normal Stopping

1. Move the remote control handle to the N (Neutral) position. (The NEUTRAL lamp will come on.)
2. Cool the engine down at low speed (below 1000 min⁻¹ (rpm)) for about 5 minutes.

NOTICE

For maximum engine life, YANMAR recommends that when shutting the engine down, you allow the engine to idle, without load, for 5 minutes. This will allow the engine components that operate at high temperatures, such as the turbo-charger and exhaust system, to cool slightly before the engine itself is shut down.

3. Press the Engine START/STOP switch on the switch panel of the selected station.
4. Press the Power switch and turn the power OFF.

CAUTION

Do not press the Engine START/STOP switch when the engine is stopped. The engine will restart.

ENGINE OPERATION

- Wait 6 seconds or more before turning the battery switch off for secure system settle down.

NOTICE

- Do not turn the battery switch off before turning the power switch off or immediately after turning off the power switch.
- Turning the battery switch off before secure system settle down may cause alarm to be set at the next activation by turning on the power switch. In an emergency situation, you can start the engine even if the alarm is set. In order to release above alarm, turn off the power switch and wait 6 seconds before turning the power switch on again.

- Turn the battery switch off for engine and engine control system.
- Close the fuel tank cock.
- Close the seacock.

CAUTION

- Be sure to close the seacock.** Neglecting to close the seacock could allow water to leak into the boat and may cause it to sink.
- If seawater is left inside the engine,** it may freeze and damage parts of the cooling system when the ambient temperature is below 0 °C (32 °F).

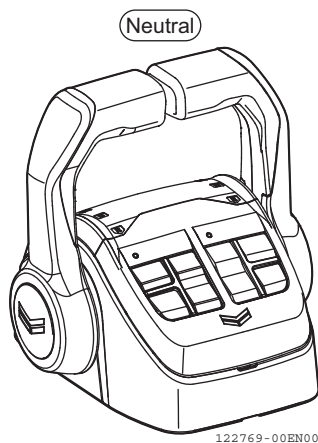


Figure 72

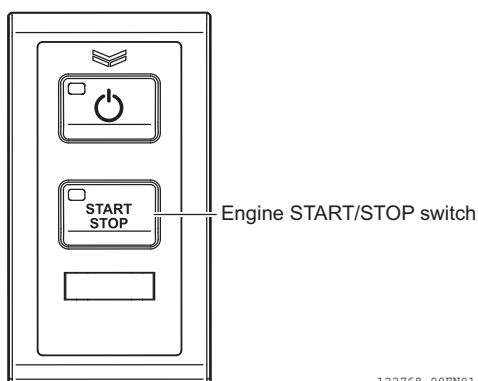


Figure 73

Emergency Stop

Electric Emergency Stop


NOTICE

Never use the Emergency Stop switch for a normal engine shutdown. Use this switch only when stopping the engine suddenly in an emergency.

1. Pressing the Emergency Stop switch will stop the engine immediately.
2. The Emergency Stop screen will be shown on the display, and the buzzer will sound.
3. After the engine has stopped, press the Emergency Stop switch to release the emergency stop. After releasing, it may take sometime to restart.

Note:

1. *The Emergency Stop switch should only be used in emergencies. Use the Engine START/STOP switch to stop the engine normally.*
2. *The engine cannot be started while the Emergency Stop switch is pressed (emergency stop mode not canceled).*

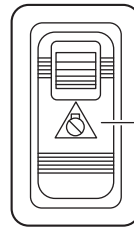

Emergency stop switch

061304-00EN00

Figure 74

NOTICE

- In case of emergency, turning off the battery switch for the engine control unit can also stop the engine immediately.
- You can restart the engine but an alarm may be set up when the power switch is turned on. Unless you are in an emergency situation, in order to release above alarm, turn off the power switch and wait 6 seconds before turning the power switch on again.

CONTROL THE BACKUP PANEL

WARNING

Only use this in an emergency.

1. Pull out the protect cover.
2. Check that the power switch on the switch panel is OFF and that the control head handle and backup panel's shift switch are in the N (Neutral) position.
3. Press the power switch to the "ON" position on the backup panel. The lamp will come and control by the backup panel is enabled.
4. The engine can be started or stopped with the START/STOP switch.
5. Shift gears using the shift switch.
(FWD: forward, NTRL: neutral, REV: reverse)
6. Adjust the engine speed using the sub throttle control volume. (anti-clockwise: lower engine speed, clockwise: raise engine speed)

When controlling the throttle, first move it fully anti-clockwise.

NOTICE

- The throttle of the engine that has been turned on can be controlled.
- When controlling the throttle, always move it fully anti-clockwise first.
- Be sure to lower the engine speed by turning the sub throttle volume fully to anti-clockwise before stopping the engine.

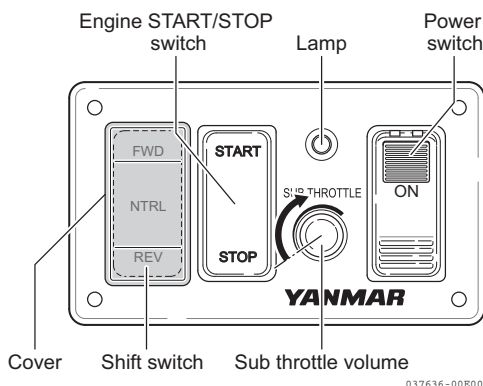


Figure 75

CHECKING THE ENGINE AFTER OPERATION

- Check that the power switch is off and that the battery switch (if equipped) is turned to off.
- Fill the fuel tank. *See Filling the Fuel Tank on page 67.*
- Close seawater cock(s).
- If there is a risk of freezing, check that the cooling system contains enough coolant. *See Engine Coolant Specifications on page 74.*
- If there is a risk of freezing, drain the seawater system. *See DRAIN SEAWATER COOLING SYSTEM on page 200.*
- At temperatures below 0 °C (32 °F), drain seawater system and connect the engine heater (if equipped).

OPERATION (VC30: VESSEL CONTROL SYSTEM)

Starting the Engine

1. Open the seacock (if equipped).
2. Open the fuel tank cock.
3. Turn the battery switch on for engine and engine control system.
4. Press the Power switch on the switch panel of the selected station (**Figure 78, (1)**).
 - If the “YANMAR E-key” has been set, hold the key fob in front of the blinking lamp on the switch panel to authenticate the key.
 - The switch panel lamp will come on, and the control head (**Figure 79**) “SEL” lamp (**Figure 80**) will come on or flash.
 - To use the Engine START/STOP switch, be sure to turn the Power switch ON.

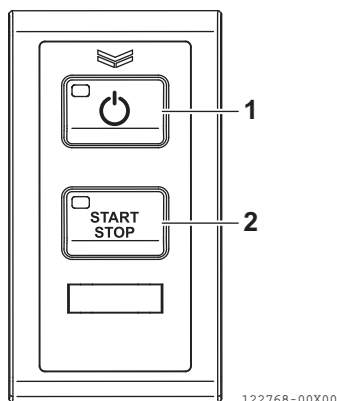


Figure 78

5. If the “Sys on by ID” has been set, enter the password into the display.
6. Press the control head “SEL” switch.
 - Wait until the display shows the engine data. The display is shown.

7. If the “Start by ID” has been set, enter the password into the display.
 - The “Start by ID” has been set, the engine can be started in 10 seconds after entering the password into the display.
8. Move the remote control handle to the N (Neutral) position.



Figure 79

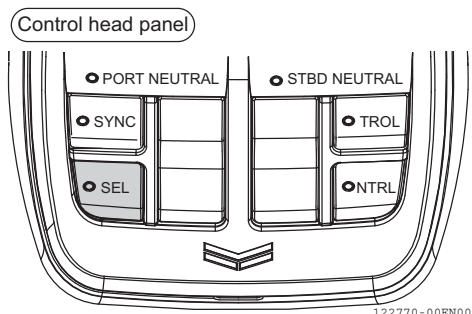


Figure 80

9. Press the Engine START/STOP switch (**Figure 78, (2)**) and power on the starter.
 - When the engine starts, the VC30 display will show the screen with engine conditions (**Figure 81**).

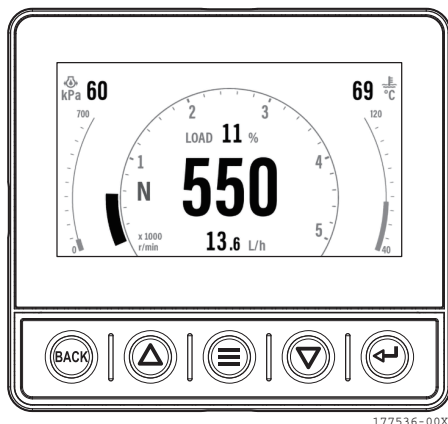


Figure 81

Note:

1. Concerning the control head “SEL” lamp. For Multi-Station: the “SEL” lamp will flash and for Single Station: the “SEL” lamp will come on.
2. Pressing the Engine START/STOP switch when the “SEL” lamp is flashing allows the station to be selected as the engine is started.
3. The engine will not start or stop if the Power switch is OFF. The Power switch must be ON at all times when the engine is running.
4. Do not press the engine START/STOP switch except for stopping the engine.

Station Protect

It is a function to prevent the operation from the other stations while steering.

- Select “YES” to enable “Station protect”. The display and control head of that station can no longer be operated.
- Select “NO” or turn off the system power to disable “Station protect”.

YANMAR E-key

By registering the key, the key authentication function is enabled when the system power is turned on.

Note: To register the key, the system version must support YANMAR E-key and the YANMAR E-key function must be enabled at initial settings.

NOTICE

- If you lose your key, contact an authorized dealer or distributor.
- If you are traveling to a country that has not obtained radio wave certification, you need to perform a Key reset to disable the YANMAR E-key.

Key registration

1. Select “YANMAR E-key-Yes” (System Settings: YANMAR E-key: Yes) from the MAIN MENU.

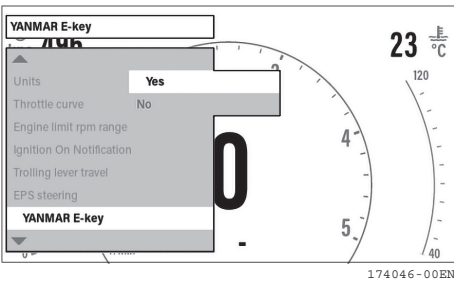


Figure 82

2. Confirm the pop-up screen and select OK. (For two or more engines, turn on all switch panels)

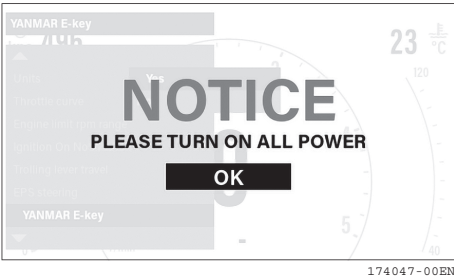


Figure 83

3. Confirm the pop-up screen and select OK.

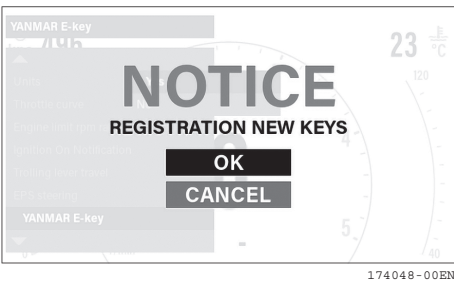


Figure 84

4. When the key registration screen is displayed, the switch panel lamp blinks.

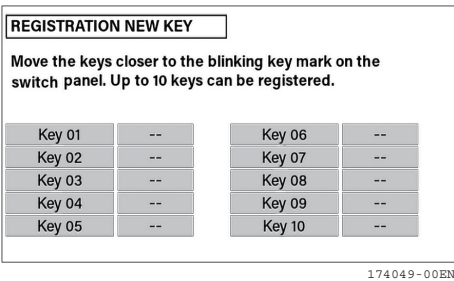


Figure 85

5. Hold the key to be registered over the key icon on the switch panel and make sure that the pop-up display and registration status have been updated. (If you wish to register multiple keys, repeat this procedure.)

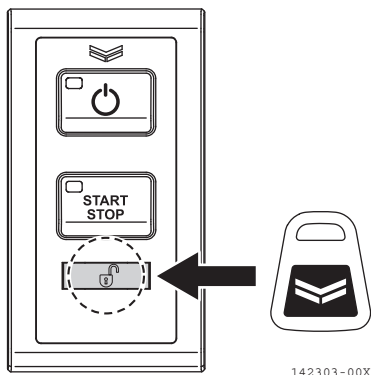


Figure 86

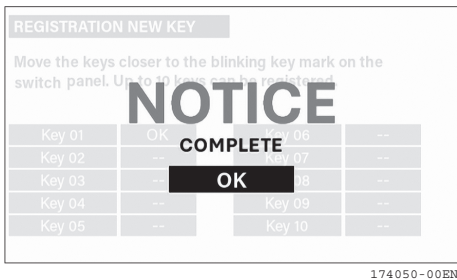


Figure 87

- Up to 10 keys can be registered. If you attempt to register more than 10 keys, the following notice shows and cannot register.

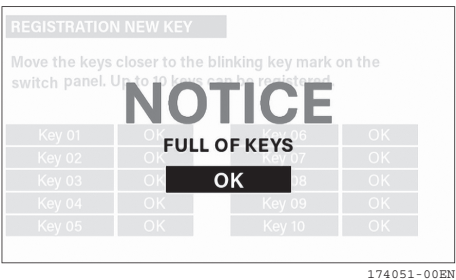


Figure 88

6. Close the key registration screen to complete the registration process.

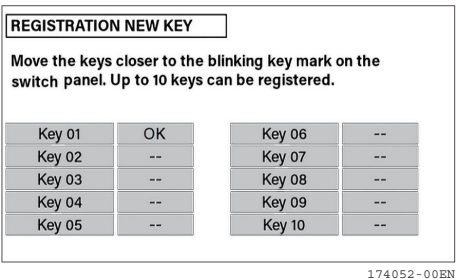


Figure 89

Key reset

Note: When the key authentication function is disabled, all key registration information will also be deleted.

- 1. Select “YANMAR E-key-No” (System Settings: YANMAR E-key: No) from the MAIN MENU.

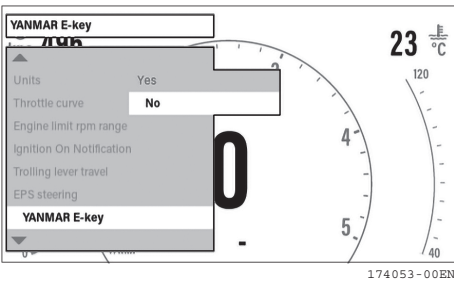


Figure 90

- 2. Confirm the pop-up screen and select OK. (For two or more engines, turn on all switch panels)



Figure 91

- 3. Confirm the pop-up screen and select OK.

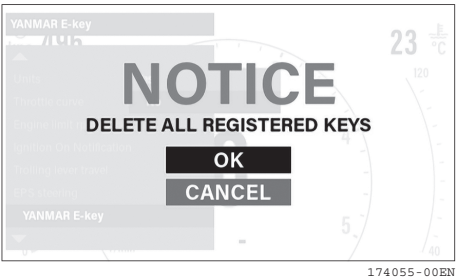


Figure 92

- 4. The key reset is completed.

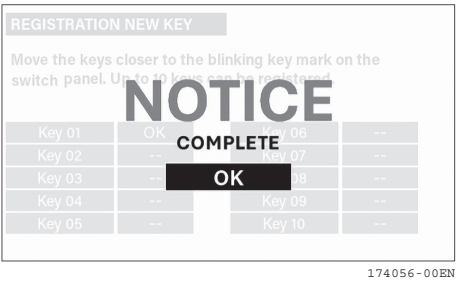


Figure 93

Power on with YANMAR E-key

1. Press the power switch on the switch panel.

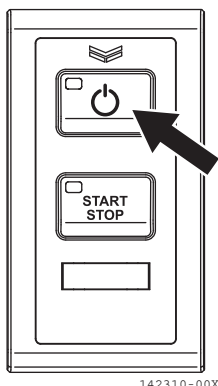


Figure 94

2. The green light will start blinking for 10 seconds.

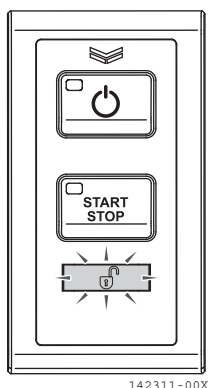


Figure 95

3. Hold the key fob in front of the lamp while it is blinking.

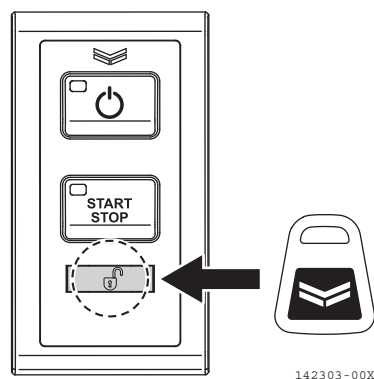


Figure 96

4. The Power switch lamp will come on.

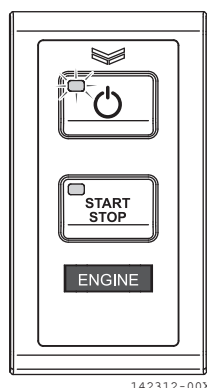


Figure 97

- In the case of two or more engines, once the key is authenticated in one place, the power can be turned on by simply pressing the power switch for the others.

If the Engine Fails to Start

Before pressing the Start switch again, confirm that the engine has stopped completely. If the starter motor is operated before the engine has completely stopped, the starter motor pinion gear will be damaged.

NOTICE

Never hold for longer than 15 seconds or the starter motor will overheat.

Never attempt to restart the engine if the engine has not stopped completely. Pinion gear and starter motor damage will occur.

Note: Push and hold the start switch for a maximum of 15 seconds. If the engine does not start the first time, wait for about 15 seconds before trying again.

NOTICE

If the vessel is equipped with a water lift (water lock) muffler, excessive cranking could cause seawater to enter the cylinders and damage the engine. If the engine does not start after cranking for 15 seconds, close the thru-hull water intake valve to avoid filling the muffler with water. Crank for 10 seconds at a time until the engine starts. When the engine does start, stop the engine immediately and turn off the power switch. Be sure to re-open the seacock and restart the engine. Operate the engine normally.

Air Bleeding the Fuel System after Starting Failure

If the engine does not start after several attempts, there may be air in the fuel system. If air is in the fuel system, fuel cannot reach the fuel supply pump. Bleed the air out of the system. See *Bleeding the Fuel System on page 68*.

Starting at Low Temperatures

Comply with local environmental requirements. Do not use starting aids.

NOTICE

Never use an engine starting aid such as ether. Engine damage will result.

To limit white smoke, run the engine at low speed and under moderate load until the engine reaches normal operating temperature. A light load on a cold engine provides better combustion and faster engine warm-up than no load.

Avoid running the engine at idling speed any longer than necessary.

After the Engine has Started

After the engine has started, check the following items at a low engine speed:


1. Check that the gauges, indicators and alarm are normal.
 - Normal coolant operating temperature is lower than 80 °C (176 °F).
 - Normal oil pressure at fuel stop power is 0.45 to 0.55 MPa (65 to 80 psi).
2. Check for water, fuel or oil leakage from the engine.
3. Check that the smoke color, engine vibration and sound are normal.
4. When there are no problems, keep the engine at low speed with the boat still stopped to distribute engine oil to all parts of the engine.
5. Check that sufficient seawater is discharged from the seawater outlet. Operation with inadequate seawater discharge will damage the impeller of the seawater pump. If seawater discharge is too low, stop the engine immediately. Identify the cause and repair.

NOTICE

The engine will seize if it is operated when seawater discharge is too small or if load is applied without any warming up operation.


CONTROL HEAD OPERATION

Control Head for Marine Gear

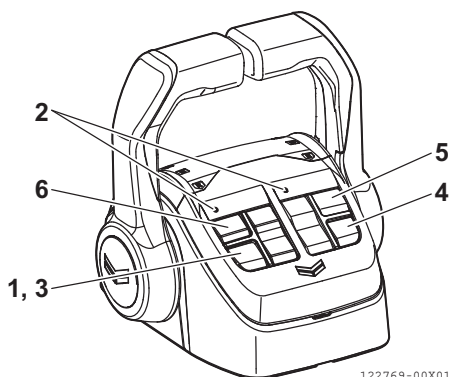

122769-00X01

Figure 98

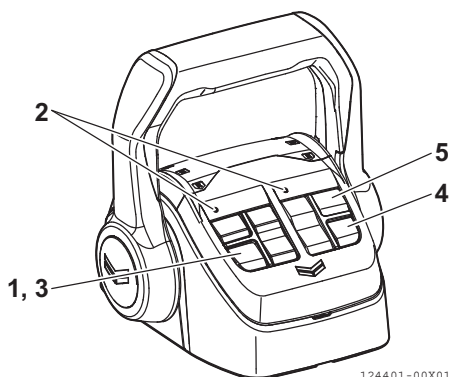

124401-00X01

Figure 99

1. Select/change station
A lit "SEL" lamp indicates that the station is active.
 - On single station boats, station selection is automatic.
 - For multi-stations, choose a station and then press "SEL" switch with handles in neutral.
2. Neutral position
A lit NEUTRAL lamp indicates that the handle station is neutral.
3. Indicator dimming
Press "SEL" switch and the lamps will dim.
4. Shift disconnect (SD)
Flashing NEUTRAL lamp indicate SD engaged for this engine allowing throttle control without gear engagement.
 - Check the handle is neutral, and press "NTRL" switch.
5. Trolling
Check the handle is neutral, and press "TROL" switch, and "TROL" lamp indicates trolling is active.
6. Synchronizing
Press "SYNC" switch and "SYNC" lamp indicates sync. is active.

Control Head for Stern Drive

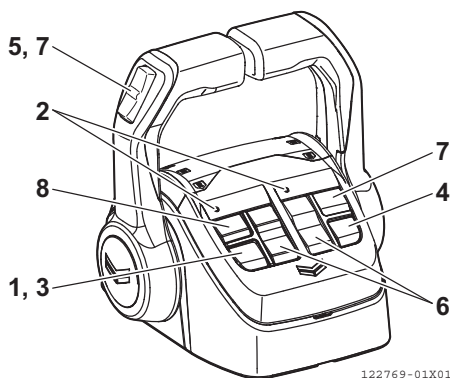


Figure 100

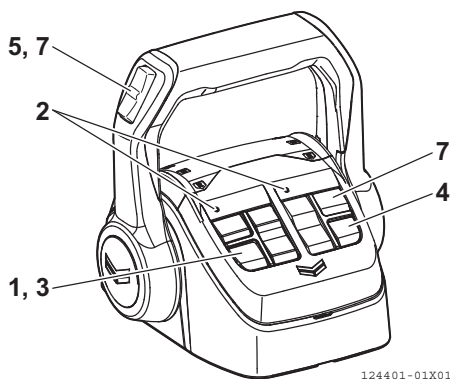


Figure 101

1. **Select/change station**
A lit “SEL” lamp indicates a station is active.
 - On single station boat, station selection is automatic.
 - For multi-stations, choose a station and then press “SEL” switch with handles in neutral.
2. **Neutral position**
A lit NEUTRAL lamp indicates a handle station is neutral.
3. **Indicator dimming**
Press “SEL” switch and the lamps will dim.
4. **Shift disconnect (SD)**
A flashing NEUTRAL lamp indicates that the SD is engaged on this engine. This allows throttle control without gear engagement.
 - Check that the handle is in the NEUTRAL position, and press “NTRL” switch.
5. **Trimming adjustment**
Push the trim switch arrows both or single stern drive will be adjustment on cruising boat.
6. **Trimming adjustment (Dual control head only)**
Press the trim adjustment switches arrows and each side stern drive will be fine trimming adjustment.
7. **Tilt (Trailer mode)**
Press “TLR” switch with handle trim switch and both side stern drives will be tilted together.
8. **Synchronizing**
Press “SYNC” switch and “SYNC” lamp indicates sync. is active.

Station Selection (Only for Multiple Stations)

Engine not running (Control head in Neutral)

When first turning the panel switch to the “POWER ON” position, the “SEL” lamp will flash and the NEUTRAL lamp will light up. This is an indication that no specific helm station has been selected for boat operation.

By simply pressing the “SEL” switch at the station desired for operation, the flashing lamp will turn on continuously.

This indicates control of the boat is now at this station location. If you choose to change helm locations while cruising, switch the station as described below.

Engine running (Control head in Neutral)

To change stations when the engine is running but in Neutral position, do the following:

1. Press the control head “SEL” switch of the desired station (make sure control head is in Neutral position).
2. The “SEL” lamp will come on at the same time as the stations switch, enabling control of the selected station.

ENGINE OPERATION

Engine running (Control head not in Neutral)

To change stations when the engine is running and not in Neutral position (so the boat is moving), do the following:

1. Press the control head “SEL” switch of the desired station.
2. The “SEL” lamp will flash and switch to standby mode for 5 seconds.
3. Stations will switch when the handle position (throttle and shift) of the desired station is the same as the handle position of the station current active station.
4. The “SEL” lamp will come on at the same time as the stations switch, enabling control of the selected station.

Note:

1. *All lamps for stations that have not been selected will turn off.*
2. *If the handle is not aligned with the station to be selected during the idling period for 5 seconds, the lamps will turn off and the station to be selected will remain unusable.*
3. *For dual control heads, both handles must be aligned.*
4. *SD mode and trolling mode for the newly selected station will be applied to the selected station. Synchro-mode will not be applied.*

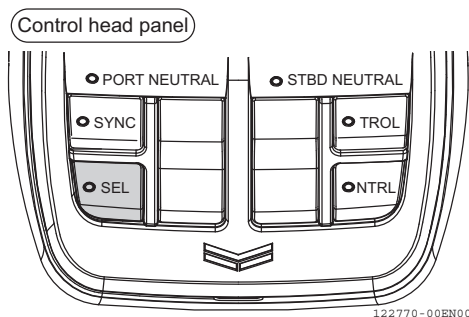


Figure 102

Indicator Dimming Feature

The light on the VC30 components can be varied in intensity to a more comfortable level if desired.

The dimming level is shared between all components of a station.

The lamps can be dimmed (light adjustment) using the following two methods.

1. Dimmer with the display dimmer settings.
2. Dimmer with the control head “SEL” switch.

Dimmer with the control head “SEL” switch

1. The lamp brightness will decrease one level each time the “SEL” switch of the selected station control head is pressed.
2. Pressing “SEL” switch with the brightness on its lowest level will return the brightness to its highest level.

Dimmer with the display dimmer settings

1. Go to the brightness setting in the display.
2. Select the desired brightness level.

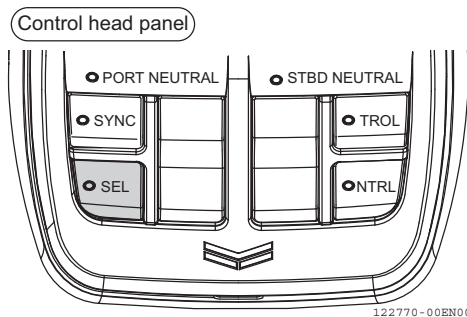


Figure 103

Synchronization

Note: Be sure to set the lead engine on the display before using SYNC.

One lever sync. (Power train sync.)

Automatically synchronizes engines and transmission. The engine handle controls throttle and shift of both engines across the entire control range.

1. Press "SYNC" switch.
2. Match the control head handle positions within 10% of each other. ("SYNC" lamp goes steady when handles match.)
3. To leave the sync. mode, return the handles to the Neutral position and press "SYNC" switch.

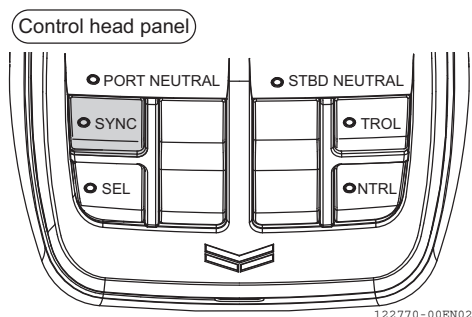


Figure 104

Tilt Elevation (Stern Drive Specification)

⚠ WARNING

To tilt the stern drive, be sure to check that there is nobody near the drive and no obstacles in the surroundings before the operation.

Normal operation

1. Pressing the control head handle trim switch will elevate the drives (both engines 1 and 2). The trim angle is limited.
2. With two engines, press the control head port side or starboard side trim adjustment switch to make fine adjustments to the elevation angle of the left and right drive motors, respectively.

When aligning with the Trailer position, when aligning from the Trailer position to the Drive position

1. Check that the control head handle is in the Neutral position and the engine is stopped.
2. To move from the Drive position to the Trailer position, press the trim switch while pressing the TLR switch at the same time.
3. To move from the Trailer position to the Drive position, press the trim switch only. Do not operate the TLR switch.

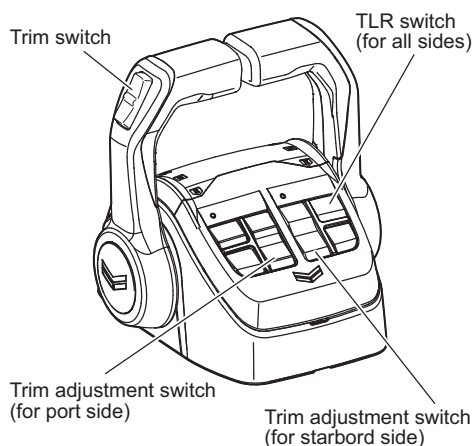


Figure 105

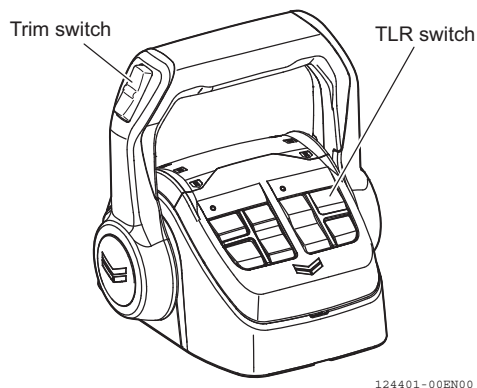


Figure 106

TROLLING OPTION (FOR KMH MARINE GEAR SPECIFICATION)

Trolling Overview and Function

On the marine gear equipped with trolling, trolling mode is engaged by a TROL (trolling switch) on the control head that is used to turn trolling ON and OFF.

The factory default configuration for trolling operation is the split trolling mode. This operation allows the operator to perform from minimum prop RPM (full slip) to maximum prop RPM (full lock up) and then a throttle ramp up with one handle motion. The defaults are: 60% of the handle movement from gear-idle to maximum prop RPM, with the remaining 40% handle movement used for throttle control to a maximum of 40% throttle. The width of the trolling range can be set with the display. (Trolling: Lever travel)

1. Move the control head handle to the N (Neutral) position.
2. Press the “TROL” switch.
3. The “TROL” lamp will come on.
4. In trolling range, the propeller speed is adjusted by slipping the clutch while the engine is idling. In throttle range, the engine speed is adjusted with the clutch in the engaged (connected) condition.
5. Moving the control head handle to the N (Neutral) position and pressing the “TROL” switch will release trolling mode.

Note: Switching stations will apply the trolling mode.

Warm up the marine gear sufficiently before starting the trolling operation.

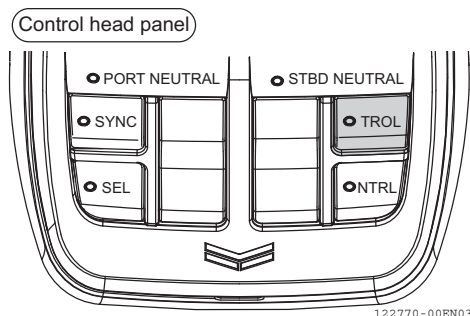


Figure 107

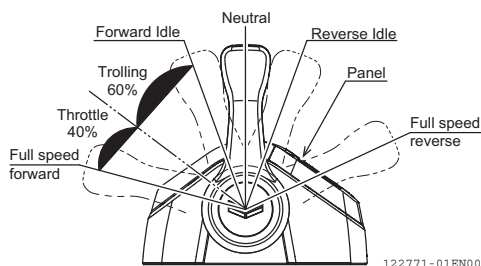


Figure 108

1. Select the “Lever travel” (trolling, lever travel) on the display and set it to 100%. (Default value: 60%)
2. Select “Trolling calibration” (trolling, trolling calibration) then set “Full slip point” to 40 (%) and “Lock up point” 100 (%).
3. Set the control head handle at Forward Idle position.
4. Check the propeller shaft rotation, if the propeller shaft is rotating reduce the “Full slip point” value until the propeller shaft stops.
5. Increase the “Full slip point” value until the propeller shaft starts rotating smoothly. That will be the adjustment point for “Full slip point”.
6. Set the control head handle at Max. position.
7. Reduce “Lock up point” value, and set the value to the boundary between trolling and non-trolling.
The rough target of “Lock up point” is the value of “Full slip point” +10 - 20%.

Note: Lock up point must be bigger than full slip point.

Trolling Adjustment for C-Type Trolling

No need for any adjustment/calibration.

Trolling Adjustment for E-Type Trolling

Please set “Full slip point” and “Lock up point” under “Trolling” as follows.

To perform this adjustment, you need to enter the Service ID and switch to the Service mode display. Contact your YANMAR dealer or distributor with reference to Operating in Service Mode on the Vessel Control System Installation Manual for details.

Note:

- Warm up the marine gear sufficiently before calibration.
- The propeller shaft can be rotated during this adjustment, fix the boat with a rope or move the boat to a safe area.

WARM UP MODE (SHIFT DISCONNECT)

1. Move the remote control handle to the N (Neutral) position. (The NEUTRAL lamp will come on)
2. Press the “NTRL” switch of the selected station control head.
3. The NEUTRAL lamp will come on, and the NEUTRAL lamp will flash.
4. Move the remote control handle. The engine speed can be controlled while the gear shift is in neutral.
5. Move the remote control handle to the N (Neutral) position, press the “NTRL” switch and cancel warm up mode.

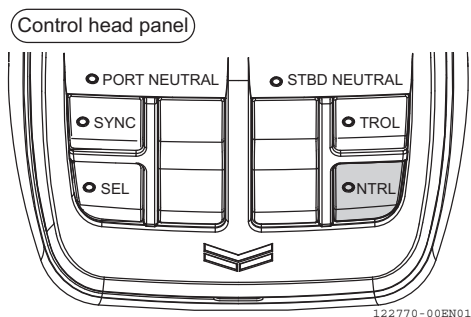


Figure 109

THROTTLE AND SHIFT CONTROL

⚠ WARNING

Sudden Movement Hazard!

The boat will start to move when the marine gear is engaged:

- Ensure the boat is clear of all obstacles forward and aft.
- Quickly shift to the FORWARD position then back to the NEUTRAL position.
- Observe whether the boat moves in the direction you expect.

Neutral

1. Move the remote control handle to the N (Neutral) position. (The NEUTRAL lamp will come on)
2. When switching between forward and reverse, move the handle slowly between the forward and reverse positions. Move the handle firmly into either the forward or reverse position.

Forward

Move the handle toward F (forward) to the forward-side notch position. The engine will remain idling. Moving the handle forward further will increase the engine speed.

Reverse

Move the handle toward R (reverse) to the reverse-side notch position. The engine will remain idling. Pulling the handle back further will increase the engine speed.

Forward (Reverse) to Reverse (Forward)

Moving the handle quickly and switching from forward (reverse) to reverse (forward) will activate the gear shift delay (astern delay). The engine speed to decrease to idle speed for several seconds.

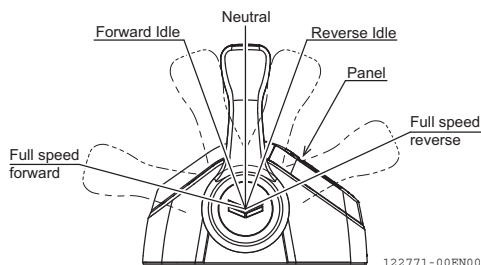


Figure 110

ENGINE SPEED LIMIT MODE

1. Move the remote control handle to the Forward Idle position. (Both sides in the case of twin engine.)
2. Press the “NTRL” switch of the selected station. (The lamp above “NTRL” switch will flash.)
3. Even if you tilt the handle to accelerate, the engine speed increases only up to the setting value.
4. Move the remote control handle to the N (Neutral), Forward Idle, or Reverse Idle position (both sides in the case of twin engine) and press the “NTRL” switch to release the [Engine Speed Limit Mode].

Note: The setting value can be set by the VC30 display. The default value is 50%.

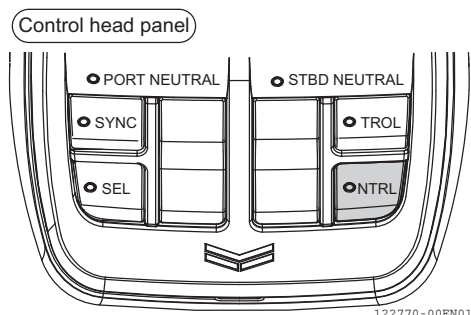


Figure 111

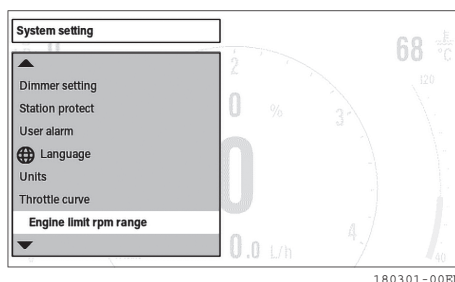


Figure 112

CAUTIONS DURING OPERATION

NOTICE

Engine trouble can arise if the engine is operated for a long time under overloaded conditions with the control handle in the full throttle position (maximum engine speed position), exceeding the continuous rated output engine speed. Operate the engine at about 100 min⁻¹ lower than the full throttle engine speed.

Note: If the engine is in the first 50 hours of operation, see New Engine Break-In on page 10.

Always be on the lookout for problems during engine operation.

Pay particular attention to the following:

- Is sufficient seawater being discharged from the exhaust and seawater outlet pipe?

If the discharge is small, stop the engine immediately; identify the cause and repair.

- Is the smoke color normal?

The continuous emission of black exhaust smoke indicates engine overloading. This shortens the engines life and should be avoided.

- Are there abnormal vibrations or noise?

NOTICE

Excessive vibration may cause damage to the engine, marine gear, hull and onboard equipment. In addition, it causes able passenger and crew discomfort.

Depending on the hull structure, engine and hull resonance may suddenly become great at a certain engine speed range, causing heavy vibrations. Avoid operation in this speed range. If you hear any abnormal sounds, stop the engine and inspect.

- Alarm buzzer sounds during operation.

NOTICE

If any alarm indicator with audible alarm sound appears on the display during engine operation, stop the engine immediately. Determine the cause and repair the problem before you continue to operate the engine.

- Is there water, oil or fuel leakage, or are there any loose bolts?

Check the engine room periodically for any problems.

- Is there sufficient diesel fuel in the diesel fuel tank?

Replenish diesel fuel before leaving the dock to avoid running out of fuel during operation.

- When operating the engine at low speed for long periods of time, race the engine once every 2 hours.

NOTICE

Racing the engine: With the gear in NEUTRAL, accelerate from the low-speed position to the high-speed position and repeat this process about five times. This is done to clean out carbon from the cylinders and the fuel injection valve. Neglecting to race the engine will result in poor smoke color and reduce engine performance.

- If possible, periodically operate the engine at near maximum engine speed while underway. This will generate higher exhaust temperatures, which will help clean out hard carbon deposits, maintaining engine performance and prolonging the life of the engine.

NOTICE

Never turn off the battery switch (if equipped) or short the battery cables during operation. Damage to the electric system will result.

SHUT-DOWN THE ENGINE (STOPPING)

Stop the engine in accordance with the following procedures:

Normal Stopping

1. Move the remote control handle to the N (Neutral) position. (The NEUTRAL lamp will come on.)
2. Cool the engine down at low speed (below 1000 min⁻¹ (rpm)) for about 5 minutes.

NOTICE

For maximum engine life, YANMAR recommends that when shutting the engine down, you allow the engine to idle, without load, for 5 minutes. This will allow the engine components that operate at high temperatures, such as the turbo-charger and exhaust system, to cool slightly before the engine itself is shut down.

3. Press the Engine START/STOP switch on the switch panel of the selected station.
4. Press the Power switch and turn the power OFF.

CAUTION

Do not press the Engine START/STOP switch when the engine is stopped. The engine will restart.

ENGINE OPERATION

- Wait 6 seconds or more before turning the battery switch off for secure system settle down.

NOTICE

- Do not turn the battery switch off before turning the power switch off or immediately after turning off the power switch.
- Turning the battery switch off before secure system settle down may cause alarm to be set at the next activation by turning on the power switch. In an emergency situation, you can start the engine even if the alarm is set. In order to release above alarm, turn off the power switch and wait 6 seconds before turning the power switch on again.

- Turn the battery switch off for engine and engine control system.
- Close the fuel tank cock.
- Close the seacock.

CAUTION

- Be sure to close the seacock.** Neglecting to close the seacock could allow water to leak into the boat and may cause it to sink.
- If seawater is left inside the engine,** it may freeze and damage parts of the cooling system when the ambient temperature is below 0 °C (32 °F).

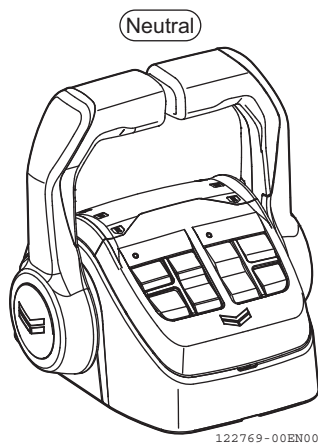


Figure 113

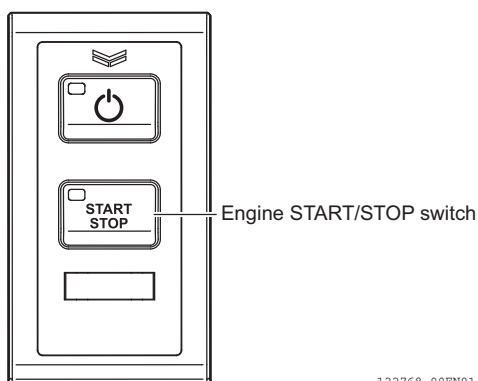


Figure 114

Emergency Stop

Electric Emergency Stop

NOTICE

Never use the Emergency Stop switch for a normal engine shutdown. Use this switch only when stopping the engine suddenly in an emergency.

1. Pressing the Emergency Stop switch will stop the engine immediately.
2. The Emergency Stop screen will be shown on the display, and the buzzer will sound.
3. After the engine has stopped, press the Emergency Stop switch to release the emergency stop. After releasing, it may take sometime to restart.

Note:

1. *The Emergency Stop switch should only be used in emergencies. Use the Engine START/STOP switch to stop the engine normally.*
2. *The engine cannot be started while the Emergency Stop switch is pressed (emergency stop mode not canceled).*

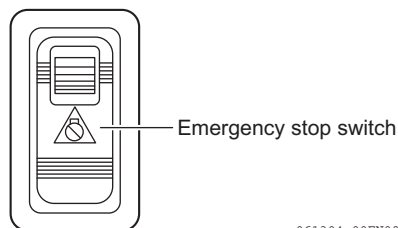


Figure 115

NOTICE

- In case of emergency, turning off the battery switch for the engine control unit can also stop the engine immediately.
- You can restart the engine but an alarm may be set up when the power switch is turned on. Unless you are in an emergency situation, in order to release above alarm, turn off the power switch and wait 6 seconds before turning the power switch on again.

CONTROL THE BACKUP
PANEL (NEW TYPE)

 **WARNING**

Only use this in an emergency.

1. Remove the cover of the backup panel.
2. Check that the power switch on the switch panel is OFF and that the control head handle and backup panel's shift switch are in the neutral position.
3. Press the power switch to the "ON" position on the backup panel. The lamp will come and control by the backup panel is enabled.
4. The engine can be started or stopped with the START/STOP switch.
5. Shift gears using the shift switch.
(FWD: forward, intermediate position of switch: neutral, REV: reverse)
6. Adjust the engine speed using the sub throttle control volume. (anti-clockwise: lower engine speed, clockwise: raise engine speed)

When controlling the throttle, first move it fully anti-clockwise.

NOTICE

- The throttle of the engine that has been turned on can be controlled.
- When controlling the throttle, always move it fully anti-clockwise first.
- Be sure to lower the engine speed by turning the sub throttle volume fully to anti-clockwise before stopping the engine.

State where cover is removed

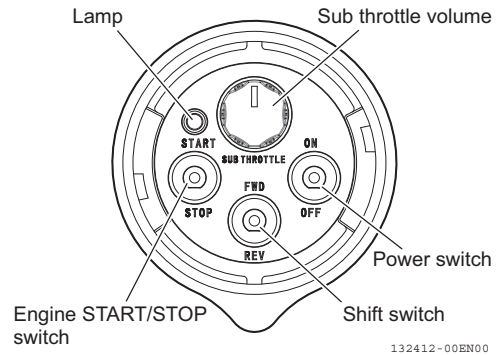


Figure 116

State where cover is attached

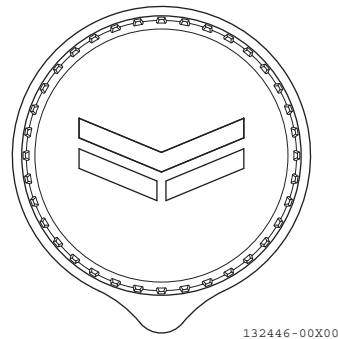


Figure 117

CHECKING THE ENGINE AFTER OPERATION

- Check that the power switch is off and that the battery switch (if equipped) is turned to off.
- Fill the fuel tank. *See Filling the Fuel Tank on page 67.*
- Close seawater cock(s).
- If there is a risk of freezing, check that the cooling system contains enough coolant. *See Engine Coolant Specifications on page 74.*
- If there is a risk of freezing, drain the seawater system. *See DRAIN SEAWATER COOLING SYSTEM on page 200.*
- At temperatures below 0 °C (32 °F), drain seawater system and connect the engine heater (if equipped).

This Page Intentionally Left Blank

PERIODIC MAINTENANCE

INTRODUCTION

This section of the *Operation Manual* describes the procedures for proper care and maintenance of the engine.

SAFETY PRECAUTIONS

Before performing any maintenance procedures within this section, read the following safety information and review the *SAFETY* section on page 3.

WARNING

Crush Hazard!



If the engine needs to be transported for repair, have a helper assist you attach it to a hoist and load it on a truck.

The engine lifting eyes are engineered to lift the weight of the marine engine only. Always use the engine lifting eyes when lifting the engine.

Additional equipment is necessary to lift the marine engine and marine gear together. Always use lifting equipment with sufficient capacity to lift the marine engine.

WARNING

Welding Hazard!

- Always turn off the battery switch (if equipped) or disconnect the negative battery cable and the leads to the alternator when welding on the equipment.
- Remove the engine control unit multi-pin connector. Connect the weld clamp to the component to be welded and as close as possible to the welding point.
- Never connect the weld clamp to the engine or in a manner which would allow current to pass through a mounting bracket.
- When welding is completed, reconnect the alternator and engine control unit prior to reconnecting the batteries.

Entanglement Hazard!



Never leave the power switch on when you are servicing the engine. Someone may accidentally start the engine and not realize you are servicing it.

Shock Hazard!



Always turn off the battery switch (if equipped) or disconnect the negative battery cable before servicing the equipment.

Always keep the electrical connectors and terminals clean. Check the electrical harnesses for cracks, abrasions, and damaged or corroded connectors.

WARNING

Never use undersized wiring for the electrical system.

Tool Hazard!

Always remove any tools or shop rags used during maintenance from the area before operation.

NOTICE

Any part which is found defective as a result of inspection, or any part whose measured value does not satisfy the standard or limit, must be replaced.

Modifications may impair the engine's safety and performance characteristics and shorten the engine's life. Any alterations to this engine may void its warranty. Be sure to use YANMAR genuine replacement parts.

PRECAUTIONS

The Importance of Periodic Maintenance

Engine deterioration and wear occur in proportion to the length of time the engine has been in service and the conditions the engine is subjected to during operation. Periodic maintenance prevents unexpected downtime, reduces the number of accidents due to poor machine performance and helps extend the life of the engine.

Performing Periodic Maintenance

WARNING

Exhaust Hazard!

Never block windows, vents, or other means of ventilation if the engine is operating in an enclosed area. All internal combustion engines create carbon monoxide gas during operation. Accumulation of this gas within an enclosure could cause illness or even death. Make sure that all connections are tightened to specifications after repair is made to the exhaust system. Failure to comply could result in death or serious injury.

The Importance of Daily Checks

The Periodic Maintenance Schedule assumes that the daily checks are performed on a regular basis. Make it a habit to perform daily checks before the start of each operating day. *See Daily Checks on page 163.*

Keep a Log of Engine Hours and Daily Checks

Keep a log of the number of hours the engine is run each day and a log of the daily checks performed. Also note the date, type of repair (e.g., replaced alternator) and parts used for any service needed between the periodic maintenance intervals. Periodic maintenance intervals are every 50, 250, 500 and 750 engine hours. Failure to perform periodic maintenance will shorten the life of the engine.

NOTICE

Failure to perform periodic maintenance will shorten the life of the engine and may void the warranty.

YANMAR Replacement Parts

YANMAR recommends that you use genuine YANMAR parts when replacement parts are needed. Genuine replacement parts help ensure long engine life.

Tools Required

Before you start any periodic maintenance procedure, make sure you have the tools you need to perform all of the required tasks.

Consult Your Authorized YANMAR Marine Dealer or Distributor for Help

Our professional service technicians have the expertise and skills to help you with any maintenance or service related procedures you need help with.

PERIODIC MAINTENANCE

Tightening Fasteners

Use the correct amount of torque when you tighten fasteners on the engine.
Applying excessive torque may damage the fastener or component and not enough torque may cause a leak or component failure.

NOTICE



The tightening torque in the Standard Torque Chart should be applied only to the bolts with a “8.8” head (JIS strength classification: 8.8). Apply 60% torque to bolts that are not listed. Apply 80% torque when tightened to aluminum alloy.

Bolt Diameter × Pitch (mm)		M6 × 1.0	M8 × 1.25	M10 × 1.5	M12 × 1.75	M14 × 1.5	M16 × 1.5
Tightening Torque	N·m	10.8 ± 1.0	25.5 ± 3.0	49 ± 5.0	88.2 ± 10.0	140.0 ± 10.0	230.0 ± 10.0
	ft-lb	8.0 ± 0.7	18.8 ± 2.2	36.2 ± 3.7	65.1 ± 7.4	103 ± 7.2	170 ± 7.2

Taper Plugs		1/8	1/4	3/8	1/2
Tightening Torque	N·m	9.8	19.6	29.4	58.8
	ft-lb	7.4	14.5	21.7	43.2

When lock adhesive is applied, decide separately.

Pipe Joint Bolts		M8	M10	M12	M14	M16
Tightening Torque	N·m	14.7 ± 2	22.5 ± 3	29.4 ± 5	44.1 ± 5	53.9 ± 5
	ft-lb	10.9 ± 1.5	16.6 ± 2.2	21.7 ± 3.7	32.6 ± 3.7	69.8 ± 3.7

When seal washer applied, torque is 34 ± 5 N·m (25.1 ± 3.7 ft-lb).

EPA MAINTENANCE REQUIREMENTS

To maintain optimum engine performance and compliance with the Environmental Protection Agency (EPA) Regulations for Engines, it is essential that you follow the *PERIODIC MAINTENANCE SCHEDULE* on page 161 and the *PERIODIC MAINTENANCE PROCEDURES* on page 163.

EPA Requirements for USA and Other Applicable Countries

The EPA emission regulation is applicable only in the USA and other countries that have adopted the EPA requirements in part or in whole. Determine and follow the emission regulations in the country where your engine will be operating to assist you in specified compliance.

Environmental Condition for operation and maintenance

The following environmental operating conditions and maintenance should be observed, in order to keep engine performance.

- Ambient temperature: -15 °C to +40 °C (5 °F to +104 °F)
- Relative humidity: 80% or lower

The diesel fuel should be:

- ASTM D975 No. 1-D S15, No. 2-D S15, or equivalent (minimum of cetane No. 45)

The lubricating oil should be:

- API Service Categories CD, CF, CF-4, CI and CI-4.

Be sure to perform inspections as outlined in *PERIODIC MAINTENANCE PROCEDURES* on page 163 and keep a record of the results.

Pay particular attention to these important points:

- Replacing the engine oil
- Replacing the engine oil filter
- Replacing the fuel filter
- Cleaning the intake silencer (air cleaner)

Note: Inspections are divided into two sections in accordance with who is responsible for performing the inspection: the user or the maker.

Inspection and Maintenance

Inspection and maintenance procedures are covered in *PERIODIC MAINTENANCE SCHEDULE* on page 161.

This maintenance must be performed to keep the emission values of your engine in the standard values during the warranty period. The warranty period is determined by the age of the engine or the number of hours of operation.

Installation of Exhaust Sampling Port

All engines subject to emission standards shall be equipped with a connection in the engine exhaust system that is located downstream of the engine, and before any point at which the exhaust contacts water (or any other cooling / scrubbing medium), for the temporary attachment of gaseous and/or particulate emissions sampling equipment. This connection shall be internally threaded with standard pipe threads of a size not larger than 12.7 mm (0.5 in.), and shall be closed by a pipe plug when not in use. Equivalent connections are allowed.

The instructions for the proper installation and location of the required sample port, in addition to those specified above in the quoted federal regulation, are as follows:

1. The connection should be located as far downstream as reasonably practicable from any sharp bend (of 30 degrees or more) in the exhaust pipe to help ensure that a well-mixed exhaust flow sample may be taken;
2. The requirement that the connection be located before any point at which the exhaust contacts water (or any other cooling / scrubbing medium) does not include contact with water used to cool exhaust manifolds, unless the water is allowed to come into direct contact with the exhaust gases;
3. To allow ready access to the sample port, the connection should be located, if possible given the constraints of vessel design, approximately 0.6 to 1.8 m (2 to 6 ft) above a deck or walkway;
4. To facilitate insertion and withdrawal of an exhaust sample probe, there should be no obstructions for at least one and one-half exhaust pipe / stack diameters perpendicular, i.e., 90 degrees, from the sample port; and
5. If a threaded connection is used, both the internal and external threads should be coated with a high-temperature, anti-seize compound before the initial installation and at every subsequent re-installation to facilitate removal of the connection for testing.

PERIODIC MAINTENANCE SCHEDULE

Daily and periodic maintenance is important to keep the engine in good operating condition. The following is a summary of maintenance items by periodic maintenance intervals. Periodic maintenance intervals vary depending on engine application, loads, diesel fuel and engine oil used and are hard to establish definitively. The following should be treated only as a general guideline.

NOTICE

Establish a periodic maintenance plan according to the engine application and make sure to perform the required periodic maintenance at the intervals indicated. Failure to follow these guidelines will impair the engine's safety and performance characteristics, shorten the engine's life and may affect the warranty coverage on your engine.

Consult authorized YANMAR Marine dealer or distributor for assistance when checking items marked with a ●.

○: Check or Clean ◇: Replace ●: Consult your authorized YANMAR Marine dealer or distributor

System	Item	Periodic Maintenance Interval				
		Daily See Daily Checks on page 163.	Every 50 hours or monthly whichever comes first	Every 250 hours or 1 year whichever comes first	500 hours or 2 years whichever comes first	750 hours or 4 years whichever comes first
Whole	Visual inspection of engine exterior	○				
Fuel System	Check the fuel level and refill if necessary	○				
	Drain water and sediment from fuel tank		○ Initial 50	○		
	Drain the fuel/water separator		○			
	Replace the fuel filter element			◇		
Lubricating System (Engine)	Check the lube oil level	○				
	Replace the lube oil		◇ Initial 50	◇		
	Replace the oil filter element		◇ Initial 50	◇		
Lubricating System (Marine Gear)	Check the lube oil level	○				
	Replace the lube oil		◇ Initial 50	◇		
	Cleaning the Marine Gear Oil Strainer		◇ Initial 50	◇		
Stern Drive system	Check the Stern drive oil	○	Refer to the Stern drive system operation manual			
	Check power steering oil	○				
	Check power trim oil	○				

PERIODIC MAINTENANCE

○: Check or Clean ◇: Replace ●: Consult your authorized YANMAR Marine dealer or distributor

System	Item	Periodic Maintenance Interval				
		Daily See Daily Checks on page 163.	Every 50 hours or monthly whichever comes first	Every 250 hours or 1 year whichever comes first	500 hours or 2 years whichever comes first	750 hours or 4 years whichever comes first
Cooling System	Seawater outlet	○ During Operation				
	Check coolant level	○				
	Check or replace the seawater pump impeller			○		◇
	Replace coolant	Every year. When Long Life Coolant is used, replace every 2 years. See Engine Coolant Specifications on page 74.				
	Clean and check the seawater passages					●
	Clean and check the freshwater passages					●
	Replace zinc anode			◇		
Air Intake and Exhaust System	Clean intake silencer (air cleaner) element			○		
	Clean or replace the exhaust/water mixing elbow			○	◇	
	Wash the turbocharger blower			●		
	Replace the lagging of turbo-charger (4LV150, 4LV170, 4LV195 only)					●
Electrical System	Check the alarm and indicators	○				
	Check the electrolyte level in the battery		○			
	Check the belt damage			○		
	Check the wiring connectors			○		
Engine Cylinder Head and Block	Check for leakage of fuel, engine oil and engine coolant	○ After starting				
Miscellaneous Items	Check the remote control cable operation		○ Initial 50			●
	Adjust the propeller shaft alignment		● Initial 50			●
	Replace rubberized hoses (fuel and water)	Replace every 2 years.				
	Replacing the Chain tensioner slippers, Chain vibration dampers and chain guide	● At 8 years or 2000 hours whichever comes first				
	Replace the front crank pulley (Rubber damper)	● At 8 years or 2000 hours whichever comes first				

Note: These procedures are considered normal maintenance and are performed at the owner's expense.

PERIODIC MAINTENANCE PROCEDURES

WARNING

Exposure Hazard!

Always wear personal protective equipment when performing periodic maintenance procedures.

Daily Checks

Before you head out for the day, make sure the YANMAR engine is in good operating condition.

NOTICE

It is important to perform the daily checks as listed in this Operation Manual. Periodic maintenance prevents unexpected downtime, reduces the number of accidents due to poor engine performance and helps extend the life of the engine.

Make sure you check the following items.

Visual Checks

WARNING

Piercing Hazard!

Avoid skin contact with the high-pressure diesel fuel spray caused by a fuel system leak, such as a broken fuel injection line. High-pressure fuel can penetrate your skin and result in serious injury. If you are exposed to high-pressure fuel spray, obtain prompt medical treatment. Never check for a fuel leak with your hands.

Always use a piece of wood or cardboard. Have your authorized YANMAR Marine dealer or distributor repair any damage.

1. Check for engine oil leaks.
2. Check for fuel leaks.
3. Check for engine coolant leaks.
4. Check for damaged or missing parts.
5. Check for loose, missing or damaged fasteners.
6. Check the electrical harnesses for cracks, abrasions, and damaged or corroded connectors.
7. Check hoses for cracks, abrasions, and damaged, loose or corroded clamps.
8. Check the fuel filter/water separator for presence of water and contaminants. If you find any water or contaminants, drain the fuel filter/water separator. *See Draining Fuel Filter/Water Separator on page 169.* If you have to drain the fuel filter/water separator frequently, drain the fuel tank and check for the presence of water in your fuel supply. *See Draining the Fuel Tank on page 164.*

NOTICE

If any problem is noted during the visual check, the necessary corrective action should be taken before operating the engine.

Check Diesel Fuel, Engine Oil and Engine Coolant Levels

Follow the procedures in *DIESEL FUEL* on page 64, *ENGINE OIL* on page 69 and *ENGINE COOLANT* on page 74 to check these levels.

Checking and Refilling Marine Gear Oil

Refer to the *Operation Manual* for the marine gear.

PERIODIC MAINTENANCE

Checking the Battery Electrolyte Level

Check the battery electrolyte level before use. See *Checking the Battery Electrolyte Level (Serviceable Batteries Only)* on page 170.

Checking the Alternator Belt

Check the belt tension before use. See *Check the belt damage* on page 179.

Checking the Remote Control Handle

Check the operation of the remote control handle and ensure it moves smoothly. If it is hard to operate, grease the joints of the remote control cable and lever bearings. If the lever is too loose, adjust the remote control cable. See *Checking and Adjusting Remote Control Cables* on page 167.

Checking the Alarm Indicators

When operating the start switch on the instrument panel, check that there is no alarm message on the display and the alarm indicators work normally. See *CONTROL EQUIPMENT* on page 16.

Preparing Fuel, Oil and Coolant in Reserve

Prepare sufficient fuel for the days operation. Always store engine oil and coolant in reserve (for at least one refill) onboard, to be ready for emergencies.

After Initial 50 Hours of Operation

Perform the following maintenance after the initial 50 hours of operation.

- **Draining the Fuel Tank**
- **Changing the Engine Oil and Replacing the Engine Oil Filter Element**
- **Changing the Marine Gear Oil and Cleaning the Marine Gear Oil Strainer**
- **Checking and Adjusting the Remote Control Cables**
- **Adjusting Propeller Shaft Alignment**

Draining the Fuel Tank

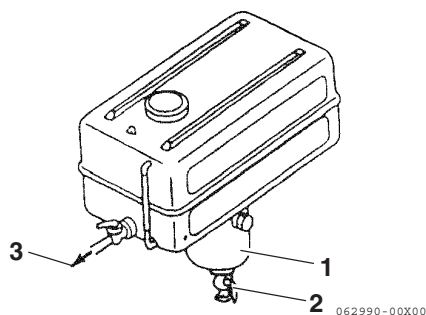


Figure 1

*Note: Optional fuel tank shown.
Actual equipment may differ.*

1. Put a pan under the drain cock (**Figure 1, (2)**) to catch fuel.
2. Open the drain cock and drain water and sediment. Close the drain cock when the fuel is clean and free of air bubbles.

Changing the Engine Oil and Replacing the Engine Oil Filter Element

The engine oil on a new engine becomes contaminated from the initial break-in of internal parts. It is very important that the initial oil replacement is performed as scheduled.

It is easiest and most available to drain the engine oil after operation while the engine is still warm.

WARNING

Burn Hazard!

If you must drain the engine oil while it is still hot, stay clear of the hot engine oil to avoid being burned. Always wear eye protection.

1. Turn the engine off.
2. Remove the engine oil dipstick. Attach the oil drain pump (if equipped) and pump out the oil. For easier draining, remove the engine oil fill cap. Dispose of used oil properly.

NOTICE

- Prevent dirt and debris from contaminating engine oil. Carefully clean the dipstick and the surrounding area before removing the dipstick.
- Always be environmentally responsible.

3. Remove the engine oil filter (**Figure 2**) with a filter wrench (turn counterclockwise).

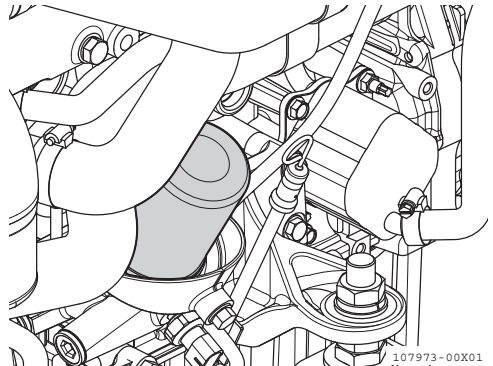


Figure 2

4. Install a new filter element and tighten by hand until the seal touches the housing.
5. Turn filter an additional 3/4 turn clockwise with a filter wrench.
6. Fill with new engine oil. *See Adding Engine Oil on page 71.*

NOTICE

Never mix different types of engine oil. This may adversely affect the lubricating properties of the engine oil. Never overfill. Overfilling may result in white exhaust smoke, engine overspeed or internal damage.

7. Perform a trial run and check for oil leaks.
8. Approximately 10 minutes after stopping the engine, remove the oil dipstick and check the oil level. Add oil if the level is too low.

NOTICE

Be careful not to get any oil on the V-ribbed belt. Oil on the belt causes slipping and stretching. Replace the belt if it is damaged.

PERIODIC MAINTENANCE

Changing the Marine Gear Oil and Cleaning the Marine Gear Oil Strainer

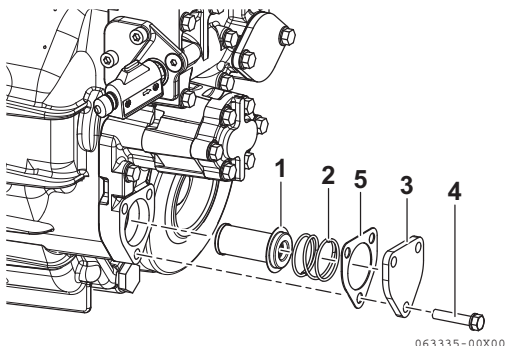


Figure 3

Note: 4LV engines with KMH50A marine gear shown.

Refer to the Operation Manual for the marine gear for procedure.

1. Remove cap from the filler port and attach an oil drain pump. Drain marine gear oil.

NOTICE

Always be environmentally responsible.

2. **KMH50A or KMH50V Marine Gear:**
Clean the marine gear oil strainer:
 - (a) Remove side cover (**Figure 3, (3)**) and remove the strainer (**Figure 3, (1)**).
 - (b) Clean the strainer thoroughly with kerosene or clean diesel fuel.
 - (c) Hold the strainer in place with the coil spring (**Figure 3, (2)**) and insert into the case. Install a new gasket (**Figure 3, (5)**) in the side cover.
 - (d) Install side cover and tighten side cover bolts.

3. Fill marine gear with clean marine gear oil. *See Marine Gear Oil Specifications on page 71.*
4. Perform a trial run and check for oil leaks.
5. Approximately 10 minutes after stopping the engine, remove the oil dipstick and check the oil level. Add oil if the level is too low.

Checking and Adjusting Remote Control Cables

Adjusting Engine Speed Remote Control Cable

Ensure the control lever on the engine side moves to the high-speed stop position and low-speed stop position when the remote control lever is moved to HIGH and then to LOW.

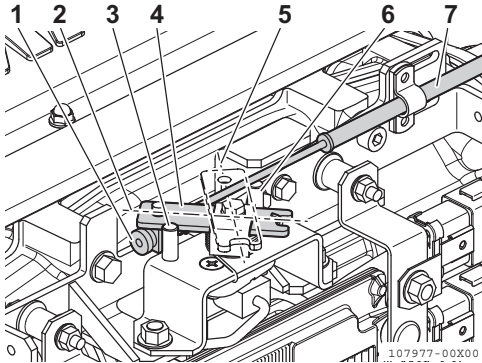


Figure 4

- 1 – Adjustment screw
- 2 – Low-speed stop position
- 3 – Low-speed stop pin
- 4 – Control lever
- 5 – High-speed stop position
- 6 – High-speed stop pin
- 7 – Cable

1. To adjust, loosen the adjustment screw (**Figure 4, (1)**) for the remote control cable and adjust.
2. Adjust the low-speed stop position (**Figure 4, (2)**) first and then adjust the high-speed stop position (**Figure 4, (5)**), with the adjustment screw on the remote control lever (**Figure 4, (4)**).

Adjusting Marine Gear Remote Control Cable

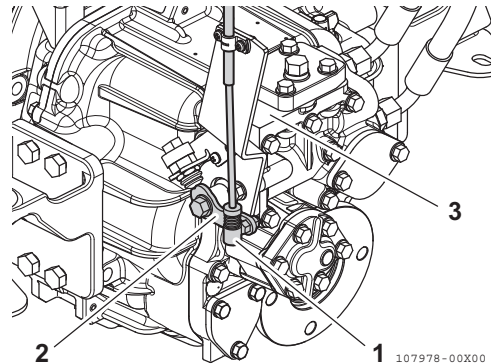


Figure 5

Note: KMH50A marine gear shown.

1. Ensure that the remote control lever (**Figure 5, (2)**) moves to the correct position when the remote control handle is in the NEUTRAL, FORWARD and REVERSE positions. Use the NEUTRAL position as the standard for adjustment.
2. To adjust, loosen and retighten the cable fitting (**Figure 5, (1)**).

PERIODIC MAINTENANCE

Adjusting Trolling Remote Control Handle - If Equipped

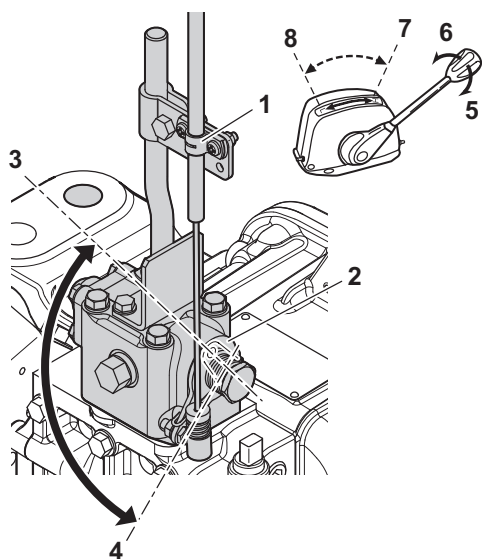


Figure 6

- 1 – Cable Fitting
- 2 – Trolling Lever
- 3 – Low Speed (trolling)
- 4 – High Speed
- 5 – Loosen
- 6 – Tighten
- 7 – Normal Operation (high speed)
- 8 – Trolling (low speed)

Note: KMH50A marine gear shown.

1. Ensure that the trolling lever (**Figure 6, (2)**) is in the high-speed (**Figure 6, (4)**) position when the trolling remote control handle is in high-speed position (**Figure 6, (7)**).
2. Ensure that the trolling lever is in the low-speed (**Figure 6, (3)**) position when the trolling remote control handle is in low-speed position (**Figure 6, (8)**).
3. To adjust, loosen the adjustment screw of the cable fitting (**Figure 6, (1)**) and adjust the position of the cable.

Adjusting Propeller Shaft Alignment

The flexible engine mounts are compressed slightly during initial engine operation and may cause misalignment between the engine and the propeller shaft.

After the first 50 hours of operation, the alignment should be checked and readjusted if necessary. This is considered normal maintenance and the adjustment requires specialized knowledge and techniques. Consult your authorized YANMAR Marine dealer or distributor.

Check for any unusual noise and vibration in the engine/boat hull, while increasing and decreasing the engine speed gradually.

If there is unusual noise and/or vibration, this maintenance requires specialized knowledge and techniques.

Consult authorized YANMAR Marine dealer or distributor to adjust the propeller shaft alignment.

Every 50 Hours of Operation

Perform the following procedures every 50 hours thereafter or monthly, whichever comes first.

- **Draining Fuel Filter/Water Separator**
- **Checking Battery Electrolyte Level (Serviceable Batteries Only)**

Draining Fuel Filter/Water Separator

WARNING

Fire and Explosion Hazard!

When removing any fuel system component to perform maintenance (such as changing the fuel filter), put an approved container under the opening to catch the fuel.

Never use a shop rag to catch the fuel. Vapors from the rag are flammable and explosive. Wipe up any spills immediately.

Exposure Hazard!

Wear eye protection. The fuel system is under pressure and fuel could spray out when removing any fuel system component.

Water separator (Attached to hull, if equipped)

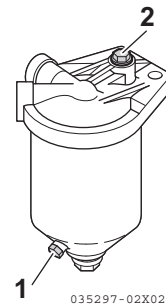


Figure 7

1. Close the fuel tank cock.
2. Loosen the drain plug (**Figure 7, (1)**) of the water separator and drain off any water or dirt collected inside. Dispose of the collected water and dirt properly.

NOTICE

Always be environmentally responsible.

3. After draining, tighten the air bleed screw (**Figure 7, (2)**).
4. Be sure to bleed air from the fuel system. See *Bleeding the Fuel System* on page 68.

PERIODIC MAINTENANCE

YANMAR genuine fuel pre-filter
(Attached to hull, if equipped)

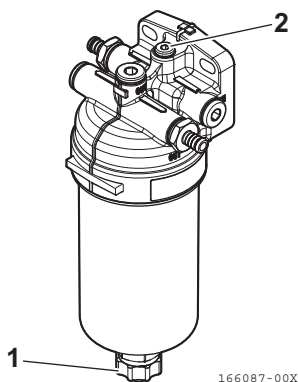


Figure 8

1. Close the fuel tank cock.
2. Loosen the drain plug (**Figure 8, (1)**) and the air bleed screw (**Figure 8, (2)**). After that drain off any water or dirt collected inside. Dispose of the collected water and dirt properly.

NOTICE

Always be environmentally responsible.

3. After draining, tighten the air bleed screw and drain plug.
4. Be sure to bleed air from the fuel system. See *Bleeding the Fuel System* on page 68.

Checking the Battery Electrolyte Level (Serviceable Batteries Only)

⚠ WARNING

Exposure Hazard!

Batteries contain sulfuric acid. Never allow battery fluid to come in contact with clothing, skin or eyes. Severe burns could result. Always wear safety goggles and protective clothing when servicing the battery. If battery fluid contacts the eyes and/or skin, immediately flush the affected area with a large amount of clean water and obtain prompt medical treatment.

NOTICE

Never turn off the battery switch (if equipped) or short the battery cables during operation. Damage to the electric system will result.

Never operate with insufficient battery electrolyte. Operating with insufficient electrolyte will destroy the battery.

Battery fluid tends to evaporate in high temperatures, especially in summer. In such conditions, inspect the battery earlier than specified.

1. Turn off the battery switch (if equipped) or disconnect the negative (-) battery cable.
2. Do not operate with insufficient battery electrolyte, as the battery will be destroyed.

3. Remove the plugs and check the electrolyte level in all cells.

NOTICE

Never attempt to remove the covers or fill a maintenance-free battery.

4. If the level is lower than the minimum fill level (**Figure 9, (1)**), fill with distilled water (**Figure 9, (2)**) (available in the grocery store) up to the upper limit (**Figure 9, (3)**) of the battery.

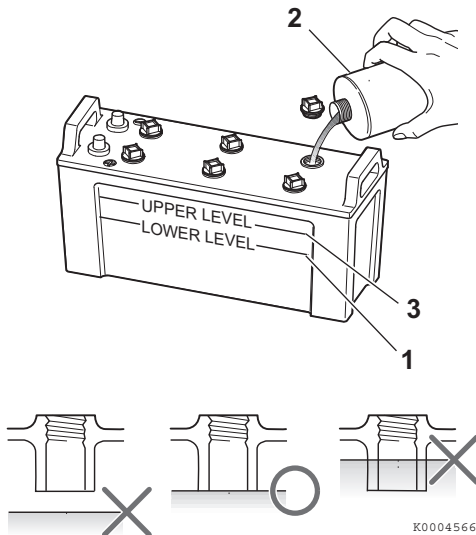


Figure 9

Note: The maximum fill level is approximately 10 to 15 mm (3/8 to 9/16 in.) above the plates.

Every 250 Hours of Operation

Perform the following maintenance every 250 hours or 1 year of operation, whichever comes first.

- Draining the Fuel Tank
- Replacing the Fuel Filter Element
- Changing the Engine Oil and Replacing the Engine Oil Filter Element
- Changing the Marine Gear Oil and Cleaning the Marine Gear Oil Strainer
- Checking or Replacing the Seawater Impeller
- Changing the Coolant
- Changing or Replacing Zinc Anodes
- Cleaning the Intake Silencer (Air Cleaner) Element
- Cleaning the Exhaust/Water Mixing Elbow
- Wash the Turbocharger blower
- Check the belt damage
- Checking the Wiring Connectors

Draining the Fuel Tank

See *Draining the Fuel Tank* on page 164.

4. Disconnect the alarm switch harness.

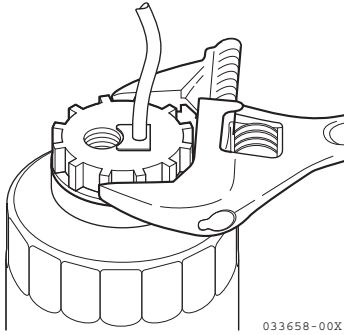


Figure 11

5. Remove the alarm switch (**Figure 10, (3)**) and (**Figure 11**) with a wrench.
6. Remove the filter element (**Figure 10, (4)**) with a filter wrench.
7. Install the alarm switch to the new fuel filter.

Component	Part No.
Fuel Filter Element	120670-55110

8. Apply a thin film of clean diesel fuel to the sealing surface of the new filter gasket.
9. Install new filter and hand-tighten. Use a filter wrench and tighten to 14.7 - 19.6 N·m (10.8 - 14.5 lb-ft).
10. Connect the alarm switch harness.
11. Install the housing and mounting screws.
12. Bleed the fuel system.
See Bleeding the Fuel System on page 68. Dispose of waste properly.

Replacing the YANMAR genuine fuel pre-filter element (Attached to hull, if equipped)

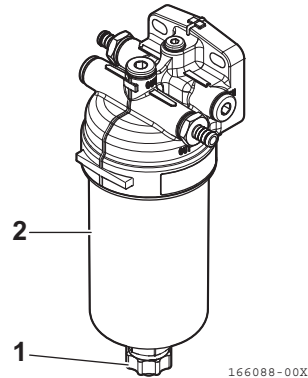


Figure 12

1. Close the fuel tank cock.
2. Remove the drain plug (**Figure 12, (1)**).
3. Remove the filter cover (**Figure 12, (2)**) with a wrench (Wrench across flat: 30).
4. Replace the filter element in the filter cover.

Component	Part No.
Fuel filter element kit (Including the O-rings for drain plug and filter cover)	120672-55820

5. Replace the O-ring on the drain plug and filter cover.
 - Apply a thin film of clean diesel fuel to the sealing surface of the new O-ring.
6. Install the filter cover. Use a wrench and tighten to 25 ± 5 N·m.
7. Install the drain plug and hand-tight.
8. Bleed the fuel system. *See Bleeding the Fuel System on page 68. Dispose of waste properly.*

PERIODIC MAINTENANCE

Changing the Engine Oil and Replacing the Engine Oil Filter Element

See *Changing the Engine Oil and Replacing the Engine Oil Filter Element* on page 165.

Changing the Marine Gear Oil and Cleaning the Marine Gear Oil Strainer

See *Changing the Marine Gear Oil and Cleaning the Marine Gear Oil Strainer* on page 166.

Checking or Replacing Seawater Pump Impeller

1. Loosen side cover bolts and remove the side cover.
2. Inspect the inside of the seawater pump with a flashlight. If any of the following are found, disassembly and maintenance are required:
 - Impeller blades are cracked or nicked. Edges or surfaces of the blades are marred or scratched.
 - Wear plate is damaged.
 - Side cover is excessively worn. Replace new parts.
3. If no damage is found when inspecting the inside of the pump, install the O-ring and side cover.
4. If a large amount of water leaks continuously from the water drain line below the seawater pump during operation, replace the mechanical seal. Consult authorized YANMAR Marine dealer or distributor.

Replacing the Seawater Pump Impeller

Note: The impeller must be replaced periodically (750 hours) even if there is no damage.

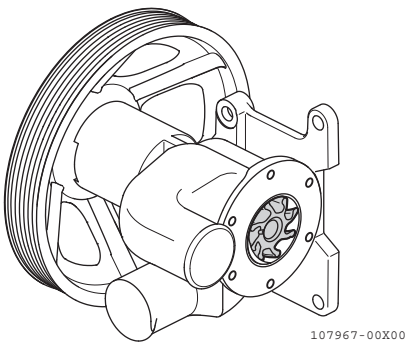


Figure 13

Special service tools for removing the impeller:

Puller A (standard)

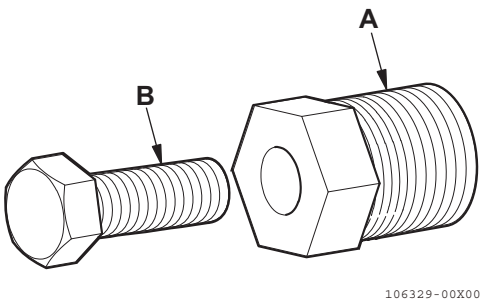


Figure 14

Puller A	Jack Screw B
M16 × 2	M10 × 40 mm length

1. Remove the side cover of the seawater pump.
2. Install puller (Figure 14, (A)) in the impeller.

3. Turn the jack screw (**Figure 14, (B)**) clockwise to remove the impeller from the pump body.
4. When installing the impeller, position blades of the impeller as shown in the illustration. (**Figure 16**)

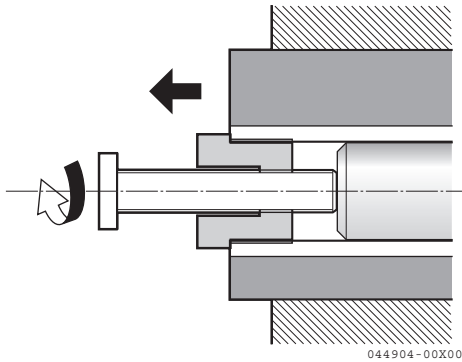


Figure 15

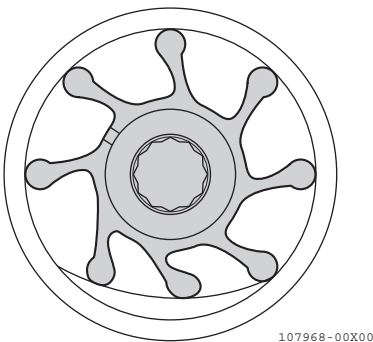


Figure 16

*Note: When replacing a used impeller with a new one, the impeller must have an M16 × 2 thread (**Figure 15**). Turn the M16 screw side of the impeller to the cover side and install.*

Replacing the seawater pump shaft kit

NOTICE

Replace the seawater pump shaft with the shaft kit.

1. Place the pulley (**Figure 17, (1)**) on a support (**Figure 17, (2)**) that supports the entire circumference of the pulley.
2. Remove the pulley while pressing on the end of the shaft (**Figure 17, (3)**).

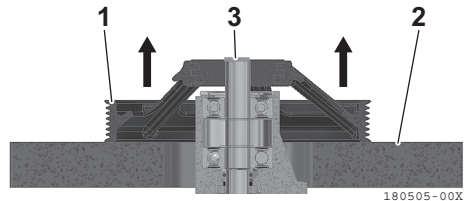


Figure 17

3. Remove the circlip (**Figure 18, (1)**).
4. Remove the end cover (**Figure 18, (2)**), and then remove the impeller (**Figure 18, (3)**), cam (**Figure 18, (4)**), wear plate (**Figure 18, (5)**), and seal (**Figure 18, (6)**).
5. Push the shaft kit (**Figure 18, (7)**) from the end cover side to remove it.

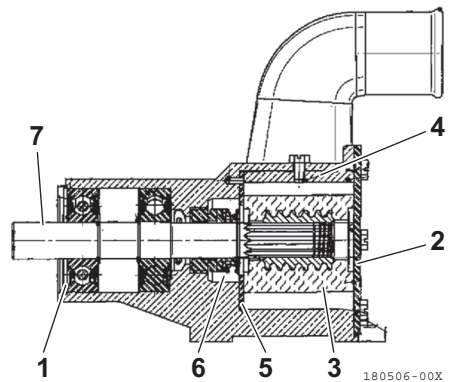


Figure 18

PERIODIC MAINTENANCE

6. Insert the new shaft kit (**Figure 19, (1)**) into the seawater pump, and install the circlip (**Figure 19, (2)**).
7. Change seawater pump position so that the end cover side is facing downwards.
8. Place the seawater pump on the support (**Figure 19, (3)**) that supports the end of the shaft.
9. Press-fit the pulley (**Figure 19, (4)**) from above.

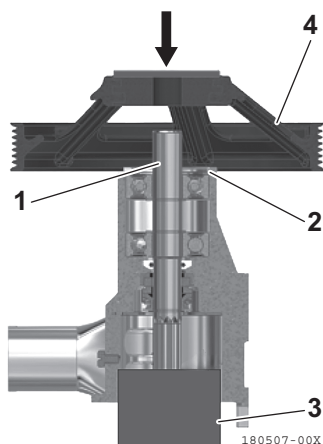


Figure 19

10. Install the impeller (**Figure 18, (3)**), cam (**Figure 18, (4)**), wear plate (**Figure 18, (5)**), and seal (**Figure 18, (6)**) from the side where the end cover was installed.
11. Install the end cover (**Figure 18, (2)**).

Changing the Coolant

⚠ CAUTION

Coolant Hazard!

Wear eye protection and rubber gloves when you handle engine coolant. If contact with the eyes or skin should occur, flush eyes and wash immediately with clean water.

Change the coolant every year.

NOTICE

Never mix different types and/or colors of coolants.

Discard old coolant in an approved manner according to environmental laws.

Note: If Long Life coolant is used, replace coolant every 2 years.

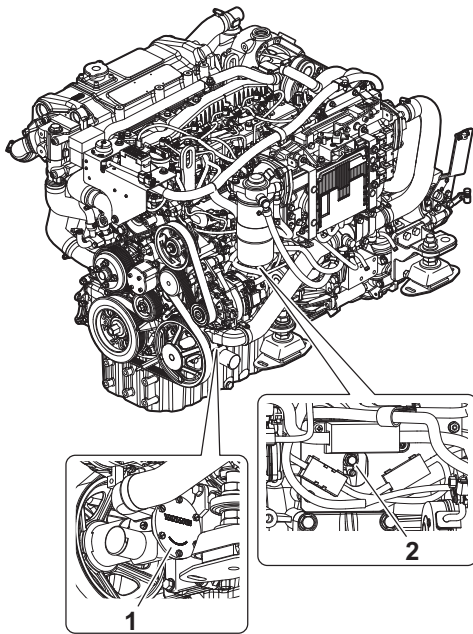


Figure 20

- 1 – Seawater pump
(Drain from pump cover)**
- 2 – Coolant drain cock
(Cylinderblock)**

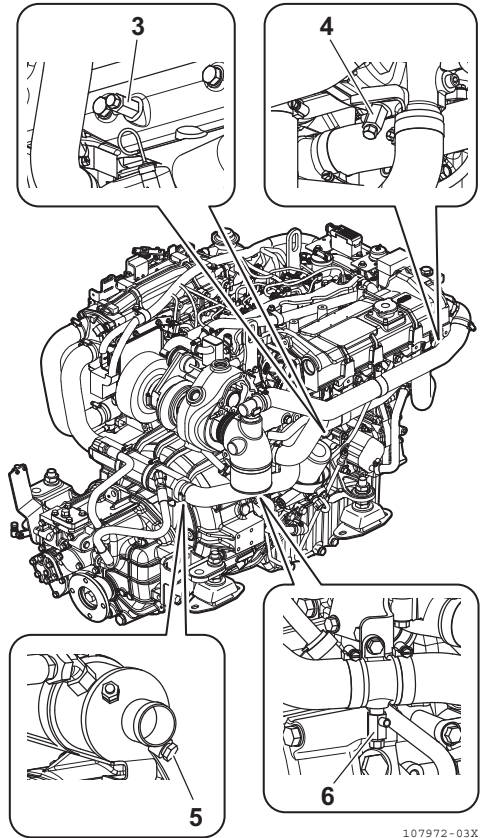


Figure 21

- 3 – Coolant drain cock
(Exhaust manifold)**
- 4 – Seawater drain cock
(Coolant tank/Heat exchanger)**
- 5 – Seawater drain plug
(Marine gear oil cooler)**
- 6 – Seawater drain plug
(Air cooler/Coolant cooler)**

Note: The drain cocks are opened before shipping from the factory.

1. Open all coolant drain cocks.
2. Allow to drain completely. Dispose of waste properly.
3. Close all the drain cocks.

PERIODIC MAINTENANCE

4. Fill coolant tank and reservoir with appropriate coolant.
See Engine Coolant Specifications on page 74 and Checking and Adding Coolant on page 75.


Checking or Replacing Zinc Anodes

Inspect and replace the zinc anodes periodically.

NOTICE

If zinc anodes are not replaced periodically, corrosion and engine damage will result.

1. Close the seacock.
2. Drain the seawater cooling system.
See DRAIN SEAWATER COOLING SYSTEM on page 200.



062662-01X00

Figure 22

3. Remove all the plugs (**Figure 23**) labeled ZINC (**Figure 22**).


4. Measure the remaining zinc in the plug. Replace the zinc anode when it is less than one-half its original size. See chart for sizes.
5. Install a new zinc in a new plug.

NOTICE

Never use sealing tape to install the zinc anode. The anode must make metal-to-metal contact.

6. Install plug.
7. Open the seacock and check for leaks.

Fuel Oil cooler

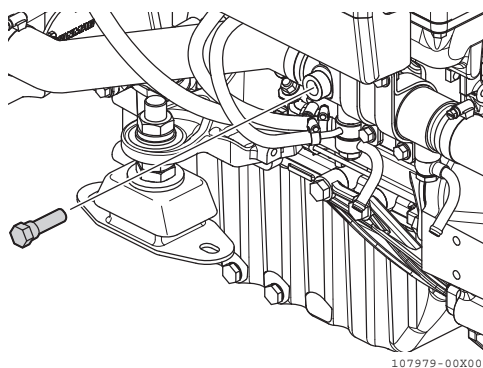

107979-00X00

Figure 23

Cleaning the Intake Silencer (Air Cleaner) Element

1. Disassemble the intake silencer (air cleaner).
2. Remove element. Clean element and housing with a neutral detergent.
3. Dry completely and reassemble.

Cleaning the Exhaust/Water Mixing Elbow

The mixing elbow is attached to the turbocharger. The exhaust gas is mixed with seawater in the mixing elbow.

1. Remove the mixing elbow.
2. Clean dirt and scale out of the exhaust and seawater passages.
3. If the mixing elbow is damaged, repair or replace. Consult authorized YANMAR Marine dealer or distributor.
4. Inspect the gasket and replace if necessary.

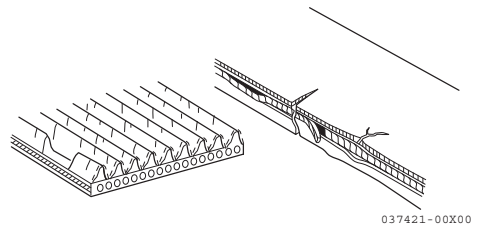


Figure 24



Figure 25

Wash the Turbocharger blower

Contamination of the turbocharger causes revolutions to drop and engine output to fall.

If a significant drop in engine output is noted (10% or more), wash the turbocharger blower.

This should be done only by a trained and qualified technician. Consult authorized YANMAR Marine dealer or distributor.

Checking the Wiring Connectors

Consult authorized YANMAR Marine dealer or distributor.

Check the belt damage

Inspecting V-Ribbed Belt

1. Visually check the belt for excessive wear, frayed cords, etc.
If any defects are found, replace the V-ribbed belt.
2. Check that the belt fits properly in the ribbed grooves.

NOTICE

- Confirm by hand that the belt has not slipped out of the grooves on the bottom of the pulley.
- Checks on the rib side of the belt are considered acceptable. If the belt has chunks missing from the ribs, it should be replaced.

500 Hours of Operation

Perform the following maintenance 500 hours or 2 years of operation, whichever comes first.

- **Replacing the Exhaust/Water Mixing Elbow**
- **Replacing Rubber Hoses**

Replacing the Exhaust/Water Mixing Elbow

Replace the mixing elbow with a new one 500 hours or every 2 years, whichever comes first, even if no damage is found.

Consult authorized YANMAR Marine dealer or distributor.

Replacing Rubber Hoses

Replace rubber hoses every 2 years.

Consult authorized YANMAR Marine dealer or distributor.

750 Hours of Operation

Perform the following maintenance 750 hours or 4 years of operation, whichever comes first.

- **Replacing the Seawater Pump Impeller**
- **Cleaning and Checking the Seawater Passages**
- **Cleaning and Checking the Freshwater Passages**
- **Replacing the Lagging of Turbo-charger (4LV150(Z), 4LV170(Z), 4LV195(Z) only)**
- **Checking the Remote Control Cable Operation**
- **Adjusting the Propeller Shaft Alignment**

Replacing the Seawater Pump Impeller

The seawater impeller must be replaced 750 hours even if it is not damaged.

See Checking or Replacing Seawater Pump Impeller on page 174.

Cleaning and Checking the Seawater Passages and the Freshwater Passages

After prolonged use, clean the seawater passages and the freshwater passages to remove trash, scale, rust and other contaminants that collect in the seawater passages and the freshwater passages. This can cause declining cooling performance.

The following items need to be inspected:

- Heat Exchanger and Pressure Cap
- Fuel Cooler
- Intercooler
- Thermostat

Consult authorized YANMAR Marine dealer or distributor.

Replacing the Lagging of Turbo-charger (4LV150(Z), 4LV170(Z), 4LV195(Z) only)

Consult your authorized YANMAR Marine dealer or distributor.

Component	Part No.
Lagging of turbo-charger	120672-18381

Checking the Remote Control Cable Operation

Consult authorized YANMAR Marine dealer or distributor.

Adjusting the Propeller Shaft Alignment

Consult authorized YANMAR Marine dealer or distributor.

2000 Hours of Operation

Perform the following maintenance 2000 hours or 8 years of operation, whichever comes first.

- Replacing the Front Crank Pulley
- Replacing the Chain Tensioner Slippers, Chain Vibration Dampers and Chain Guide


Replacing the Front Crank Pulley

Consult authorized YANMAR Marine dealer or distributor.

Replacing the Chain Tensioner Slippers, Chain Vibration Dampers and Chain Guide

The parts shown in **Figure 26** must be replaced.

Consult authorized YANMAR Marine dealer or distributor.

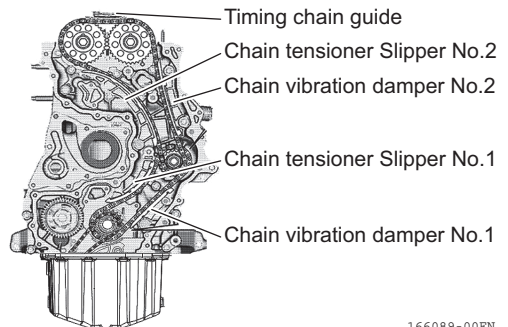

166089-00EN

Figure 26

This Page Intentionally Left Blank

TROUBLESHOOTING

SAFETY PRECAUTIONS

Before performing any troubleshooting procedures within this section, review the *SAFETY section on page 3*.

If a problem occurs, stop the engine immediately. Refer to the Symptom column in the Troubleshooting Chart to identify the problem.

TROUBLESHOOTING AFTER STARTING

Just after the engine has started, check the following items at a low engine speed:

Is sufficient water being discharged from the seawater outlet pipe?

If the discharge is low, stop the engine immediately. Identify the cause and repair.

Is the smoke color normal?

The continuous emission of black exhaust smoke indicates engine overloading.

This shortens the engines life and should be avoided.

Are there abnormal vibrations or noise?

Depending on the hull structure, engine and hull resonance may suddenly increase at certain engine speed ranges, causing heavy vibrations. Avoid operation in this speed range. If any abnormal sounds are heard, stop the engine and inspect for cause.

Alarm sounds during operation.

If the alarm sounds during operation, lower the engine speed immediately, check the alarm lamps and stop the engine for repairs.

TROUBLESHOOTING

**Is there water, oil or fuel leakage?
Are there any loose bolts or connections?**

Check the engine room daily for any leaks or loose connections.

Is there sufficient fuel in the fuel tank?

Refill fuel in advance to avoid running out of fuel. If the tank runs out of fuel, bleed the fuel system. *See Bleeding the Fuel System on page 68.*

When operating the engine at low speed for long periods of time, race the engine once every 2 hours. Racing the engine with the clutch in NEUTRAL, accelerate from the low-speed position to the high-speed position and repeat this process about five times. This is done to clean out carbon from the cylinders and the fuel injection valves.

NOTICE

Neglecting to race the engine will result in poor smoke color and reduce engine performance.

Periodically operate the engine near maximum speed while underway. This will generate higher exhaust temperatures, which will help clean out hard carbon deposits, maintain engine performance and prolong the life of the engine.

TROUBLESHOOTING INFORMATION

If the engine does not operate properly, refer to the *TROUBLESHOOTING CHART on page 185* or consult authorized YANMAR Marine dealer or distributor.

Supply the authorized YANMAR Marine dealer or distributor with the following information:

- Model name and serial number of your engine
- Boat model, hull material, size (tons)
- Use, type of boating, number of hours run
- Total number of operation hours (refer to hour meter), age of boat
- The operating conditions when the problem occurs:
 - Engine speed (min⁻¹)
 - Color of exhaust smoke
 - Type of diesel fuel
 - Type of engine oil
 - Any abnormal noises or vibration
 - Operating environment such as high altitude or extreme ambient temperatures, etc.
 - Engine maintenance history and previous problems
 - Other factors that contribute to the problem

TROUBLESHOOTING CHART

Symptom	Probable Cause	Measure
Indicators light on the instrument panel and alarm sounds during operation	Shift to low speed operation immediately, and check which indicator has come on. Stop the engine and inspect. If no abnormality is identified and there is no problem with operation, return to port at lowest speed and request repairs.	
Engine does not start or starts with difficulty		
Pinion gear does not engage	Loose terminal of battery/engage magnet	Tighten
	Poor contact of starting switch	Correct with sandpaper or replace
	Open coil of magnet switch	Replace
	Burr at gear tooth tip	Correct
	Poor clearance between pinion and ring gear	Correct
Pinion gear is engaged with ring gear, but does not rotate	Loose battery/starter terminal	Tighten
	Poor contact of starting switch	Correct with sandpaper or replace
	Worn brush	Replace
	Open circuit of starter coil	Replace
	Slippage of starter/clutch	Replace
	Excessive resistance of cable between battery and starter	Increase the cable size or shorten
	Insufficient battery charge	Charge
No fuel injection	Incomplete priming of fuel system	Carry out sufficient priming
	Clogged fuel inlet filter	Replace
	Fuel level in fuel tank is low	Add fuel
	Closed cock of fuel tank	Open cock
	Clogged fuel pipe	Clean
	Failure of fuel supply pump	Repair or replace
Failure of fuel injector	Faulty valve seat	Replace
	Sticking of nozzle	Replace
	Worn nozzle	Replace
	Clogged injection hole	Replace
Failure in fuel injection system	Loose fuel injection pipe joint	Tighten
	Broken fuel injection pipe	Replace
	Air trapped in fuel injection pipe	Bleed air from pipe
Engine compressed air leak	Air leak from exhaust valve	Carry out fitting of valve and seat
	Faulty gasket/packing	Replace
	Worn upper portion of cylinder	Replace
	Worn piston ring	Replace
	Sticking piston ring	Overhaul or replace
	Broken valve spring	Replace
No revolution indication on Tachometer during cranking.	Poor connection of crank & cam position sensors.	Check connection of the wire harness
Other	Failure of engine system	Conduct servicing
	Clogged intake or exhaust pipe	Clean
	Controller defects system error	Check DTC and conduct servicing

TROUBLESHOOTING

Symptom	Probable Cause	Measure
Engine is not running smoothly		
Operation failure of injection valve	Nozzle operation failure	Replace
	Broken fuel valve spring	Replace
Uneven fuel injection quantities	Clogged fuel filter	Replace
	Faulty operation of regulator valve	Replace
	Air trapped in fuel injection system	Bleed air from system and prime system
	Faulty operation of fuel supply pump	Repair
Other	Overload operation	Reduce load
	Moving parts seized	Disassemble, inspect and conduct servicing
	Slippage of gear box	Inspect and repair
Engine stops suddenly		
No fuel feed	Fuel level in fuel tank is low	Add fuel and prime
	Air trapped in fuel system or fuel injection	Bleed air
	Water trapped in fuel tank	Drain water from drain cock and fuel pipe, conduct priming
	Fuel cock closed	Inspect and repair as necessary
	Clogged fuel filter	Replace
	Broken fuel pipe	Replace
	Failure of fuel supply pump	Replace
Other	Moving parts seized	Disassemble and repair, or replace
	Controller defects system error	Inspect DTC and conduct servicing
Abnormal smoke color		
Failure of fuel injector	Clogged injection nozzle	Replace
	Sticking needle valve	Replace
	Reduction in injection pressure	Replace
	Poor atomization	Replace
	Carbon deposit	Clean
Turbo-charger failure (If equipped)	Clogged air cleaner	Clean
	Dirty compressor side	Clean
	Clogged turbine side	Clean
	Damaged bearing	Replace
Other	Overload operation	Reduce load
	Lubricant level too high	Lower the oil level
	Accumulated carbon deposit at intake/exhaust valve	Clean
	Dirty air cooler (If equipped)	Clean
	Improper fuel	Replace with proper fuel
	Clogged intake/exhaust valve	Clean

Symptom	Probable Cause	Measure
Insufficient output		
Insufficient fuel injection	Oil leak from fuel injection pipe joint	Tighten
	Clogged fuel filter	Replace
	Clogged fuel pipe	Clean
	Failure of fuel supply pump	Repair
Insufficient injection by fuel injection nozzle	Clogged injection hole	Replace
	Faulty valve seat	Replace
	Sticking nozzle	Replace
	Loose fuel injection pipe joint	Tighten
	Worn nozzle	Replace
Compressed gas leak in the engine cylinder	Gas leak from intake/exhaust valve	Conduct fitting of the valve
	Worn upper portion of cylinder bore	Lap or replace
	Worn piston ring	Replace
	Sticking piston ring	Overhaul or replace
Turbo-charger failure (If equipped)	Clogged air cleaner	Clean
	Dirty compressor side	Clean
	Clogged turbine nozzle	Clean
	Damaged bearing	Replace
Other	Improper fuel	Replace with correct fuel
	Clogged exhaust duct	Clean
	Seized or overheated moving parts	Disassemble and conduct servicing
	Insufficient seawater	Inspect seawater pump
	Insufficient feed of engine oil	Disassemble and clean engine oil pump and filter
	Controller defects system error	Inspect DTC and conduct servicing
Knocking		
Failure of fuel injector	Broken fuel valve spring	Replace
	Sticking nozzle	Replace
	Poor atomization	Replace
Other	Insufficient seawater	Replace seawater pump impeller
	Piston clearance excessive	Replace
	Bearing clearance excessive	Replace
	Improper fuel	Replace with correct fuel
	Water trapped in fuel	Replace fuel
	Poor compression	Inspect and service

TROUBLESHOOTING

Symptom	Probable Cause	Measure
Breakdown of turbo-charger (If equipped)		
Drop in intake pressure	Dirty air cleaner	Clean
	Leak from intake piping	Repair
	Leak of exhaust gas	Repair
	High intake air temperature	Complete thermal insulation of exhaust pipe
		Ensure intake air path is unrestricted from outside air
		Clean air cleaner
	Drop in air pressure in engine room	Ensure intake air path is unrestricted from outside air
	Broken turbine impeller	Replace
	Dirty turbine impeller	Clean
	Clogged exhaust pipe	Clean
Abnormal vibration	Broken turbine impeller	Replace
	Broken compressor impeller	Replace
	Deposit of carbon or oxides on turbine	Remove and repair or replace
	Broken bearing	Replace
	Bent turbine shaft	Replace
	Loose parts or fasteners	Tighten
Noise	Damaged bearing	Replace
	Contact by revolving parts	Repair or replace
	Dirty or carbon deposit on turbine and compressor	Clean
	Entrapment of foreign matter (at turbine entrance)	Repair or replace
	Rapid change in load (surging)	Stabilize the load or replace turbine nozzle
Quick contamination of engine oil	Gas trapped in bearing housing	Repair
	Clogged seal air path	Clean
	Damaged seal ring	Replace
	Clogged pressure balance path	Clean
Pulsation of intake air pressure	Uneven cylinder combustion	Adjust for uniform combustion
	Rapid change in load	Operate correctly
	Excessively dirty compressor side	Clean
	Intake temperature too high	Clean cooling fin
		Complete thermal insulation of exhaust pipe
		Ensure intake air path is unrestricted from outside air
Other	Bearing seizure	Replace
	Corrosion in compressor/turbine impeller or bearing housing	Increase the coolant temperature
Other malfunctions		
Noise generation	Loose flywheel set bolts	Tighten bolts
	Loose connecting rod bolts	Tighten bolts
	Worn crank pin	Replace
	Excessive gear backlash	Inspect the gear; replace worn gear, shaft, and/or bushing with new ones

Symptom	Probable Cause	Measure
Low lubrication oil pressure	Clogged engine oil filter	Replace
	Engine oil temperature too high	Check the coolant level
	Failure of oil pump	Overhaul or replace
	Faulty operation of oil pump relief valve	Tighten the adjusting valve
		Replace the safety valve
	Low viscosity of engine oil used	Replace the engine oil
	Insufficient engine oil quantity	Add oil
	Faulty pressure switch	Replace
Coolant temperature too high	Insufficient seawater	Check seawater system
	Faulty thermostat	Replace
	Loose drive belt of coolant pump	Adjust the belt tension
	Overloaded operation	Decrease the load
Other	Controller defects system error	Inspect and conduct servicing

Symptom	Probable Cause	Measure	Reference
Indicators Do Not Go On:			
• The tachometer does not turn on, even though the power switch is turned on	No electrical current available. The battery switch is turned off, the fuse (3A) on the instrument panel is burned out or the circuit is broken.	Consult authorized YANMAR Marine dealer or distributor.	—
• One of the indicators does not go out	Sensor switch is faulty.	Consult authorized YANMAR Marine dealer or distributor.	—
• Battery low charge indicator does not go out during operation	V-ribbed belt is loose or broken.	Replace V-ribbed belt or adjust tension.	See <i>Check the belt damage on page 179.</i>
	Battery is defective.	Check battery fluid level, specific gravity or replace battery.	See <i>Checking the Battery Electrolyte Level (Serviceable Batteries Only) on page 170.</i>
	Alternator power generation failure.	Consult authorized YANMAR Marine dealer or distributor.	—
• Instrument panel does not turn on, even though the power switch is turned on	No electrical current available. The battery switch for the engine control system is turned off, the fuse (10A) in the fuse box is burned out or the circuit is broken.	Consult authorized YANMAR Marine dealer or distributor.	—
Starting Failures:			
• Starter does not turn or turns slowly (engine can be turned manually)	Faulty starter relay	Consult authorized YANMAR Marine dealer or distributor.	—
	The fuse (50A) near the starter is burned out or the circuit is broken.	Consult authorized YANMAR Marine dealer or distributor.	—
	Faulty marine gear position.	Shift to NEUTRAL and start.	—
	Faulty safety switch device.	Consult authorized YANMAR Marine dealer or distributor.	—

FAILSAFE DIAGNOSIS FUNCTIONAL SPECIFICATION CHART

Failsafe Actions

Level 1: Engine speed is limited to 2500 min⁻¹ or less

Level 2: Engine speed is limited to 1500 min⁻¹ or less

Level 3: Engine speed is kept low idle

	DTC	SPN	FMI	With FFD	DTC Description	Failsafe Action							Note	
						Warn- ing	Level 1	Level 2	Level 3	ENG Stop	Others			
Engine-ECU related DTC	P0016	522401	12		Crank & Cam Shaft Speed Sensor Error - Abnormal correlation	x								
	P0087	157	10		Rail Pressure Deviation Too Low	x		x						
	P0088	157	0	x	Rail Pressure Too High	x		x						
	P0093	157	1	x	Rail Pressure Deviation Error - Fuel Leakage	x		x						
	P0110	105	3		Charge Air Temperature Sensor High Input	x							Charge Air Temperature is fixed 170 degrees C.	
			4		Charge Air Temperature Sensor Low Input	x								
	P0115	110	3		Coolant Temperature Sensor High Input	x							Engine is controlled with calculated intake air temperature.	
			4		Coolant Temperature Sensor Low Input	x								
	P0120	91	3		Main Analog Throttle Sensor High Input	x							Engine can be controlled by Sub Throttle Sensor.	
			4		Main Analog Throttle Sensor Low Input	x								
			12		CAN Throttle Sensor Error	x								
	P0190	157	3		Rail Pressure Sensor 1 High Input	x	x	x*					*: If P0192 is also detected, Level 2 is applied.	
			4		Rail Pressure Sensor 1 Low Input	x	x	x*						
	P0191	157	2		Rail Pressure Sensor 1 & 2 Deviation Error	x		x						
	P0192	129	3		Rail Pressure Sensor 2 High Input	x	x	x*					*: If P0190 is also detected, Level 2 is applied.	
			4		Rail Pressure Sensor 2 Low Input	x	x	x*						
	P0201	651	5		Injector 1 Error - Open / Short Circuit	x	x						Only abnormal Injector is stop injection.	
	P0202	652	5		Injector 2 Error - Open / Short Circuit	x	x							
	P0203	653	5		Injector 3 Error - Open / Short Circuit	x	x							
	P0204	654	5		Injector 4 Error - Open / Short Circuit	x	x							
	P0217	110	0	x		Coolant Temperature Too High	x	x						
	P0219	190	0	x		Engine Overspeed Condition	x				x			
	P0220	29	3			Sub Throttle Sensor High Input	x					x		Engine speed is fixed 1,000 min ⁻¹ .
			4		Sub Throttle Sensor Low Input	x						x		
	P0234	102	0	x		Charge Air Pressure Too High	x	x						
	P0235	102	1			Charge Air Pressure Too Low	x							
			3		Charge Air Pressure Sensor High input	x	x							Charge Air Pressure is fixed 200 kPa.
			4		Charge Air Pressure Sensor Low input	x	x							
	P0301	651	2			Injector 1 Error - Abnormal injection	x							
	P0302	652	2			Injector 2 Error - Abnormal injection	x							
	P0303	653	2			Injector 3 Error - Abnormal injection	x							
	P0304	654	2			Injector 4 Error - Abnormal injection	x							
	P0335	637	2			Crankshaft Speed Sensor Error - No Signal	x			x				
			3		Crankshaft Speed Sensor High Input	x								
			4		Crankshaft Speed Sensor Low Input	x								
			5		Crankshaft Speed Sensor Error - No Signal at starting	x			x					

DTC	SPN	FMI	With FFD	DTC Description	Failsafe Action							Note
					Warn- ing	Level 1	Level 2	Level 3	ENG Stop	Others		
P0340	522401	3		Camshaft Speed Sensor High Input	x	x						
		4		Camshaft Speed Sensor Low Input	x	x						
		5		Camshaft Speed Sensor Error - No Signal at starting	x	x						
		8		Camshaft Speed Sensor Error - No Signal	x	x						
P0380	676	5		Glow Relay Error - Coil Open Circuit	x					x	Stop the Glow Relay energization.	
		6		Glow Relay Error - Coil Short Circuit	x					x		
P0512	1041	3		Starter Interlock	x							
P0520	100	3		Oil Pressure Sensor High Input	x							
		4		Oil Pressure Sensor Low Input	x							
P0524	100	1	x	Oil Pressure Too Low	x		x					
P0560	158	0		Battery Voltage Too High	x				x			
		1		Battery Voltage Too Low	x							
P0612	523010	5		EDU Relay Error - Coil Open Circuit	x	x				x	Stop the EDU Relay energization.	
		6		EDU Relay Error - Coil Short Circuit	x	x				x		
P0615	522249	5		Starter Relay Error - Coil Open Circuit	x					x	Stop the Starter Relay energization.	
		6		Starter Relay Error - Coil Short Circuit	x					x		
P0627	633	5		Fuel Pump Control Valve Error - Open / Short Circuit	x					x	Stop the EDU Relay energization.	
P062D	2797	5		EDU Error	x					x	Stop the EDU Relay energization.	
		9		EDU CAN Communication Error	x	x				x		
P062F	630	12		EEPROM Error	x						Engine is controlled with default data.	
P0641	3509	0		Sensor 5V High Input	x							
		1		Sensor 5V Low Input	x							
P0685	1485	5		ECU Main Relay Error - Coil Open Circuit	x					x	Stop the ECU Main Relay energization.	
		6		ECU Main Relay Error - Coil Short Circuit	x					x		
		7		ECU Main Relay Error - Contact Stuck	x					x		
P1000	3607	14		Emergency Switch Active	x							
P1001	701	6		ACC Relay Error - Coil Short Circuit	x							
P1005	522778	7		Stop Switch Error - Contact Stuck	x							
P1006	522775	0		Water In Sail drive Seal	x							
P1229	157	7		Fuel Pressure Deviation Too High	x	x						
P1271	786	5		Pressure Regulate Valve Error - Open / Short Circuit	x	x						
P1272	786	2		Pressure Regulate Valve Error - Stuck at Closed Position	x	x						
P1570	523631	7		Engine Turn Over	x				x			
P1606	523254	12		ROM Error - Abnormal INDMAP / MAP	x				x			
P1630	523223	12		QR Code Error - Checksum Error	x						Engine is controlled with default data.	
P1631	523221	12		QR Code Error - No Data	x							
P1632	523221	13		QR Code Error - Invalid Code	x							
P2269	97	0		Water In Fuel								
P2502	167	1		Charging System Error	x							
P2530	522308	7		Start Switch Error - Contact Stuck	x							
U0146	91	9		CAN Communication Error	x						Engine can be controlled by Sub Throttle Sensor.	

TROUBLESHOOTING

DTC	SPN	FMI	With FFD	DTC Description	Failsafe Action							Note
					Warn- ing	Level 1	Level 2	Level 3	ENG Stop	Others		
Drive-ECU related DTC	P0920	773	3	Shift Valve(F) Actuator High Range	x							
			4	Shift Valve(F) Actuator Low Range	x						Shift Valve(F) shuts OFF.	
	P0924	784	3	Shift Valve(R) Actuator High Range	x							
			4	Shift Valve(R) Actuator Low Range	x						Shift Valve(R) shuts OFF.	
	P0745	740	3	Clutch Valve High Range	x							
			4	Clutch Valve Low Range	x						Trolling function will be unavailable.	
	P0720	191	8	PROP SPEED SENSOR L RANGE	x						C-type trolling function will be switched to E-type trolling.	
	P0218	177	0	Gear Oil Temperature Too High	x						Trolling function will be unavailable.	
	P0710	177	4	Gear Oil Temperature Low Range	x							
			3	Gear Oil Temperature High Range	x							
	U103	525	10	Shift & Trolling CAN Communication Error	x						Shift position will be changed to Neutral.	
	U100	190	10	Engine ECU CAN Communication Error	x							
	U404	525	2	Invalid Shift Data	x						Shift position will be changed to Neutral.	
	U402	684	2	Invalid Trolling Data	x						Trolling function will be unavailable.	
	P1811	523721	3	Tilt Up Actuator High Range	x							Trim adjustment function (UP) will be unavailable.
			4	Tilt Up Actuator Low Range	x							
	P1812	523723	3	Tilt Trailer Actuator High Range	x							Trailer function will be unavailable.
			4	Tilt Trailer Actuator Low Range	x							
	P1813	523722	3	Tilt Down Actuator High Range	x							Trim adjustment function (DOWN) will be unavailable.
			4	Tilt Down Actuator Low Range	x							
	P1814	523557	3	Tilt Position Sensor High Range	x							
			4	Tilt Position Sensor Low Range	x							
	P1815	523558	10	Tilt CAN Communication Error	x							Trim adjustment function (UP & DOWN) will be unavailable.
	P1816	520719	1	Reserve Tank Level Low Range	x							
	P0560	158	1	Battery Voltage Too Low	x							
	P1817	521680	13	Tilt sensor calibration error	x							Trim adjustment function (UP & DOWN) will be unavailable.
	C1010	521238	3	Tank1 level sensor HI range	x							
	C1010	521238	4	Tank1 level sensor LO range	x							
	C1011	521239	3	Tank2 level sensor HI range	x							
	C1011	521239	4	Tank2 level sensor LO range	x							
	C1051	521240	3	Rudder angle sensor HI range	x							
	C1051	521240	4	Rudder angle sensor LO range	x							
	C1053	521241	3	Trim position sensor (port) HI range	x							
	C1053	521241	4	Trim position sensor (port) LO range	x							
	C1054	521242	3	Trim position sensor (starboard) HI range	x							
	C1054	521242	4	Trim position sensor (starboard) LO range	x							
	C1012	521994	13	Tank1 level calibration error	x							
	C1013	521995	13	Tank2 level calibration error	x							
	C1052	521996	13	Rudder angle calibration error	x							
	P1070	521243	3	Seawater temperature sensor HI range	x							
	P1070	521243	4	Seawater temperature sensor LO range	x							

DTC		SPN	FMI	With FFD	DTC Description	Failsafe Action						
						Warn- ing	Level 1	Level 2	Level 3	ENG Stop	Others	Note
Drive-ECU related DTC	P0070	171	3		Outside air temperature sensor HI range	x						
	P0070	171	4		Outside air temperature sensor LO range	x						
	C1014	521997	13		Seawater temperature calibration error	x						
	C1015	521998	13		Outside air temperature calibration error	x						
	U2003	521233	4		House battery voltage LO range	x						
	P0840	127	3		Gear oil pressure sensor HI range	x						
	P0840	127	4		Gear oil pressure sensor LO range	x						
	P1628	630	12		Drive ECU EEPROM error	x						
	P0605	628	12		ROM CRC abnormality	x						
	P1826	522017	6		Trolling solenoid over current failure	x						Trolling feature will be unavailable.
P1827	522017	5		Trolling solenoid non current failure	x						Trolling feature will be unavailable.	
Helm-ECU related DTC	U0100	523760	9		CAN Communication Error Engine ECU to Helm ECU	x			x			Station change will be unavailable.
	U0404	523761	9		CAN Communication Error Drive ECU to Helm ECU	x			x			Shift change will be unavailable.
	U1201	523762	9		CAN Communication Error Helm ECU to Helm ECU	x						Station change will be unavailable.
	U1202	523763	9		CAN Communication Error Helm Local	x			x			Station change, Synch. operation, Warmup operation, and Engine speed limit mode will be unavailable.
	U1203	523764	9		Lost Communication With Display	x						Station change and Display operation will be unavailable.
	B1001	523543	4		Neutral Switch Failure	x						Station change, Warmup operation, and Engine speed limit mode will be unavailable.
	B1002	523542	4		Station Select Switch Failure	x						Station change and Indicator Dimming operation will be unavailable.
	B1003	523544	4		Synchronization Switch Failure	x						Station change and Synchronization feature will be unavailable.
	B1004	523545	4		Trolling Switch Failure	x						Station change and Trolling feature will be unavailable.
	B1005	523541	3		Start/Stop Switch Failure	x						Station change will be unavailable.
	B1011	523546	3		Tilt Switch Failure	x						Station change and Trim adjustment will be unavailable.
	B1013	523548	3		Trailer Switch Failure	x						Station change and Trailer mode will be unavailable.
	P0120	91	3		Throttle Lever Failure (High)	x			x			Station change and Trolling feature will be unavailable.
			4		Throttle Lever Failure (Low)	x			x			
	B1020	91	13		Throttle Lever Calibration Failure	x			x			Station change and Trailer mode will be unavailable.
B1043	523768	12		Helm ECU EEPROM	x						Station change will be unavailable.	

TROUBLESHOOTING

					Failsafe Action						
DTC	SPN	FMI	With FFD	DTC Description	Warn- ing	Level 1	Level 2	Level 3	ENG Stop	Others	Note
Helm-ECU related DTC	B1071	523779	12	ANALOG CONVERTER EEPROM ERROR	×			×			
	U1214	523781	9	SW PANEL CAN COM ERROR	×						Station change comes to be unavailable.
	B1100	523782	11	SW PANEL OPTICAL SENSOR ERROR	×						
	C1208	522041	9	Can com error Can-Control Head	×			×			Station change, Synch. operation, Warmup operation, and Engine speed limit mode will be unavailable.
	C1027	522042	11	Throttle/Shift sensor warning Can-Control Head	×						
	C1028	522043	11	Throttle/Shift sensor failure Can-Control Head	×			×			Station change and Trolling feature will be unavailable.
	C1029	522044	11	Trolling sensor failure Can-Control Head	×						Trolling feature will be unavailable.
	B1103	523793	11	IMMOBILIZER ANTENNA FAILURE							
	C1066	523791	11	SOFTWARE VERSION ERROR SW PANEL							

VESSEL CONTROL SYSTEM DIAGNOSIS TROUBLE CODE LIST

DTC		SPN	FMI	With FFD	DTC Description	Failsafe Action						
						Warn- ing	Level 1	Level 2	Level 3	ENG Stop	Others	Note
Marine ECU	B1001	523543	4		NEUTRAL SW ACTIVATED	×						Station change, Warmup, operation, and Engine speed limit mode will be unavailable.
	B1002	523542	4		SELECT SW ACTIVATED	×						Station change and Indicator Dimming operation will be unavailable.
	B1003	523544	4		SYNCHRO SW ACTIVATED	×						Station change and Synchronization feature will be unavailable.
	B1004	523545	4		TROLL SW ACTIVATED	×						Station change and Trolling feature will be unavailable.
	B1005	523541	3		START/STOP SW ACTIVATED	×						Station change will be unavailable.
	B1006	523783	3		POWER SWITCH FAULT	×						
	B1011	523546	3		TILT SW ACTIVATED	×						Station change and Trim adjustment will be unavailable.
	B1013	523548	3		TRAIL SW ACTIVATED	×						Station change and Trailer mode will be unavailable.
	B1020	91	13		THROTTLE CALIBRATION INCONSISTENCY	×						Station change and Trailer mode will be unavailable.
	B1061	522040	11		SHIFT ACTUATOR FAILURE	×						
	B1071	523779	12		CONTROLLER(C/H) EEPROM ERROR	×						
	B1100	523782	11		SW PANEL OPTICAL SENSOR ERROR	×						
	B1103	523793	11		SW PANEL ANTENNA FAILURE	×						
	C1010	521238	3		TANK1 LEVEL SENSOR HIGH RANGE	×						
	C1010	521238	4		TANK1 LEVEL SENSOR LOW RANGE	×						
	C1011	521239	3		TANK2 LEVEL SENSOR HIGH RANGE	×						
	C1011	521239	4		TANK2 LEVEL SENSOR LOW RANGE	×						
	C1012	521994	13		TANK1 LEVEL CALIBRATION ERROR	×						
	C1013	521995	13		TANK2 LEVEL CALIBRATION ERROR	×						
	C1027	522042	11		THROTTLE/SHIFT SENSOR WARNING CAN-CONTROL HEAD	×						
	C1028	522043	11		THROTTLE/SHIFT SENSOR FAILURE CAN-CONTROL HEAD	×			×			Station change and Trolling feature will be unavailable.
	C1029	522044	11		TROLLING SENSOR FAILURE CAN-CONTROL HEAD	×						Trolling feature will be unavailable.
	C1051	521240	3		RUDDER ANGLE SENSOR HIGH RANGE	×						
	C1051	521240	4		RUDDER ANGLE SENSOR LOW RANGE	×						
	C1052	521996	13		RUDDER ANGLE CALIBRATION ERROR	×						
	C1053	521241	3		TRIM POSITION SENSOR(PORT) HIGH RANGE	×						
	C1053	521241	4		TRIM POSITION SENSOR(PORT) LOW RANGE	×						
	C1054	521242	3		TRIM POSITION SENSOR(STBD) HIGH RANGE	×						

TROUBLESHOOTING

DTC	SPN	FMI	With FFD	DTC Description	Failsafe Action							Note
					Warn- ing	Level 1	Level 2	Level 3	ENG Stop	Others		
Marine ECU	C1054	521242	4	TRIM POSITION SENSOR(STBD) LOW RANGE	x							
	C1065	523790	11	SOFTWARE VERSION ERROR THRUSTER CONVERTER	x							
	C1208	522041	9	CAN COM ERROR CAN-CONTROL HEAD	x			x			Station change, Synch. operation, Warmup operation, and Engine speed limit mode will be unavailable.	
	P0218	177	0	GEAR OIL TEMP TOO HIGH	x						Trolling function will be unavailable.	
	P0560	158	1	BATTERY VOLTAGE TOO LOW	x							
	P0604	516901	12	MARINE-ECU RAM ERROR	x							
	P0605	628	12	MARINE-ECU ROM ERROR	x							
	P0710	177	3	GEAR OIL TEMP H RANGE	x							
	P0710	177	4	GEAR OIL TEMP L RANGE	x							
	P0720	191	8	PROP SPEED SENSOR L RANGE	x						C-type trolling function will be switched to E-type trolling.	
	P0745	740	3	CHANGE VALVE H RANGE	x							
	P0745	740	4	CHANGE VALVE L RANGE	x						Trolling function will be unavailable.	
	P0840	127	3	GEAR OIL PRESS SENSOR HIGH RANGE	x							
	P0840	127	4	GEAR OIL PRESS SENSOR LOW RANGE	x							
	P0920	773	3	SHIFT FORWARD H RANGE	x							
	P0920	773	4	SHIFT FORWARD L RANGE	x						Shift Valve (F) shuts OFF.	
	P0924	784	3	SHIFT REVERSE H RANGE	x							
	P0924	784	4	SHIFT REVERSE L RANGE	x						Shift Valve (R) shuts OFF.	
	P1811	520906	3	TILT UP H RANGE	x						Trim adjustment function (UP) will be unavailable.	
	P1811	520906	4	TILT UP L RANGE	x						Trim adjustment function (UP) will be unavailable.	
	P1812	520908	3	TRAILER H RANGE	x						Trailer function will be unavailable.	
	P1812	520908	4	TRAILER L RANGE	x						Trailer function will be unavailable.	
	P1813	520907	3	TILT DOWN H RANGE	x						Trim adjustment function (DOWN) will be unavailable.	
	P1813	520907	4	TILT DOWN L RANGE	x						Trim adjustment function (DOWN) will be unavailable.	
	P1814	521282	3	TILT SENSOR H RANGE	x							
	P1814	521282	4	TILT SENSOR L RANGE	x							
	P1816	520719	1	DRIVE LUB. OIL LOW LEVEL	x							
	P1817	521680	13	TILT SENSOR CALIBRATION ERROR	x						Trim adjustment function (UP & DOWN) will be unavailable.	
	P1828	522045	1	GEAR OIL PRESS TOO LOW	x							
	U0100	523760	9	CAN COM ERROR ENG-ECU TO MARINE-ECU	x			x			Station change will be unavailable.	
	U0146	516902	9	CAN COM ERROR MARINE-ECU TO GATEWAY-ECU CH1	x						Station change, Synch. operation, Warmup operation, and Engine speed limit mode will be unavailable.	

DTC		SPN	FMI	With FFD	DTC Description	Failsafe Action							Note
						Warn- ing	Level 1	Level 2	Level 3	ENG Stop	Others		
Marine ECU	U0147	516903	9		CAN COM ERROR MARINE-ECU TO GATEWAY-ECU CH2	x						Station change, Synch. operation, Warmup operation, and Engine speed limit mode will be unavailable.	
	U1202	523763	9		CAN COM ERROR MARINE-LOCAL	x			x			Station change, Synch. operation, Warmup operation, and Engine speed limit mode will be unavailable.	
	U1214	523781	9		SW PANEL CAN COM ERROR	x						Station change will be unavailable.	
	U2003	521233	4		SERVICE BATTERY VOLTAGE LOW RANGE	x							
CH ECU	C1058	522003	11		CH-ECU WRONG ASSEMBLY	x							
	P0604	516901	12		CH-ECU RAM ERROR	x							
	P0605	628	12		CH-ECU ROM ERROR	x							
Gateway ECU	C1058	522003	11		GATEWAY-ECPU WRONG ASSEMBLY	x							
	P0604	516901	12		GATEWAY-ECU RAM ERROR	x							
	P0605	628	12		GATEWAY-ECU ROM ERROR	x							
	P062F	8621	12		GATEWAY-ECU NVRAM ERROR	x							

This Page Intentionally Left Blank

LONG-TERM STORAGE

If the engine will not be used for an extended period of time, special measures should be taken to protect the cooling system, fuel system and combustion chamber from corrosion and the exterior from rusting.

The engine can normally stand idle for up to 6 months. If it remains unused for longer than this, please consult your authorized YANMAR Marine dealer or distributor.

Before performing any storage procedures within this section, review the *SAFETY section on page 3*.

In cold temperatures or before long-term storage, be sure to drain the seawater from the cooling system.

NOTICE

- Do not drain the coolant system. A full coolant system will prevent corrosion and frost damage.
 - If seawater is left inside of the engine, it may freeze and damage parts of the cooling system when the ambient temperature is below 0 °C (32 °F).
-

PREPARE ENGINE FOR LONG-TERM STORAGE

Note: If the engine is close to a periodic maintenance interval, perform those maintenance procedures before putting the engine into long-term storage.

1. Wipe off any dust or oil from the outside of engine.
2. Drain water from fuel filters.
3. Drain fuel tank completely or fill the tank to prevent condensation.
4. Grease the exposed areas and joints of the remote control cables and the bearings of the remote control handle.
5. Seal the intake silencer, exhaust pipe, etc. to prevent moisture or contamination from entering engine.
6. Completely drain bilge in hull bottom.
7. Waterproof the engine room to prevent rain or seawater from entering.
8. Charge the battery once a month to compensate for battery's self-discharge.
9. Make sure the power switch is off.

DRAIN SEAWATER COOLING SYSTEM

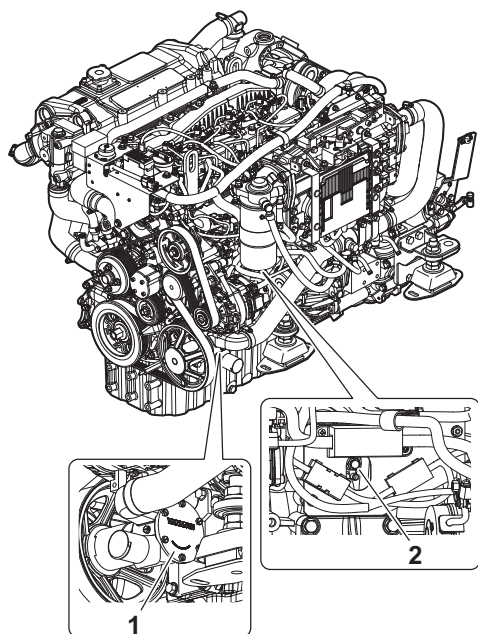


Figure 1

- 1 – Seawater pump
(Drain from pump cover)**
- 2 – Coolant drain cock
(Cylinderblock)**

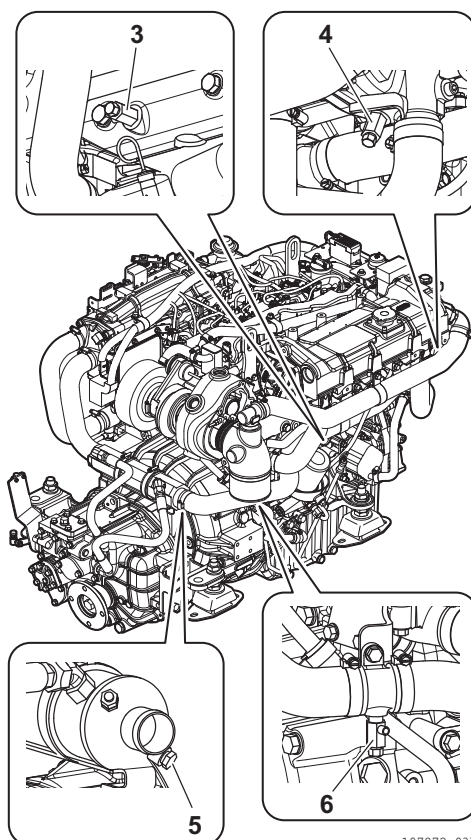


Figure 2

- 3 – Coolant drain cock
(Exhaust manifold)**
- 4 – Seawater drain cock
(Coolant tank/Heat exchanger)**
- 5 – Seawater drain plug
(Marine gear oil cooler)**
- 6 – Seawater drain plug
(Air cooler/Coolant cooler)**

Note: The drain cocks are opened before shipping from the factory.

NOTICE

If seawater is left inside, it may freeze and damage parts of the cooling system (heat exchanger, seawater pump, etc.) when ambient temperature is below 32 °F (0 °C).

1. Open the seawater drain cock on the marine gear cooler (if equipped). Allow to drain. Open the seawater drain cock on the heat exchanger and drain. If no water drains, use a stiff brush to remove any debris.
2. Remove four bolts attaching the side cover of the seawater pump. Remove the cover and drain the seawater.
3. Install cover and tighten bolts.
4. Close all the drain cocks.

RETURNING THE ENGINE TO SERVICE

1. Replace the oil and the oil filter before running the engine.
2. Supply fuel if the fuel in the fuel tank was removed, and prime the fuel system.
3. Confirm that there is engine coolant in the engine.
4. Operate the engine at idle speed for 1 minute.
5. Check fluid levels and check engine for leaks.

This Page Intentionally Left Blank

SPECIFICATIONS

PRINCIPAL ENGINE SPECIFICATIONS

SPECIFICATIONS

4LV(Z) Engines

Specification		4LV250(Z)	4LV230(Z)	4LV195(Z)	4LV170(Z)	4LV150(Z)
Use		For recreational use				
Type		Vertical water cooled 4-cycle diesel engine				
Combustion System		Direct injection (Common rail system)				
Air Charging		Turbocharged with air cooler				
Number of Cylinders		4				
Bore × Stroke		92 mm × 103.6 mm (3.62 in. × 4.08 in.)				
Displacement		2.755 L (168.1 cu in.)				
Continuous power		168 kW (228 hp metric) / 3683 min ⁻¹	154 kW (209 hp metric) / 3683 min ⁻¹	130 kW (177 hp metric) / 3392 min ⁻¹	114 kW (155 hp metric) / 3392 min ⁻¹	100 kW (136 hp metric) / 3392 min ⁻¹
Fuel stop power	Output at crankshaft/ engine speed	184 kW (250 hp metric) / 3800 min ⁻¹ *	169 kW (230 hp metric) / 3800 min ⁻¹ *	143 kW (195 hp metric) / 3500 min ⁻¹ *	125 kW (170 hp metric) / 3500 min ⁻¹ *	110 kW (150 hp metric) / 3500 min ⁻¹ *
Installation		Flexible mounting				
Fuel Injection Timing		Variable timing (Electronic control)				
Fuel Injection Pressure		Variable pressure (Maximum injection pressure: 220 MPa)				
Direction of Rotation	Crankshaft	Counterclockwise viewed from flywheel side				
Cooling System		Coolant cooling with heat exchanger				
Lubrication System		Forced lubrication system				
Cooling Water Capacity (coolant)		Engine 10.0 L (10.6 qt), Reservoir: 0.8 L (0.85 qt)				
Lubricating Oil Capacity (engine)	Total**	8.5 L (8.98 qt)				
	Effective***	2.5 L (2.64 qt)				
Starting System	Type	Electric				
	Starting motor	DC 12 V - 2.0 kW				
	AC generator	12 V - 130 A				
Engine model		4LV			4LVZ	
Marine gear or Stern drive		Bobtail	Marine gear		Stern drive	
			KMH50A	KMH50V	ZT370	
Engine Dimension	Overall length	921 mm (36.3 in.)	1151 mm (45.3 in.)	1152 mm (45.4 in.)	1028.5 mm (40.5 in.)	
	Overall width	761 mm (30.0 in.)	761 mm (30.0 in.)	832 mm (32.8 in.)	795 mm (31.3 in.)	
	Overall height	772 mm (30.4 in.)	772 mm (30.4 in.)	858 mm (33.8 in.)	810 mm (31.9 in.)	
Engine Dry Mass (including marine gear)		334 kg (736 lb)	388 kg (855 lb)	441 kg (906 lb)	334 kg (736 lb)	

*. Rating Condition: Temperature of fuel; 40 °C at fuel pump inlet; ISO 8665

**. The “total” oil quantity includes oil in oil pan, channels, coolers and filter.

***. The effective amount of oil shows the difference in maximum scale of the dipstick and minimum scale.

Note:

- Density of fuel: 0.835 to 0.845 g/cm³ at 15 °C. Fuel temperature at the inlet of the fuel supply pump.
- 1 hp metric = 0.7355 kW

4LV Marine Gear

Marine Gear Model	KMH50A					KMH50V				
Engine Model	4LV250	4LV230	4LV195	4LV170	4LV150	4LV250	4LV230	4LV195	4LV170	4LV150
Direction of Rotation Propeller shaft (ahead) viewed from stern	Clockwise (Recommendation) or counterclockwise					Counterclockwise (Recommendation) or clockwise				
Type	Hydraulically actuated multiple disk clutch					Hydraulically actuated multiple disk clutch				
Reduction Ratio (forward/reverse)	1.67 / 1.67 2.13 / 2.13 2.43 / 2.43					1.22 / 1.22 1.58 / 1.58 2.08 / 2.08 2.47 / 2.47				
Propeller Speed (forward/reverse)*	2210 / 2210 min ⁻¹ 1729 / 1729 min ⁻¹ 1517 / 1517 min ⁻¹		2035 / 2035 min ⁻¹ 1592 / 1592 min ⁻¹ 1397 / 1397 min ⁻¹			3007 / 3007 min ⁻¹ 2324 / 2324 min ⁻¹ 1772 / 1772 min ⁻¹ 1490 / 1490 min ⁻¹		2770 / 2770 min ⁻¹ 2140 / 2140 min ⁻¹ 1632 / 1632 min ⁻¹ 1372 / 1372 min ⁻¹		
Lubrication System	Forced lubrication system					Forced lubrication system				
Lubricating Oil Capacity (total)	2.0 L (2.11 qt)					5.4 L (5.71 qt)				
Lubricating Oil Capacity (effective)	0.4 L (0.42 qt)					0.4 L (0.42 qt)				
Cooling System	Seawater cooling					Seawater cooling				
Weight	54 kg (119 lb)					77 kg (170 lb)				

* At continuous power engine speed: 4LV250, 4LV230 3683 min⁻¹
4LV195, 4LV170, 4LV150 3392 min⁻¹

SPECIFICATIONS

4LVZ Stern Drive





Stern-Drive Model		ZT370				
Engine Model		4LV250Z	4LV230Z	4LV195Z	4LV170Z	4LV150Z
Reduction Ratio		1.65				
		1.78				
		1.97				
		—		2.18		
Direction of Rotation (view from stern)	Input	Counter-clockwise viewed from stern				
	Front Propeller	Counter-clockwise viewed from stern				
	Rear Propeller	Clockwise viewed from stern				
Dimension	Steering Angle	2 × 30 degrees				
	Tilt Angle	51 degrees				
	Trim Zone	-6 to 10 degrees				
Propeller		Counter Rotating Double Propeller				
		Allowable propeller diameter: Max. 406.4 mm (16 in.)				
Oil	Stern-Drive Unit	QuickSilver®*1 High Performance Gear Lube		QuickSilver®*1 High Performance Gear Lube or GL-5 (SAE 80W90)		
	Power Steering System	QuickSilver® Power Trim and Steering Fluid or Dexlone-III				
	Tilt / Trim System	QuickSilver® Power Trim and Steering Fluid or Dexlone-III				
Lubrication System		Forced lubrication system				
Lubricating Oil Capacity (total)		2.5 L (2.64 qt)				
Cooling System		Seawater cooling				
Clutch System		Hydraulic multi-friction disc type with hydraulic pump				
Shift Type		Electrical shift with solenoid				
Power Steering System		Mechanical cable operated hydraulic power assist				
Tilt / Trim System		Electric motor drive hydraulic power operation				
Anti-Corrosion System	Y-CaPS	Electronic control cathodic protection				
Mass (Weight)	Dry Condition	100 kg (220.5 lb)				

Note: For engine / stern-drive performance, electrical, outline, piping diagrams and related information, see the engine-specific section of Installation Manual and/or the Service Manual.

**1: QuickSilver is a registered trademark of Brunswick® Corporation.*

SYSTEM DIAGRAMS

PIPING DIAGRAMS

Notation	Description
	Screw Joint (Union)
	Flange Joint
	Eye Joint
	Insertion Joint

Note:

- *Dimension of steel pipe: outer diameter*
- *Dimension of rubber pipe: inner diameter*
- *Fuel rubber pipes (marked*) satisfy EN/ISO7840.*

4LV Engine
Lubricating System

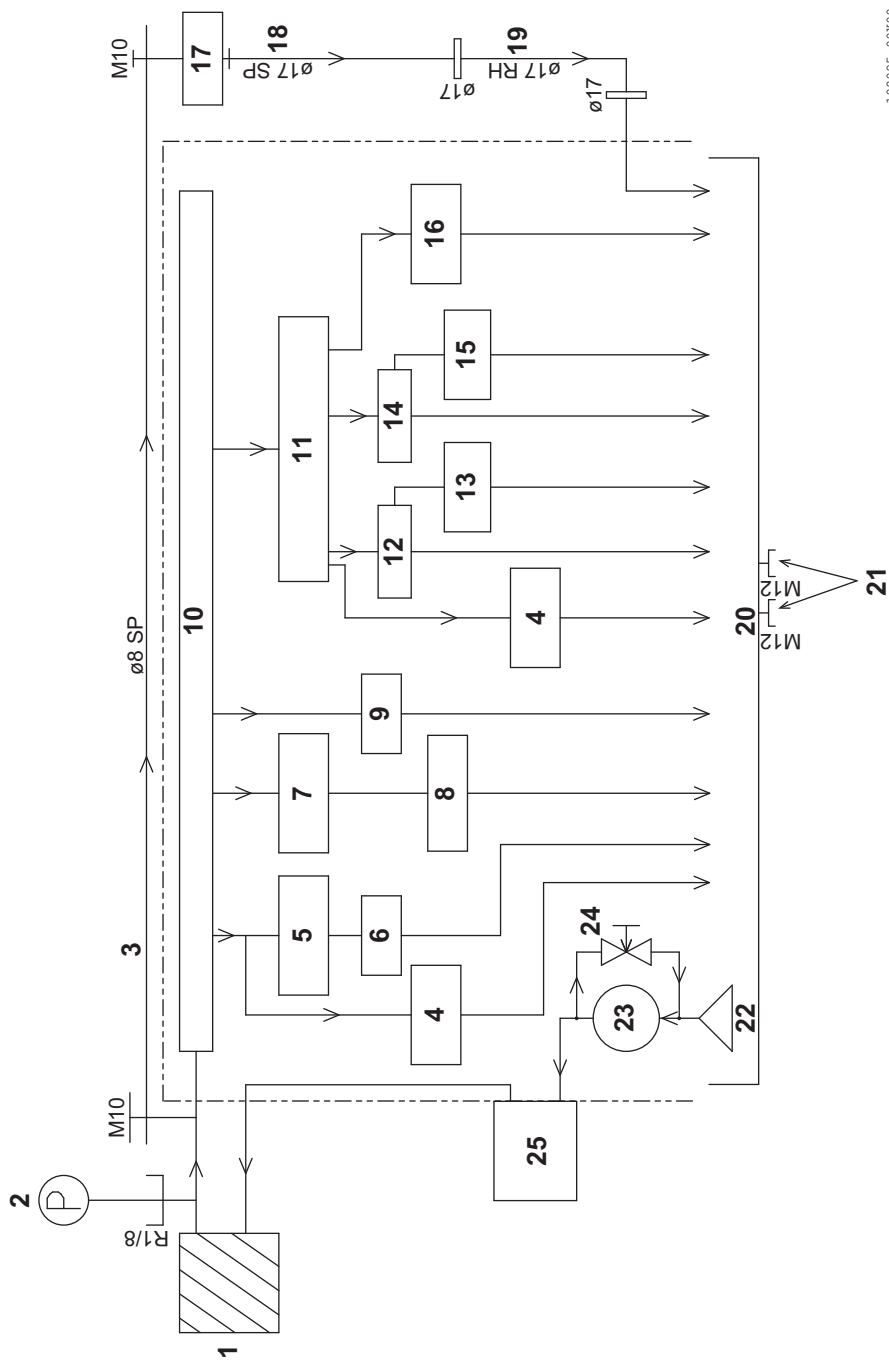


Figure 1

- 1 – Lubricating oil filter
(cartridge type)**
- 2 – Oil pressure sensor**
- 3 – ø8 Steel pipe**
- 4 – No. 1 Chain tensioner**
- 5 – Main bearing No. 1**
- 6 – Lubricating oil jet for chain
train**
- 7 – Main bearing No. 2 - No. 5**
- 8 – Connecting rod**
- 9 – Piston cooling oil jet**
- 10 – Lubricating oil main gallery**
- 11 – Cylinder head**
- 12 – Intake camshaft**
- 13 – Intake lash adjuster**
- 14 – Exhaust camshaft**
- 15 – Exhaust lash adjuster**
- 16 – No. 2 Chain tensioner**
- 17 – Turbo charger**
- 18 – ø17 Steel pipe**
- 19 – ø17 Rubber hose**
- 20 – Oil pan**
- 21 – Drain plug**
- 22 – Lubricating oil inlet strainer**
- 23 – Lubricating oil pump**
- 24 – Pressure control valve (Engine)**
- 25 – Lubricating oil cooler**

4LV Engine with KMH50A, KMH50V Marine Gear
Cooling System

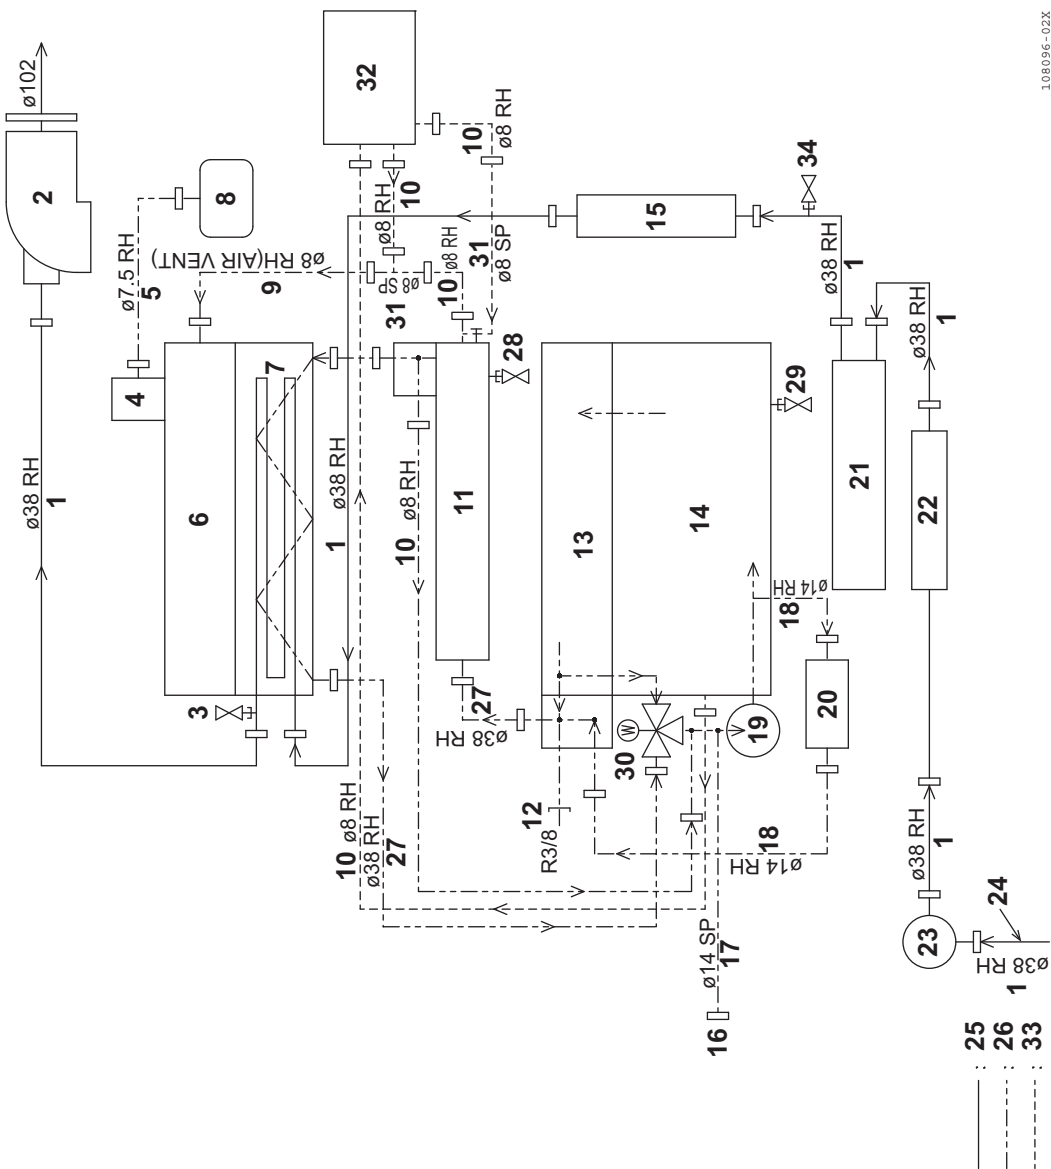


Figure 2

- 1 – ø38 Rubber hose
- 2 – Mixing elbow
- 3 – Seawater drain cock
(Heat exchanger)
- 4 – Coolant filler cap
(Relief pressure 0.09 MPa)
- 5 – ø7.5 Rubber hose
- 6 – Coolant Expansion Tank
(Coolant tank)
- 7 – Heat exchanger
- 8 – Reservoir
- 9 – ø8 Rubber hose (Air vent)
- 10 – ø8 Rubber hose
- 11 – Exhaust manifold
- 12 – Hot water connection outlet
- 13 – Cylinder head
- 14 – Cylinder block
- 15 – Marine gear lubricating oil
cooler
- 16 – Hot water connection return
- 17 – ø14 Steel pipe
- 18 – ø14 Rubber hose
- 19 – Cooling water pump (coolant)
- 20 – Lubricating oil cooler
- 21 – Air cooler
- 22 – Fuel Cooler
- 23 – Cooling water pump (seawater)
- 24 – Seawater inlet
- 25 – Cooling seawater piping
- 26 – Coolant piping
- 27 – ø38 Rubber hose
- 28 – Coolant drain cock
(Coolant tank)
- 29 – Coolant drain cock
(Cylinder block)
- 30 – Thermostat
- 31 – ø8 Steel pipe
- 32 – Turbocharger cover
(4LV250, 4LV230 only)
- 33 – Coolant piping
(4LV250, 4LV230 only)
- 34 – Seawater drain plug
(Air cooler/Coolant cooler)

4LVZ Engine with ZT370 Stern Drive
Cooling System

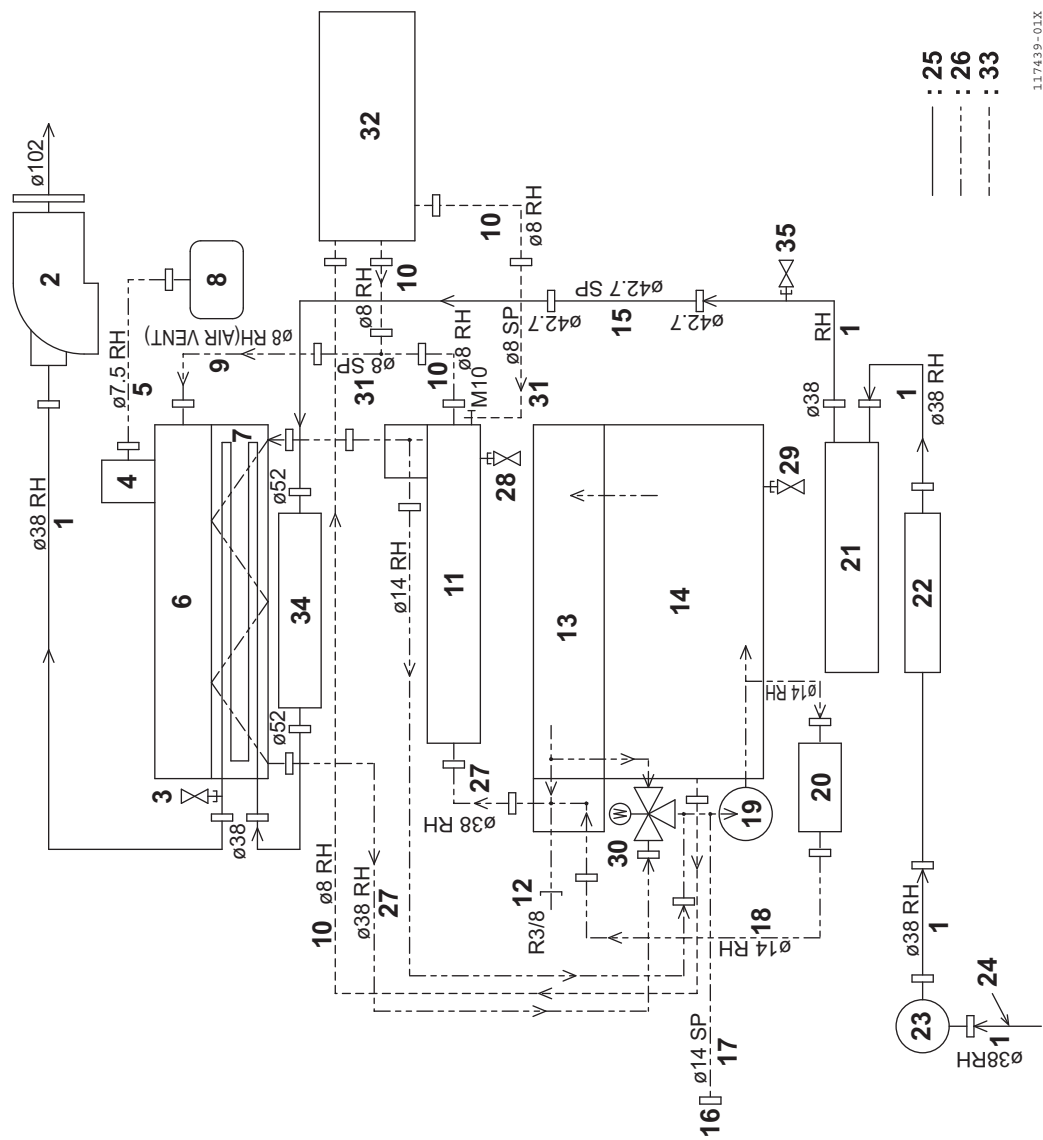


Figure 3

- 1 – ø38 Rubber hose
- 2 – Mixing elbow
- 3 – Seawater drain cock
(Heat exchanger)
- 4 – Coolant filler cap
(Relief pressure 0.09 MPa)
- 5 – ø7.5 Rubber hose
- 6 – Coolant Expansion Tank
(Coolant tank)
- 7 – Heat exchanger
- 8 – Reservoir
- 9 – ø8 Rubber hose (Air vent)
- 10 – ø8 Rubber hose
- 11 – Exhaust manifold
- 12 – Hot water connection outlet
- 13 – Cylinder head
- 14 – Cylinder block
- 15 – ø42.7 Steel pipe (SUS 316L)
- 16 – Hot water connection return
- 17 – ø14 Steel pipe
- 18 – ø14 Rubber hose
- 19 – Cooling water pump (coolant)
- 20 – Lubricating oil cooler
- 21 – Air cooler
- 22 – Fuel Cooler
- 23 – Cooling water pump (seawater)
- 24 – Seawater inlet
- 25 – Cooling seawater piping
- 26 – Coolant piping
- 27 – ø38 Rubber hose
- 28 – Coolant drain cock
(Coolant tank)
- 29 – Coolant drain cock
(Cylinder block)
- 30 – Thermostat
- 31 – ø8 Steel pipe
- 32 – Turbocharger cover
(4LV250Z, 4LV230Z only)
- 33 – Coolant piping
(4LV250Z, 4LV230Z only)
- 34 – Power steering oil cooler
(4LVZ only)
- 35 – Seawater drain plug
(Air cooler/Coolant cooler)

Fuel System

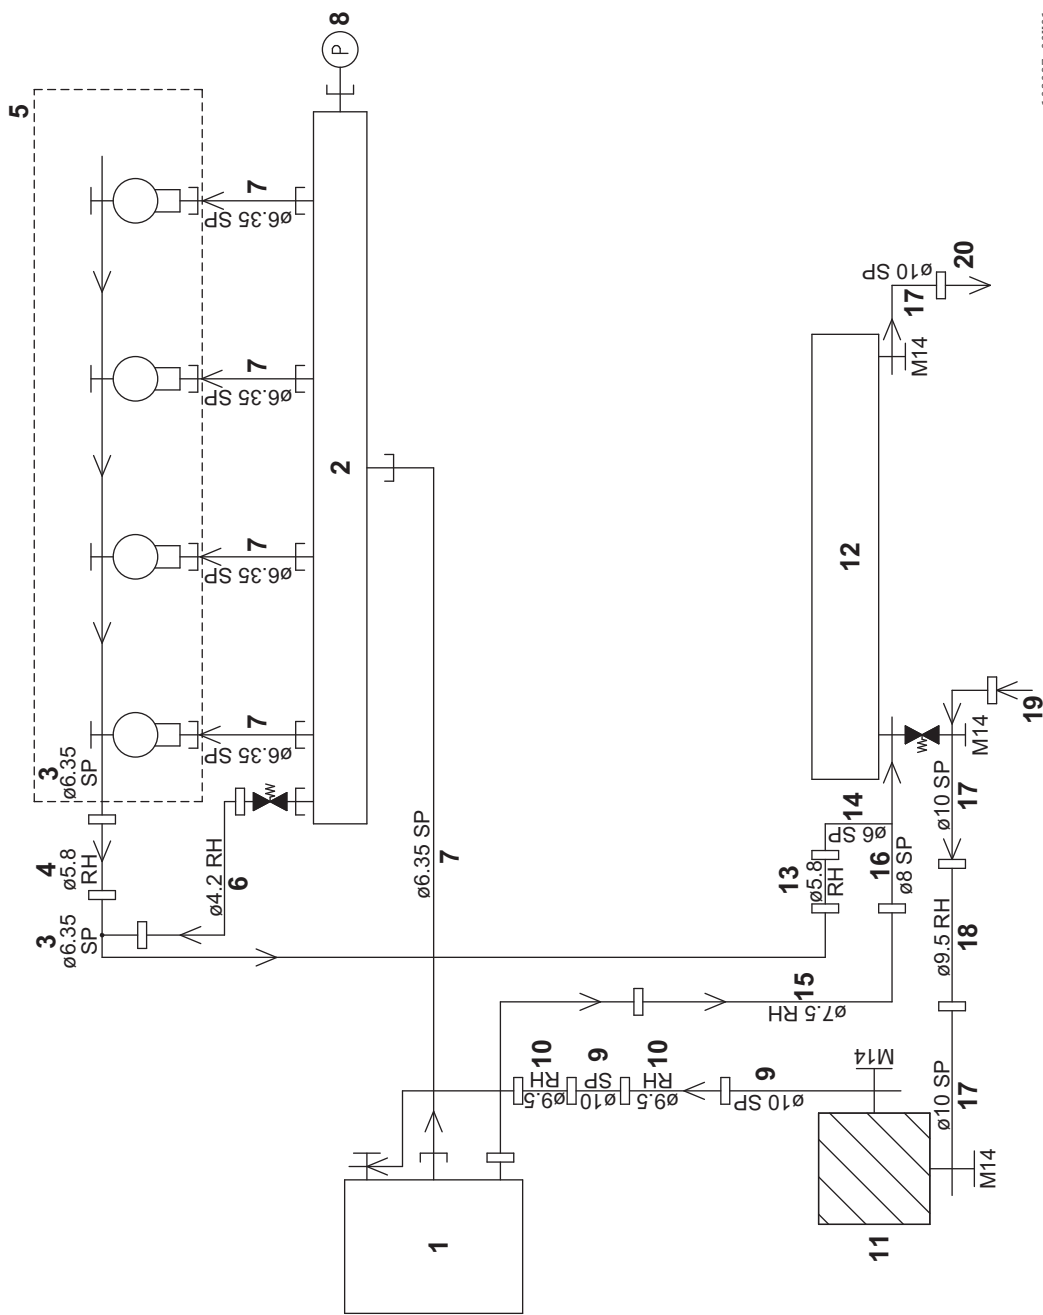


Figure 4

108097-00X01

- 1 – Fuel supply pump
- 2 – Common rail
- 3 – ø6.35 Steel pipe
- 4 – ø5.8 Rubber hose
- 5 – Rocker Arm Cover
- 6 – ø4.2 Rubber hose
- 7 – ø6.35 Steel pipe
- 8 – Rail pressure sensor
- 9 – ø10 Steel pipe
- 10 – ø9.5 Rubber hose
- 11 – Fuel filter (cartridge type)
- 12 – Fuel Cooler
- 13 – ø5.8 Rubber hose
- 14 – ø6 Steel pipe
- 15 – ø7.5 Rubber hose
- 16 – ø8 Steel pipe
- 17 – ø10 Steel pipe
- 18 – ø9.5 Rubber hose
- 19 – Fuel inlet
- 20 – Fuel overflow

Power Steering System

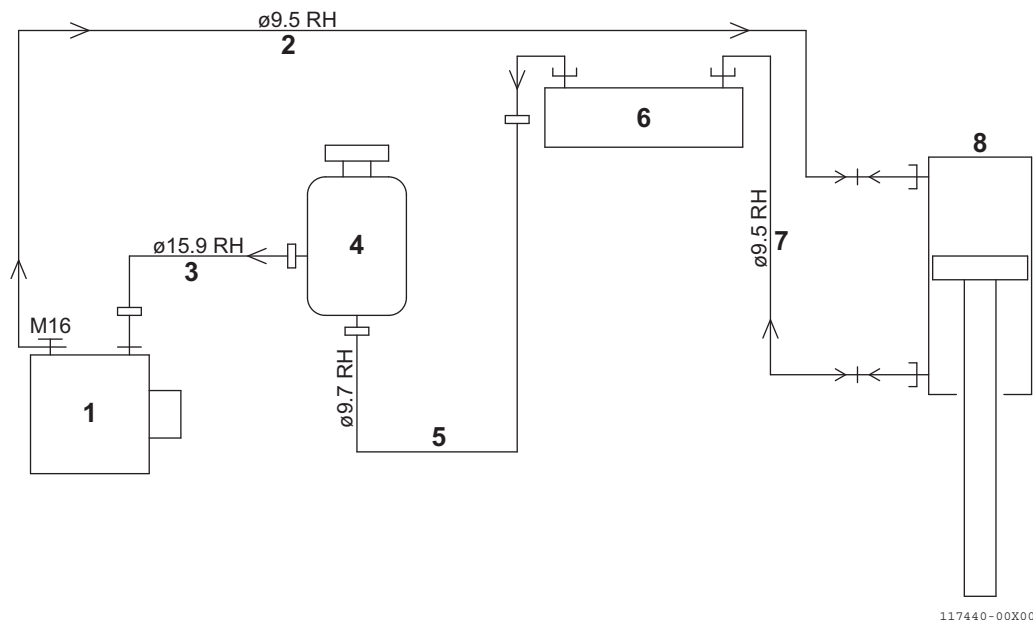


Figure 5

- 1 – Power steering oil pump
- 2 – $\varnothing 9.5$ Rubber hose
- 3 – $\varnothing 15.9$ Rubber hose
- 4 – Power steering oil tank
- 5 – $\varnothing 9.7$ Rubber hose
- 6 – Power steering oil cooler
- 7 – $\varnothing 9.5$ Rubber hose
- 8 – Power steering cylinder unit

EPA WARRANTY USA ONLY

YANMAR POWER TECHNOLOGY CO., LTD. LIMITED EMISSION CONTROL SYSTEM WARRANTY - USA ONLY

EPA Emission Control Label for 4LV150(Z), 4LV170(Z), 4LV195(Z)

EMISSION CONTROL INFORMATION
THIS MARINE ENGINE COMPLIES WITH U.S. EPA REGULATIONS FOR 2022 ULTRA LOW SULFUR DIESEL FUEL ONLY.
ENGINE FAMILY : NYDXN02.8E4H ENGINE MODEL : 4LV150
STANDARDS NOx+HC : 5.8g/kW-hr CO : 5.0g/kW-hr PM : 0.15g/kW-hr
APPLICATION : VARIABLE-SPEED PROPULSION ENGINES USED WITH FIXED-PITCH PROPELLERS.
EMISSION CONTROL SYSTEM : ECM EM DFI TC CAC
REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.
YANMAR YANMAR POWER TECHNOLOGY CO.,LTD.

120672-07513-N

Figure 1

Part Number	Engine Model
120672-07513	4LV150
120672-07523	4LV170
120672-07533	4LV195
120674-07513	4LV150Z
120674-07523	4LV170Z
120674-07533	4LV195Z

EPA Emission Control Label for 4LV230(Z), 4LV250(Z)

EMISSION CONTROL INFORMATION
THIS MARINE ENGINE COMPLIES WITH U.S. EPA REGULATIONS FOR 2022 ULTRA LOW SULFUR DIESEL FUEL ONLY.
ENGINE FAMILY : NYDXN02.8D4H ENGINE MODEL : 4LV230
STANDARDS NOx+HC : 5.8g/kW-hr CO : 5.0g/kW-hr PM : 0.15g/kW-hr
APPLICATION : VARIABLE-SPEED PROPULSION ENGINES USED WITH FIXED-PITCH PROPELLERS.
EMISSION CONTROL SYSTEM : ECM EM DFI TC CAC
REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.
YANMAR YANMAR POWER TECHNOLOGY CO.,LTD.

120673-07513-N

Figure 2

Part Number	Engine Model
120673-07513	4LV230
120673-07523	4LV250
120674-07543	4LV230Z
120674-07553	4LV250Z

EPA WARRANTY USA ONLY

THIS EMISSION WARRANTY APPLIES TO THE ENGINES CERTIFIED TO UNITED STATES EPA 40 CFR Part 1042 AND SOLD BY YANMAR THAT ARE INSTALLED IN VESSELS FLAGGED OR REGISTERED IN THE UNITED STATES.

Your Warranty Rights and Obligations:

YANMAR warrants to the first user and each subsequent purchaser the emission control system on your engine for periods of time listed below provided the engine has been installed according to YANMAR installation requirements and there has been no abuse, neglect, or improper maintenance of your YANMAR Marine engine.

YANMAR warrants that the engine is designed, built and tested using genuine parts and equipped so as to conform to all applicable emission requirements of the U.S. Environmental Protection Agency and is free from defects in material and workmanship which would cause this engine to fail to conform to the applicable emission regulations over its limited emission control system warranty period.

Where a warrantable emissions condition exists, YANMAR will repair your engine at no charge to you for diagnosis, parts, and labor. Warranty service or repair will be provided at authorized YANMAR Marine dealers or distributors.

It is recommended that any replacement parts used for maintenance, repair or replacement of emission control systems are YANMAR parts. The owner may elect to have maintenance, replacement or repair of the emission control components and systems performed by any repair establishment or individual and may elect to use parts other than YANMAR parts for such maintenance, replacement or repair. However, the cost of such service or parts and subsequent failures from such service or parts will not be covered under this emission control system warranty:

Warranty Period:

The warranty starts on either the date of delivery to the first end-user, or the date the unit is first leased, rented, or loaned.

The warranty period is **five (5) years** or **1000 hours** of use, whichever occurs first. In the absence of a device to measure hours of use, the engine has a warranty period of **five (5) years**.

Warranty Coverage:

YANMAR recommends that repair or replacement of any warranted parts be performed at an authorized YANMAR dealer or distributor. This limited emission control system warranty covers engine components that are a part of the emission control system of the engine as delivered by YANMAR to the original retail purchaser. Such components may include the following:

- Fuel Injection System
- Intake Manifold
- Exhaust Manifold
- Turbocharger System
- After cooler
- Electronic Engine Control Units and its associated Sensor and Actuators

Exclusions:

Failures other than those arising from defects in material and/or workmanship are not covered by this limited emissions warranty. This warranty does not extend to the following: malfunction caused by abuse, misuse, improper adjustment, modification, alteration, tampering, disconnection, improper or inadequate maintenance, improper storage or use of non-recommended fuels and lubricating oils, accident-caused damage, and replacement of expendable and/or consumable items made in connection with scheduled maintenance.

YANMAR disclaims any responsibility for incidental or consequential damages such as loss of time, inconvenience, loss of use of marine vessel / engine or commercial loss.

Owner's Responsibility:

As the YANMAR Marine engine owner, you are responsible for the performance of the required maintenance listed in your *Operation Manual*. YANMAR recommends that you retain all documentation, including receipts, covering maintenance on your marine engine, but YANMAR cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

Your engine is designed to operate on diesel fuel only. Use of any other fuel may result in your engine no longer operating in compliance with applicable emission requirements. You are responsible for initiating the warranty process. You are responsible for presenting your marine engine to an authorized YANMAR dealer or distributor as soon as a problem exists.

Customer Assistance:

If you have any questions regarding your warranty rights and responsibilities or would like information on the nearest authorized YANMAR dealer or distributor, you should consult YANMAR America Corporation for assistance.

Yanmar America Corporation

Toll free telephone:

1-855-416-7091 or 1-800-872-2867

E-mail: CS_support@yanmar.com

Website: us.yanmar.com

[illegible]

[illegible]

Declaration of Conformity for Recreational Craft Propulsion Engines (inboard engines) with the requirements of Directive 2013/53/EU

(To be completed by manufacturer or, if mandated, authorised representative)

Name of engine manufacturer: Yanmar Power Technology Co., Ltd. Tsukaguchi Factory

Address: 5-3-1 Tsukaguchi-honmachi Amagasaki, Hyogo

Town: _____ Post Code: 661-0001 Country: Japan

Name of Authorised Representative: Yanmar Marine International B.V.

Address: Brugplein 11

Town: Almere Post Code: 1332 BS Country: the Netherlands

Name of Notified Body for exhaust emission assessment: DNV SE

Address: Brooktorkai 18

Town: Hamburg Post Code: 20457 Country: Germany ID Number: 0098

Conformity assessment module used for exhaust emissions: ☐ B+C/C1 ☒ B+D ☐ B+E ☐ B+F ☐ G ☐ H
or engine type-approved according to: ☐ Directive 97/68/EC ☐ EC Regulation No 595/2009

Other Community Directives applied: 2014/30/EU

DESCRIPTION OF ENGINE TYPE(S)

Main Propulsion ExhaustType:

- ☐ With integral exhaust
☒ Without integral exhaust

Combustion Type:

- ☒ Internal combustion, Diesel (CI)
☐ Internal combustion, Petrol (SI)
☐ Other

Combustion cycle:

- ☐ 2 stroke
☒ 4 stroke


IDENTIFICATION OF ENGINE(S) COVERED BY THIS DECLARATION OF CONFORMITY

Name of engine model or engine family:	Unique engine identification number(s) or engine family code(s)	EC Type-examination certificate or type-approval certificate number
Engine family: RCD2-8LVX1 Engine models: 8LV370, 8LV350, 8LV320		RCDB00000BS
Engine family: RCD2-6LY44X1 Engine models: 6LY440, 6LY400		RCDB00000BR
Engine family: RCD2-4LVX1 Engine models: 4LV250, 4LV230, 4LV195, 4LV170, 4LV150		RCDB00000BN

This declaration of conformity is issued under the sole responsibility of the manufacturer. I declare on behalf of the manufacturer that the recreational craft propulsion engine(s) mentioned above fulfil(s) the requirements specified in Article 4 (1) and Annex I of Directive 2013/53/EU.

Name / function: Hiroaki Miyazaki

(identification of the person empowered to sign on behalf of the engine manufacturer or his authorised representative)

Signature and title: 

(or an equivalent marking)

Divisional Manager
Yanmar Power Technology Co., Ltd.

Date and place of issue: (yy/mm/dd) 25/07/01, Nagahama, Shiga, Japan

Essential requirements (reference to relevant articles in Annex IB & IC of the Directive)	Harmonised standards Full Application	Harmonised standards Partial application, see tech. file	Other reference documents ¹ Full Application	Other reference documents Partial Application, see tech. file	Other proof of conformity See technical file	Specify the harmonised ² standards or other reference documents used (with year of publication like "EN ISO 8666:2002")
	<u>Tick only one box per line</u>					<u>All lines right of ticked boxes must be filled in</u>
Annex I.A - Design and Construction of products						
Inboard Engine (Annex I A. 5.1.1)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Ventilation (Annex I A.5.1.2)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Exposed parts (Annex I A.5.1.3)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Fuel system - General (Annex I A.5.2.1)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Electrical System (Annex I A.5.3)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Steering System (Annex I A.5.4)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Fire protection - General (Annex I A.5.6.1)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Discharge prevention (Annex I A.5.8)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Annex I.B – Exhaust Emissions						
Propulsion Engine Identification (Annex I B.1)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Exhaust Emission Requirements (Annex I B. 2)	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	EN ISO 18854: 2015
Durability (Annex I B.3)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Owner's manual (Annex I B.4)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Annex I.C – Noise Emissions	See Declaration of Conformity of the recreational craft in which the engine(s) has (have) been installed					

¹ Such as non-harmonised standards, rules, regulations, guidelines, etc.

² Standards published in EU Official Journal

Essential requirements (reference to relevant articles in Annex IB & IC of the Directive)	Harmonised standards Full Application	Harmonised standards Partial application, see tech. file	Other reference documents ¹ Full Application	Other reference documents Partial Application, see tech. file	Other proof of conformity See technical file	Specify the harmonised ² standards or other reference documents used (with year of publication like "EN ISO 8666:2002")
	<u>Tick only one box per line</u>					<u>All lines right of ticked boxes must be filled in</u>
Annex I.A - Design and Construction of products						
Handling Characteristics (Annex I A.4)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Inboard Engine (Annex I A. 5.1.1)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Ventilation (Annex I A.5.1.2)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Exposed parts (Annex I A.5.1.3)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Outboard propulsion engine starting (Annex I A.5.1.4)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Tiller-controlled outboard propulsion engines (Annex I A.5.1.6)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Fuel system - General (Annex I A.5.2.1)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Electrical System (Annex I A.5.3)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Steering System (Annex I A.5.4)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Fire protection - General (Annex I A.5.6.1)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Discharge prevention (Annex I A.5.8)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Annex I.B – Exhaust Emissions						
Propulsion Engine Identification (Annex I B.1)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Exhaust Emission Requirements (Annex I B.2)	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	EN ISO 18854: 2015
Durability (Annex I B.3)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Owner's manual (Annex I B.4)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Annex I.C – Noise Emissions						
Noise Emissions Level (Annex I.C.1)	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	EN ISO 14509-1: 2008
Owner's Manual (Annex I.C.2)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Durability (Annex I.C.3)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

¹ Such as non-harmonised standards, rules, regulations, guidelines, etc.

² Standards published in EU Official Journal

This Page Intentionally Left Blank

YANMAR MARINE INTERNATIONAL B.V.

■ Yanmar Marine International B.V.

Brugplein 11, 1332 BS Almere-de Vaart, Netherlands

Phone: +31-36-5493534 Fax: +31-36-5493219

<https://www.yanmar.com/marine>

e-mail: aftersales@yanmar-marine.com

Overseas Office

■ Yanmar Marine International Asia Co., Ltd.

5-3-1, Tsukaguchi Honmachi, Amagasaki, Hyogo 661-0001, Japan

Phone: +81-6-6428-3131 Fax: +81-6-6421-2201

<https://www.yanmar.com/marine>

■ Yanmar Asia (Singapore) Corporation Pte. Ltd. (YASC)

4 Tuas Lane, Singapore 638613

Phone: +65-6861-3855 Fax: +65-6862-5189

<https://www.yanmar.com/sg/>

■ YANMAR Marine International Americas Division

5400 118th Avenue N., Clearwater, FL 33760, USA

Phone: +1-727-803-6565 Fax: +1-727-527-7013

<https://www.yanmar.com/marine>

■ Yanmar Engine (Shanghai) Co., Ltd.

Room 1101-1106, No.757 Mengzi Road,

Huangpu District, Shanghai 200023 PRC

Phone: +86-21-2312-0638 Fax: +86-21-6880-8090

<https://www.yanmar.com/cn/>

As of September 1st, 2025

OPERATION MANUAL

4LV150, 4LV170, 4LV195, 4LV230, 4LV250,
4LV150Z, 4LV170Z, 4LV195Z, 4LV230Z, 4LV250Z

1st edition: August 2017

8th edition: October 2021

9th edition: January 2023

10th edition: May 2024

11th edition: October 2025

Issued by: YANMAR MARINE INTERNATIONAL B.V.

Edited by: YANMAR GLOBAL CS CO., LTD.



YANMAR MARINE INTERNATIONAL B.V.

<https://www.yanmar.com/marine>

0A4LV-EN001A
Oct.2025-0