


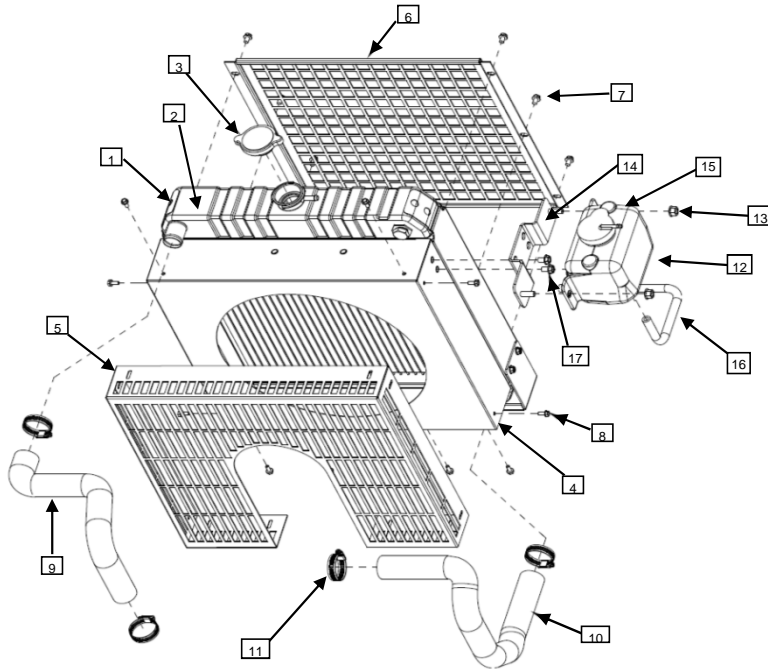

YANMAR CO., LTD.  
YANMAR AMERICA CORP.

Item	Lev.	O	Part No.	Description	Quantity	Remarks
1	-		119749-44500	Radiator Assembly	1	
2	-	X	119749-44510	Radiator Core	1	
3	-		129987-44570	Radiator Cap	1	
4	-		119749-44550	Fan Shroud, 330mm	1	
5	-		119749-44580	Fan Guard	1	
6	-		129689-44530	Core Guard	1	
7	-		129689-44970	Bolt, 1/4 X 20 - 3/8 (Slotted washer hex head)	6	
8	-		129689-44990	Bolt, M5 X 0.8 - 12 (Flanged hex head)	10	
9	-		119749-49010	Hose, Top Tank Radiator	1	
10	-		119749-49070	Hose, Bottom Tank Radiator	1	
11	-		129689-44070	Clamp, Hose 21-44 mm OD	4	
12	-		129689-44000	1-Liter Overflow Bottle Assembly	1	
13	-	X	129989-44040	Nut, Lock M8 X 1.25 (Flange hex head)	2	
14	-	X	129689-44110	Bracket, Overflow, 1L	1	
15	-	X	129689-44120	Bottle, Overflow, 1L	1	
16	-		129987-44610	Hose, Overflow 9/32 ID (7mm)	1	
17	-		26106-080122	Bolt, M8 X 1.25 - 12 (Washer hex head)	4	



**MODELS**

2TNV70

3TNV70

Remarks:



---

---

## Installation Instructions

---

---

Hand tighten all bolts and nuts until assembly is completed, then torque according to specifications in Table 1. The numbers in () represent the item numbers.

WARNING: DO NOT RUN ENGINE WITHOUT COOLANT IN RADIATOR.

1. Remove Fan Guard (5) from Radiator Assembly and place it around the cooling fan on the engine. Depending on the engine model, the cooling fan may need to be loosened to place the Fan Guard.
2. Install Radiator (1) to the Radiator Mounting Kit using 1/2 X 13 - 2 1/2" bolts and 0.5 X 2.0 X 0.125" washers provided with the Radiator Mounting Kit.
3. Mount Fan Guard (5) to the Radiator (1) using M5 X 0.8 - 12mm bolts (8).
4. Using Upper Support and M8 X 1.25 - 16mm bolts from Radiator Mounting Kit, fasten the Radiator (1) to the Upper Mount from the Radiator Mounting Kit.
5. Attach the Top Radiator Hose (9) to the inlet of Radiator (1) and the top of the water pump with Hose Clamps (11). Attach the Bottom Radiator Hose (10) to the outlet of Radiator and the inlet of water pump with Hose Clamps (11).
6. Adjust the Radiator Assembly and support assembly to align the center of the cooling fan with the center of the Radiator (1). Tighten the Radiator Mounting Kit bolts.
7. Mount Overflow Bottle Assembly (12) to the side of the Radiator (1) using M8 X 1.25 - 12mm bolts (17). Attach the Overflow Hose (16) to the bottom of the overflow bottle and the top of Radiator using hose clamps included with the Overflow Bottle Assembly.
8. Tighten all remaining bolts and nuts according to specification in Table 1.
9. Install Core Guard (4) to the Radiator (1) using the provided 1/4 X 20 - 3/8" bolts (7). Tight to specification provided.
10. Using decals included with overflow bottle, place the LOW sticker on the overflow bottle, second indentation to the bottom. Place the HIGH sticker on the top indentation.
11. Add antifreeze, using a 50:50 mixture, into the Radiator. After running the engine for a few minutes, add more antifreeze mixture if necessary.

NOTE: Comply with torque standards in the table to avoid unexpected damage during installation or in the future.

TABLE 1:

Diameter x Pitch	Kgf-m	Foot-lbf	N-m
1/4 X 20	0.9 ~ 1.1	6.3 ~ 8.3	8.5 ~ 11.3
M5 X 0.8	0.7 ~ 0.9	4.8 ~ 6.3	6.5 ~ 8.5
M8 X 1.25	1.5 ~ 2.9	10.6 ~ 20.9	14.4 ~ 28.3
1/2 X 13	7.9 ~ 10.1	57 ~ 73	77.3 ~ 98.9